



Display Freezers

Models PT-CN-0054C, PT-CN-0071C, PT-CN-0054R,
PT-CN-0071R

Items 49184, 49185, 49186, 49187

Instruction Manual



Revised - 08/11/2026

QPS
APPROVED
APPROUVÉ

Toll Free: 1-800-465-0234
Fax: 905-607-0234
Email: service@omcan.com
www.omcan.com



Table of Contents

Models PT-CN-0054C, PT-CN-0071C, PT-CN-0054R, PT-CN-0071R

Section	Page
General Information -----	3 - 4
Safety and Warranty -----	4 - 5
Technical Specifications -----	6
Technical Drawing -----	7
Installation -----	8
Operation -----	8
Maintenance -----	9
Troubleshooting -----	9
Parts Breakdown -----	10
Electrical Diagram -----	11
Notes -----	12 - 18
Warranty Registration -----	19

General Information

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.

Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

Omcan Fabrication et distribution Compagnie Limitée et Food Machinery d'Amérique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, sain d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité appropriés. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bond de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiés ou cueillis par un tiers transporteur.

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les

General Information

consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurarse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre lea y familiarizarse con todas las instrucciones de funcionamiento y seguridad.

Omcan le gustaría darle las gracias por la compra de esta máquina. Es de la mayor importancia para salvar estas instrucciones para futuras consultas. Además, guarda la caja original y el embalaje para el envío del equipo si servicio técnico o devolución de la máquina que se requiere.

Safety and Warranty

SAFETY TIPS:

- Position on a flat and stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required, do not remove any components or service panels on this product.
- Consult Local and National Standards to comply with the following:
 - * Health and Safety at Work Legislation
 - * BS EN Codes
 - * Fire Precautions
 - * IEE Wiring Regulations
 - * Building Regulations

Safety and Warranty

- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT use the appliance outside.
- DO NOT use this appliance to store medical supplies.
- DO NOT use electrical appliances inside this product (e.g. heaters, ice-cream makers etc.)
- DO NOT allow oil or fat to encounter plastic components or door seal. Clean immediately if contact occurs.
- DO NOT place more than 30kg load on each shelf.
- Bottles which contain a high percentage of alcohol must be sealed and placed vertically in the appliance.
- Always carry, store and handle the appliance in a vertical position and move by holding the base of the appliance.
- Always switch off and disconnect the power supply to the unit before cleaning.
- Keep all packaging away from children. Dispose of the packaging in accordance with the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an agent or a recommended qualified technician to avoid hazards.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance can be used by children aged 8 years and above and people with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision. Instructions concerning persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge playing with the appliance are not required.

WARNING

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the appliance circuit.

PLEASE TAKE A FEW MOMENTS TO CAREFULLY READ THROUGH THIS MANUAL, CORRECT MAINTENANCE AND OPERATION OF THIS MACHINE WILL PROVIDE THE BEST POSSIBLE PERFORMANCE FROM YOUR PRODUCT.

Operation

To get the best results from your appliance, follow these instructions:

- Only store foodstuffs in the appliance when it had reached the correct operating temperature.
- Do not place uncovered hot food or liquid inside the appliance.
- Wrap or cover food where possible.
- Do not obstruct the fans where possible
- Do not obstruct the fans inside the appliance.
- Avoid opening the doors for prolonged periods of time.
- Foodstuffs should be 30cm away from the back of the appliance.
- Do not place constituents of foods (e.g. acid, alkali or salt) inside the appliance.

Turn on:

1. Close the door(s) of the appliance.
2. Ensure the power switch is set to [ON] and turn on at the socket.
3. Switch on the Power [I]. the current temperature within the appliance is displayed.

Manual Defrost:

The appliance will automatically run a defrost cycle every four hours.

Note: The cycle starts from the time the appliance is initially powered up.

To manually defrost the appliance:

1. Press and hold the DEFROST button for 5 seconds.
2. The defrost cycle will start immediately and the Defrost LED illuminates. The defrost will last a maximum of 30 minutes.

Note: Starting a manual defrost also resets the automatic defrost timer. The next automatic defrost will start four hours after the manual defrost has finished.

3. Waterwaste is collected in the wastewater tray.

Maintenance

- Switch off and disconnect from the power supply before cleaning.
- Clean the interior of the appliance as often as possible.
- Do not use abrasive cleaning agents. These can leave harmful residues.
- Clean the door seal with water only.
- Always wipe dry after cleaning.
- Do not allow water used in cleaning to run through the drain hole into the evaporation pan.
- Take care when cleaning the rear of the appliance, sharp edges can cut.
- An agent or qualified technician must carry out repairs if required.

Cleaning the Condenser:

Periodically cleaning the condenser can extend the life of the appliance. We recommend that our agent or qualified technician clean the condenser.

Disposal:

EU regulations require refrigeration products to be disposed of by specialist companies who remove or recycle all glass, metal and plastic components. Consult your local waste collection authority regarding disposal of your appliance. Local authorities are not obliged to dispose of commercial refrigeration equipment but may be able to offer advice on how to dispose of the equipment locally.

Maintenance

Compliance:

Parts have undergone strict product testing to comply with regulatory standards and specifications set by international, independent, and federal authorities. Products have been approved to carry the following symbols:

 Disposal of packaging	• All packaging materials should be disposed of in an environmentally friendly way. • The cardboard may be used as scrap paper. The protective foil and the foam cushions are CFC-free. • Do not allow children to play with the packaging and destroy plastic bags safely. • You can break or cut the cardboard into smaller pieces and give to a wastepaper disposal service.
 Environment protection	• Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centers (if available).



IN CASE THE SUPPLY CABLE IS DAMAGED, THE MANUFACTURER OR THE AFTER-SALES SERVICE, OR QUALIFIED TECHNICIAN SHALL REPLACE IT, IN ORDER TO PREVENT ANY POSSIBLE RISK.

THE LAMP REPAIR AND REPLACEMENT SHALL BE CARRIED OUT BY QUALIFIED TECHNICIANS, WITH POWER SUPPLY DISCONNECTED. REPLACE WITH IDENTICAL LAMPS.

Installation

1. Remove the appliance from the packaging. Make sure that all protective plastic film and coatings are eaten thoroughly removed from all surfaces.
2. Maintain 20cm (7 inches) between the unit and walls or other objects for ventilation. Increasing this distance if the obstacle is a heat source.
3. Set the brakes on the castors to keep the appliance in position OR level the appliance by adjusting the screw feet.

Note:

- **Before using the appliance shelves and interior with soapy water.**
- **If the appliance has not been stored or moved in an upright position, let it stand upright for approximately 12 hours before operation. If in doubt allow the appliance to stand.**



Lock/Unlock the Doors

- A lock is fitted to the doors to ensure food are kept secure within your appliance.
- Use the keys provided to lock/unlock the door. ALL COMPACT models are equipped with a door lock, ensuring that stocks are safe after closing.

4. The R600A and R290 refrigerant is used by this appliance. Avoid damaging the refrigerant circuit and keep the appliance away from heat, sparks, and open flames.

Fitting the Wastewater Tray:

The wastewater tray comes ready to fit to the underside of the appliance, slide the tray into the runners situated under the appliance.

Fitting the Shelves:

1. Place one set of shelf guides on either side of the cabinet at the desired height.
2. Slide the shelf into place.
3. Repeat the remaining shelves.
4. The shelf supports up to 30kg.

Note: this is vital for ensuring correct drainage of condensation

Maintenance

- The freezer should be cleaned regularly. When cleaning, turn off the power, take out the foods in the cabinet and clean the inside using water or a little neutral detergent.
- Do not use boiling water, acid, chemical diluents, petrol and oil, or dirt-removing powder.
- Dry it after cleaning.
- Use light soapy water when cleaning the door seal, apply a little talcum powder on it after natural drying to extend its service life.
- Use a soft cloth with water or a little detergent to clean the external surface. Note, keep the power supply, electric cable and plug away from water to avoid electric shock.
- Except on common failures, those who are not service technician should not take apart and repair the freezer on their own, to avoid worsening the trouble. Unauthorized repair of electrical parts such as compressor or temperature controller is forbidden.

Defrosting


- Defrost for better freezing efficiency when the frost film in the cabinet is 4-5mm thick.
- When defrosting, turn off the power, take out the frozen foods, open the door for warming and melting. Use soft cloth to absorb water and clean it up.
- Do not use sharp metal tools such as steel brush to clean the frost film when defrosting to avoid evaporator damage.

Technical Specification


Item Number	PT-CN-0054C	PT-CN-0071C	PT-CN-0054R	PT-CN-0071R
Model	49184	49185	49186	49187
Features	54" Wide, 2 Shelves	71" Wide, 3 Shelves	54" Wide, 2 Shelves	71" Wide, 3 Shelves
Capacity	9.96 cu.ft (282L)	14.73cu.ft (417L)	9.96 cu.ft (282L)	14.73cu.ft (417L)
Doors	2	3	2	3
Self Closing Door	Yes			
Shelves	2	3	2	3
Shelf Capacity	30kg			
Shelf Material	Plastic Coated			
Number of Casters	4			
Power	375 W			
Amperage	3.5 A			
Electrical Info	110V/60Hz/1Ph			
Plug Type	NEMA 5 - 15P			
Temperature Range	39.2 to 46.4 °F (4 to 8°C)			
Refrigerant	R600A			
Insulation Material	Cyclopentane			
Cooling System	Ventilated			
Defrost	Automatic			
Interior Dimensions	35.4" x 20.9" x 23.2" (900 x 530 x 590 mm)	52.6" x 20.9" x 23.2" (1335 x 530 x 560 mm)	35.4" x 20.9" x 23.2" (900 x 530 x 590 mm)	52.6" x 20.9" x 23.2" (1335 x 530 x 560 mm)
Net Weight (KG)	295 lb (134 kg)	313 lb (142 kg)	295 lb (134 kg)	313 lb (142 kg)
Net Dimensions	53.5" x 27.6" x 33.5" (1360 x 700 x 850 mm)	70.7" x 27.6" x 33.5" (1795 x 700 x 850 mm)	53.5" x 27.6" x 33.5" (1360 x 700 x 850 mm)	70.7" x 27.6" x 33.5" (1795 x 700 x 850 mm)

Technical Drawings

Model PT-CN-0054C 49184


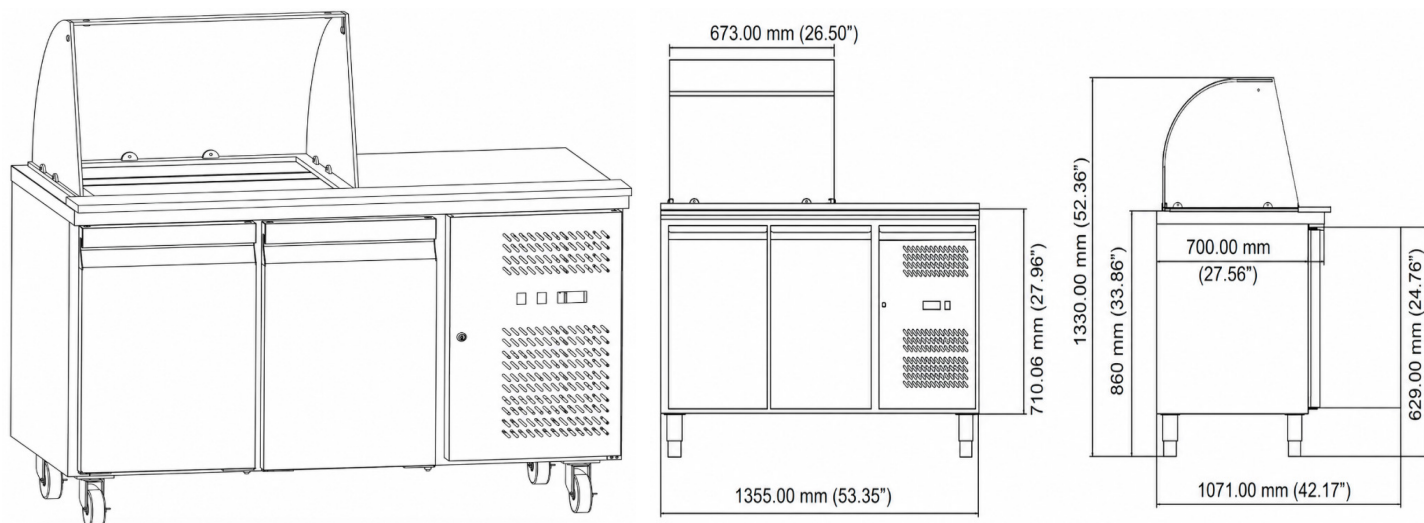


Model PT-CN-0071C 49185


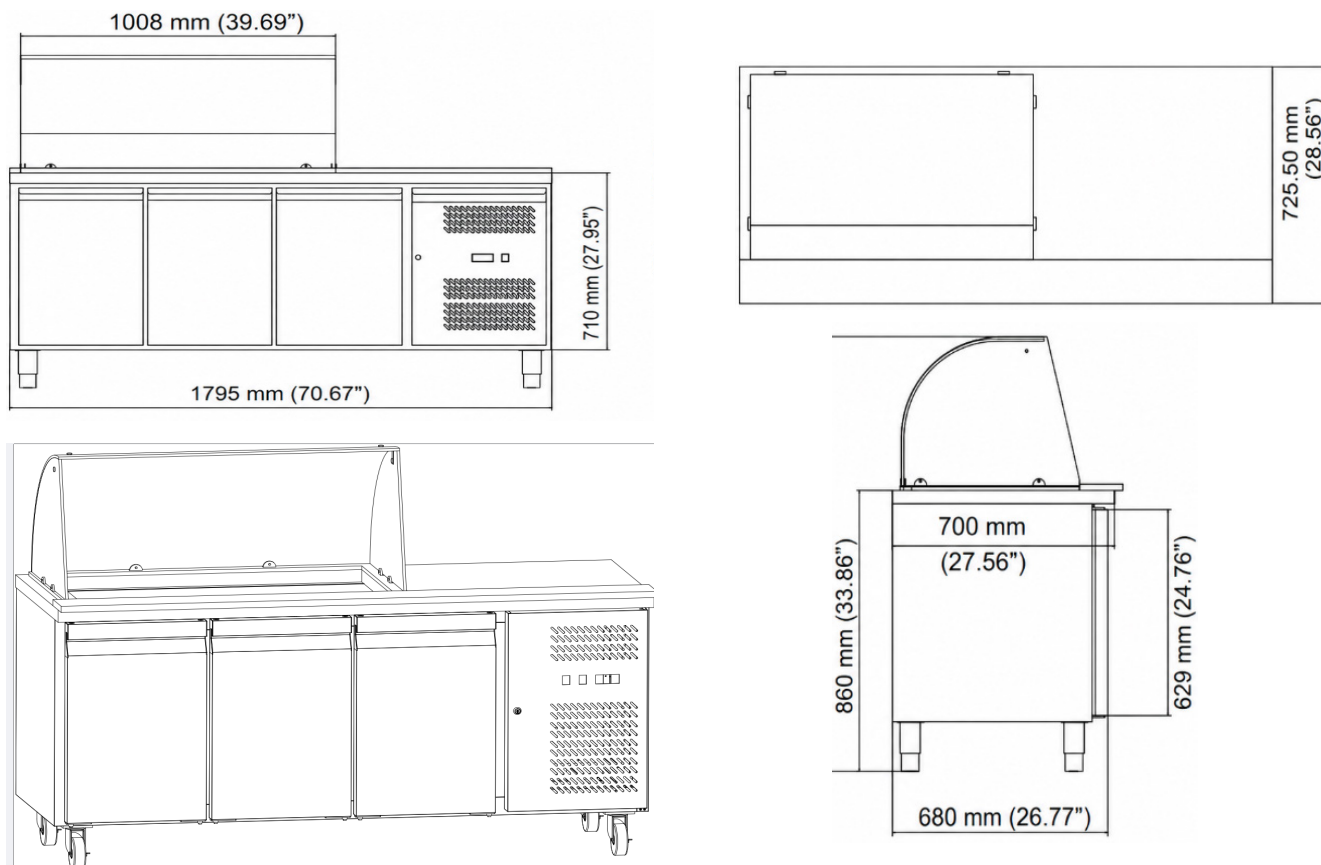


Technical Drawings

Model PT-CN-0054R 49186

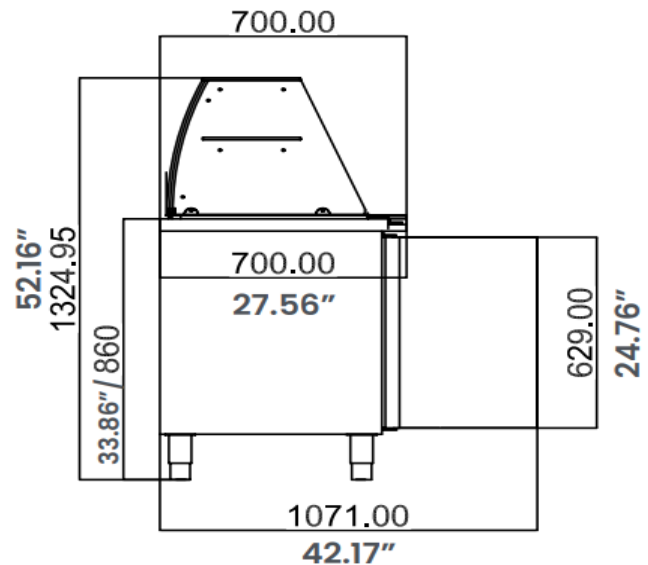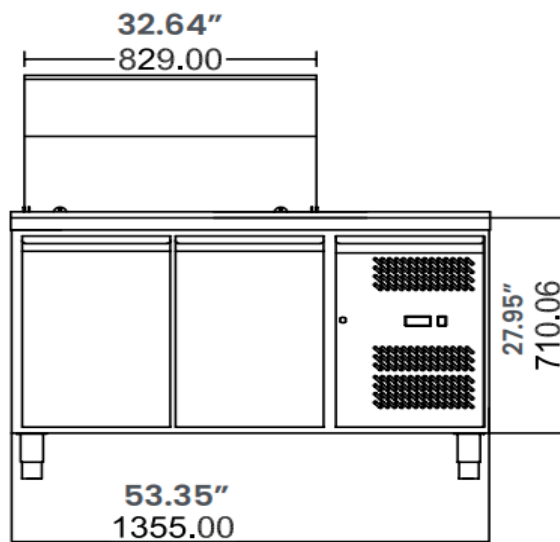


Model PT-CN-0071R 49187

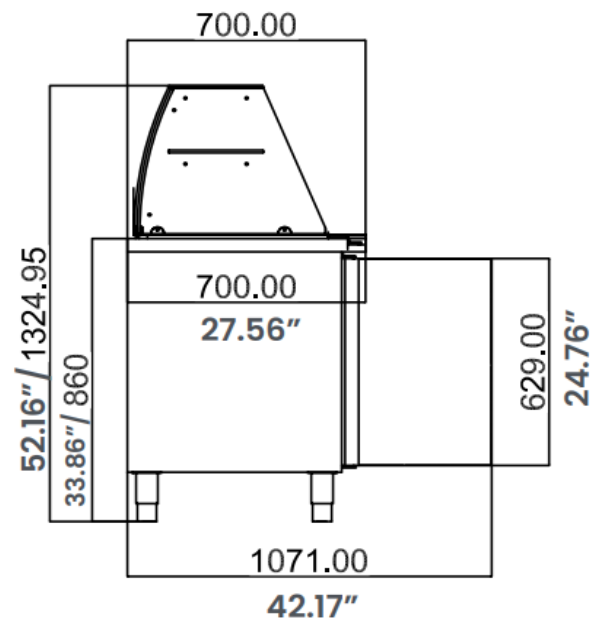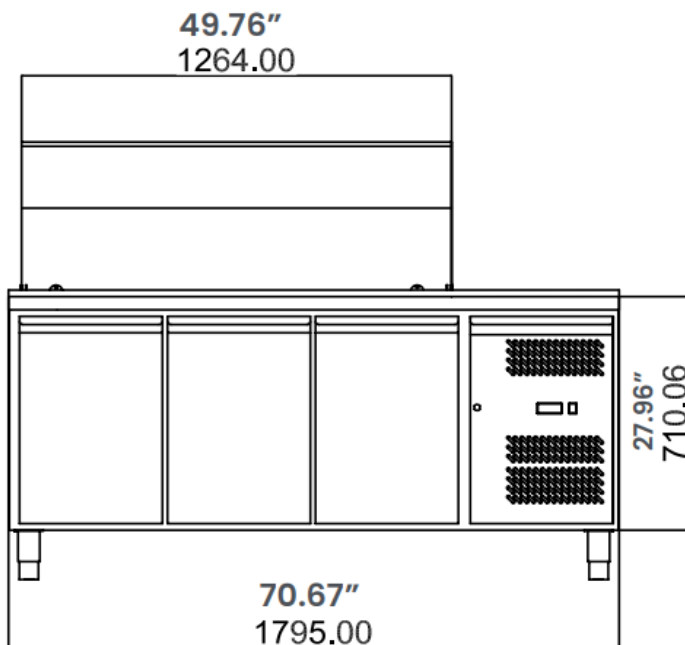

Parts Breakdown

Model PT-CN-0054C 49184

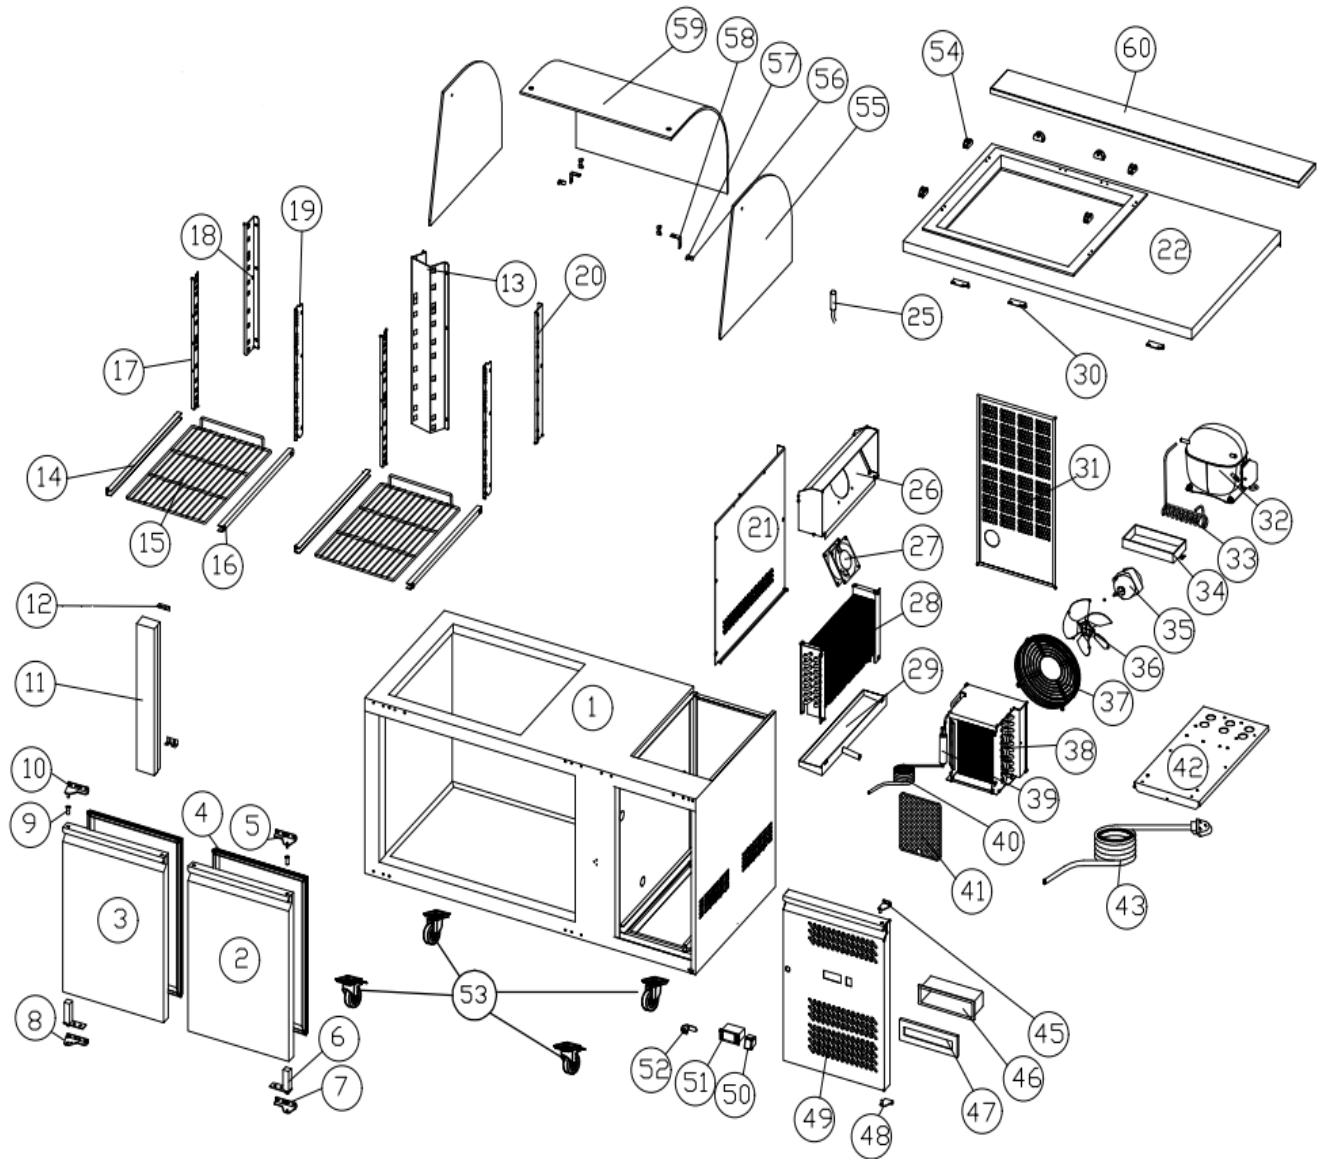

Item No.	Description	Position	Item No.	Description	Position
AX445	BODY FOR DISPLAY FREEZER 49184	1	AX450	DOOR SPRING FOR DISPLAY FREEZER 49184, 49185	6
AX446	DOOR RIGHT FOR DISPLAY FREEZER 49184, 49185	2	AX451	DOWN HINGE RIGHT FOR DISPLAY FREEZER 49184, 49185	7
AX447	DOOR LEFT FOR DISPLAY FREEZER 49184, 49185	3	AX452	DOWN HINGE LEFT FOR DISPLAY FREEZER 49184, 49185	8
AX448	GASKET FOR DISPLAY FREEZER 49184, 49185	4	AX453	HINGE SET FOR DISPLAY FREEZER 49184, 49185	9
AX449	UP HINGE RIGHT FOR DISPLAY FREEZER 49184, 49185	5	AX454	UP HINGE LEFT FOR DISPLAY FREEZER 49184, 49185	10


Parts Breakdown

Model PT-CN-0054C 49184

Item No.	Description	Position	Item No.	Description	Position
AX455	FIXED FRONT PANEL FOR DISPLAY FREEZER 49184, 49185	11	AX479	BASKET GUARD GRILLS FOR DISPLAY FREEZER 49184, 49185	37
AX456	BACK SUPPORT FOR DISPLAY FREEZER 49184, 49185	13	AX480	CONDENSER FOR DISPLAY FREEZER 49184, 49185	38
AX457	MIDDLE BEAM FIXING FOR DISPLAY FREEZER 49184, 49185	12	AX481	FILTER DRIER FOR DISPLAY FREEZER 49184, 49185	39
AX458	SHELF GUIDE LEFT FOR DISPLAY FREEZER 49184, 49185	14	AX482	CAPILLARY FOR DISPLAY FREEZER 49184, 49185	40
AX459	SHELF FOR DISPLAY FREEZER 49184, 49185	15	AX483	FILTER FOR DISPLAY FREEZER 49184, 49185	41
AX460	SHELF GUIDE RIGHT FOR DISPLAY FREEZER 49184, 49185	16	AX484	UNIT BOARD FOR DISPLAY FREEZER 49184, 49185	42
AX461	FRONT SUPPORT LEFT FOR DISPLAY FREEZER 49184, 49185	17	AX485	POWER CORD FOR DISPLAY FREEZER 49184, 49185	43
AX462	BACK SUPPORT LEFT FOR DISPLAY FREEZER 49184, 49185	18	AX486	FRONT PANEL UP HINGE FOR DISPLAY FREEZER 49184, 49185	45
AX463	FRONT SUPPORT RIGHT FOR DISPLAY FREEZER 49184, 49185	19	AX487	WATER BOX PROTECTOR FOR DISPLAY FREEZER 49184, 49185	46
AX464	BACK SUPPORT RIGHT FOR DISPLAY FREEZER 49184, 49185	20	AX488	WATER BOX PROTECTOR COVER FOR DISPLAY FREEZER 49184, 49185	47
AX465	EVAPORATOR COVER FOR DISPLAY FREEZER 49184, 49185	21	AX489	FRONT PANEL DOWN HINGE FOR DISPLAY FREEZER 49184, 49185	48
AX466	TOP FOR DISPLAY FREEZER 49184	22	AX490	FRONT PANEL FOR DISPLAY FREEZER 49184, 49185	49
AX467	SENSOR FOR DISPLAY FREEZER 49184, 49185	25	AX491	SWITCH FOR DISPLAY FREEZER 49184, 49185	50
AX468	FAN SUPPORT FOR DISPLAY FREEZER 49184, 49185	26	AX492	THERMOSTAT FOR DISPLAY FREEZER 49184, 49185	51
AX469	EVAPORATOR FAN FOR DISPLAY FREEZER 49184, 49185	27	AX493	LOCK FOR DISPLAY FREEZER 49184, 49185	52
AX470	EVAPORATOR FOR DISPLAY FREEZER 49184, 49185	28	AX494	CASTOR (WITH BRAKE) FOR DISPLAY FREEZER 49184, 49185	53
AX471	WATER BOX FOR DISPLAY FREEZER 49184, 49185	29	AX494	CASTOR(WITHOUT BRAKE) FOR DISPLAY FREEZER 49184, 49185	53
AX472	TOP FIXING FOR DISPLAY FREEZER 49184, 49185	30	AX495	GLASS CLIP FOR DISPLAY FREEZER 49184, 49185	54
AX473	GRILL FOR DISPLAY FREEZER 49184, 49185	31	AX496	SIDE GLASS FOR DISPLAY FREEZER 49184, 49185	55
AX474	COMPRESSOR FOR DISPLAY FREEZER 49184, 49185	32	AX497	BOLT FOR DISPLAY FREEZER 49184, 49185	56
AX475	HOT PIPE FOR DISPLAY FREEZER 49184, 49185	33	AX498	NUT FOR DISPLAY FREEZER 49184, 49185	57
AX476	WATER BOX FOR DISPLAY FREEZER 49184, 49185	34	AX499	CORNER BRACKET FOR DISPLAY FREEZER 49184, 49185	58
AX477	CONDENSER FAN FOR DISPLAY FREEZER 49184, 49185	35	AX500	GLASS FOR DISPLAY FREEZER 49184, 49185	59
AX478	CONDENSER FAN BLADE FOR DISPLAY FREEZER 49184, 49185	36	AX501	CUTTING BOARD FOR DISPLAY FREEZER 49184, 49185	60

Parts Breakdown

Model PT-CN-0071C 49185

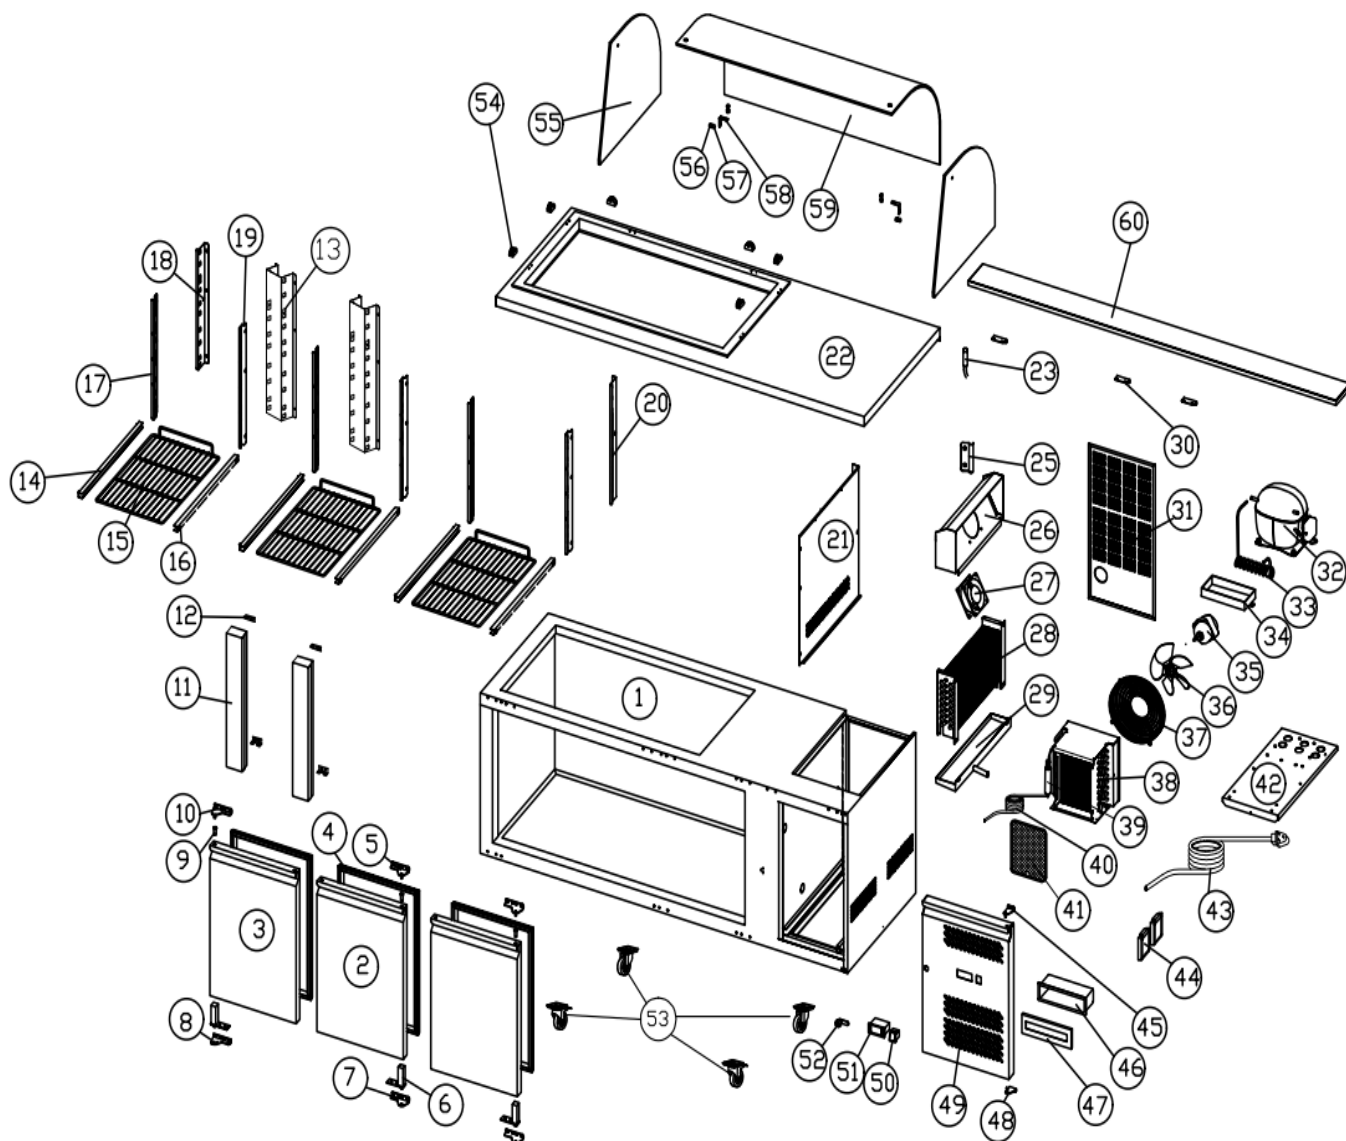

Item No.	Description	Position	Item No.	Description	Position
AX502	BODY FOR DISPLAY FREEZER 49185	1	AX451	DOWN HINGE RIGHT FOR DISPLAY FREEZER 49184, 49185	7
AX446	DOOR RIGHT FOR DISPLAY FREEZER 49184, 49185	2	AX452	DOWN HINGE LEFT FOR DISPLAY FREEZER 49184, 49185	8
AX447	DOOR LEFT FOR DISPLAY FREEZER 49184, 49185	3	AX453	HINGE SET FOR DISPLAY FREEZER 49184, 49185	9
AX448	GASKET FOR DISPLAY FREEZER 49184, 49185	4	AX454	UP HINGE LEFT FOR DISPLAY FREEZER 49184, 49185	10
AX449	UP HINGE RIGHT FOR DISPLAY FREEZER 49184, 49185	5	AX455	FIXED FRONT PANEL FOR DISPLAY FREEZER 49184, 49185	11
AX450	DOOR SPRING FOR DISPLAY FREEZER 49184, 49185	6	AX457	MIDDLE BEAM FIXING FOR DISPLAY FREEZER 49184, 49185	12


Parts Breakdown

Model PT-CN-0071C 49185

Item No.	Description	Position	Item No.	Description	Position
AX456	BACK SUPPORT FOR DISPLAY FREEZER 49184, 49185	13	AX480	CONDENSER FOR DISPLAY FREEZER 49184, 49185	38
AX458	SHELF GUIDE LEFT FOR DISPLAY FREEZER 49184, 49185	14	AX481	FILTER DRIER FOR DISPLAY FREEZER 49184, 49185	39
AX459	SHELF] FOR DISPLAY FREEZER 49184, 49185	15	AX482	CAPILLARY FOR DISPLAY FREEZER 49184, 49185	40
AX460	SHELF GUIDE RIGHT FOR DISPLAY FREEZER 49184, 49185	16	AX483	FILTER FOR DISPLAY FREEZER 49184, 49185	41
AX461	FRONT SUPPORT LEFT FOR DISPLAY FREEZER 49184, 49185	17	AX484	UNIT BOARD FOR DISPLAY FREEZER 49184, 49185	42
AX462	BACK SUPPORT LEFT FOR DISPLAY FREEZER 49184, 49185	18	AX485	POWER CORD FOR DISPLAY FREEZER 49184, 49185	43
AX463	FRONT SUPPORT RIGHT FOR DISPLAY FREEZER 49184, 49185	19	AX486	FRONT PANEL UP HINGE FOR DISPLAY FREEZER 49184, 49185	45
AX464	BACK SUPPORT RIGHT FOR DISPLAY FREEZER 49184, 49185	20	AX487	WATER BOX PROTECTOR FOR DISPLAY FREEZER 49184, 49185	46
AX465	EVAPORATOR COVER FOR DISPLAY FREEZER 49184, 49185	21	AX488	WATER BOX PROTECTOR COVER FOR DISPLAY FREEZER 49184, 49185	47
AX503	TOP FOR DISPLAY FREEZER 49185	22	AX489	FRONT PANEL DOWN HINGE FOR DISPLAY FREEZER 49184, 49185	48
AX467	SENSOR FOR DISPLAY FREEZER 49184, 49185	23	AX490	FRONT PANEL FOR DISPLAY FREEZER 49184, 49185	49
AX504	SENSOR CLIP FOR DISPLAY FREEZER 49185	25	AX491	SWITCH FOR DISPLAY FREEZER 49184, 49185	50
AX468	FAN SUPPORT FOR DISPLAY FREEZER 49184, 49185	26	AX492	THERMOSTAT FOR DISPLAY FREEZER 49184, 49185	51
AX469	EVAPORATOR FAN FOR DISPLAY FREEZER 49184, 49185	27	AX493	LOCK FOR DISPLAY FREEZER 49184, 49185	52
AX470	EVAPORATOR FOR DISPLAY FREEZER 49184, 49185	28	AX494	CASTOR(WITH BRAKE) FOR DISPLAY FREEZER 49184, 49185	53
AX471	WATER BOX FOR DISPLAY FREEZER 49184, 49185	29	AX494	CASTOR(WITHOUT BRAKE) FOR DISPLAY FREEZER 49184, 49185	53
AX472	TOP FIXING FOR DISPLAY FREEZER 49184, 49185	30	AX495	GLASS CLIP FOR DISPLAY FREEZER 49184, 49185	54
AX473	GRILL FOR DISPLAY FREEZER 49184, 49185	31	AX496	SIDE GLASS FOR DISPLAY FREEZER 49184, 49185	55
AX474	COMPRESSOR FOR DISPLAY FREEZER 49184, 49185	32	AX497	BOLT FOR DISPLAY FREEZER 49184, 49185	56
AX475	HOT PIPE FOR DISPLAY FREEZER 49184, 49185	33	AX498	NUT FOR DISPLAY FREEZER 49184, 49185	57
AX476	WATER BOX FOR DISPLAY FREEZER 49184, 49185	34	AX499	CORNER BRACKET FOR DISPLAY FREEZER 49184, 49185	58
AX477	CONDENSER FAN FOR DISPLAY FREEZER 49184, 49185	35	AX500	GLASS FOR DISPLAY FREEZER 49184, 49185	59
AX478	CONDENSER FAN BLADE FOR DISPLAY FREEZER 49184, 49185	36	AX501	CUTTING BOARD FOR DISPLAY FREEZER 49184, 49185	60
AX479	BASKET GUARD GRILLS FOR DISPLAY FREEZER 49184, 49185	37			

Parts Breakdown

Model PT-CN-0054R 49186

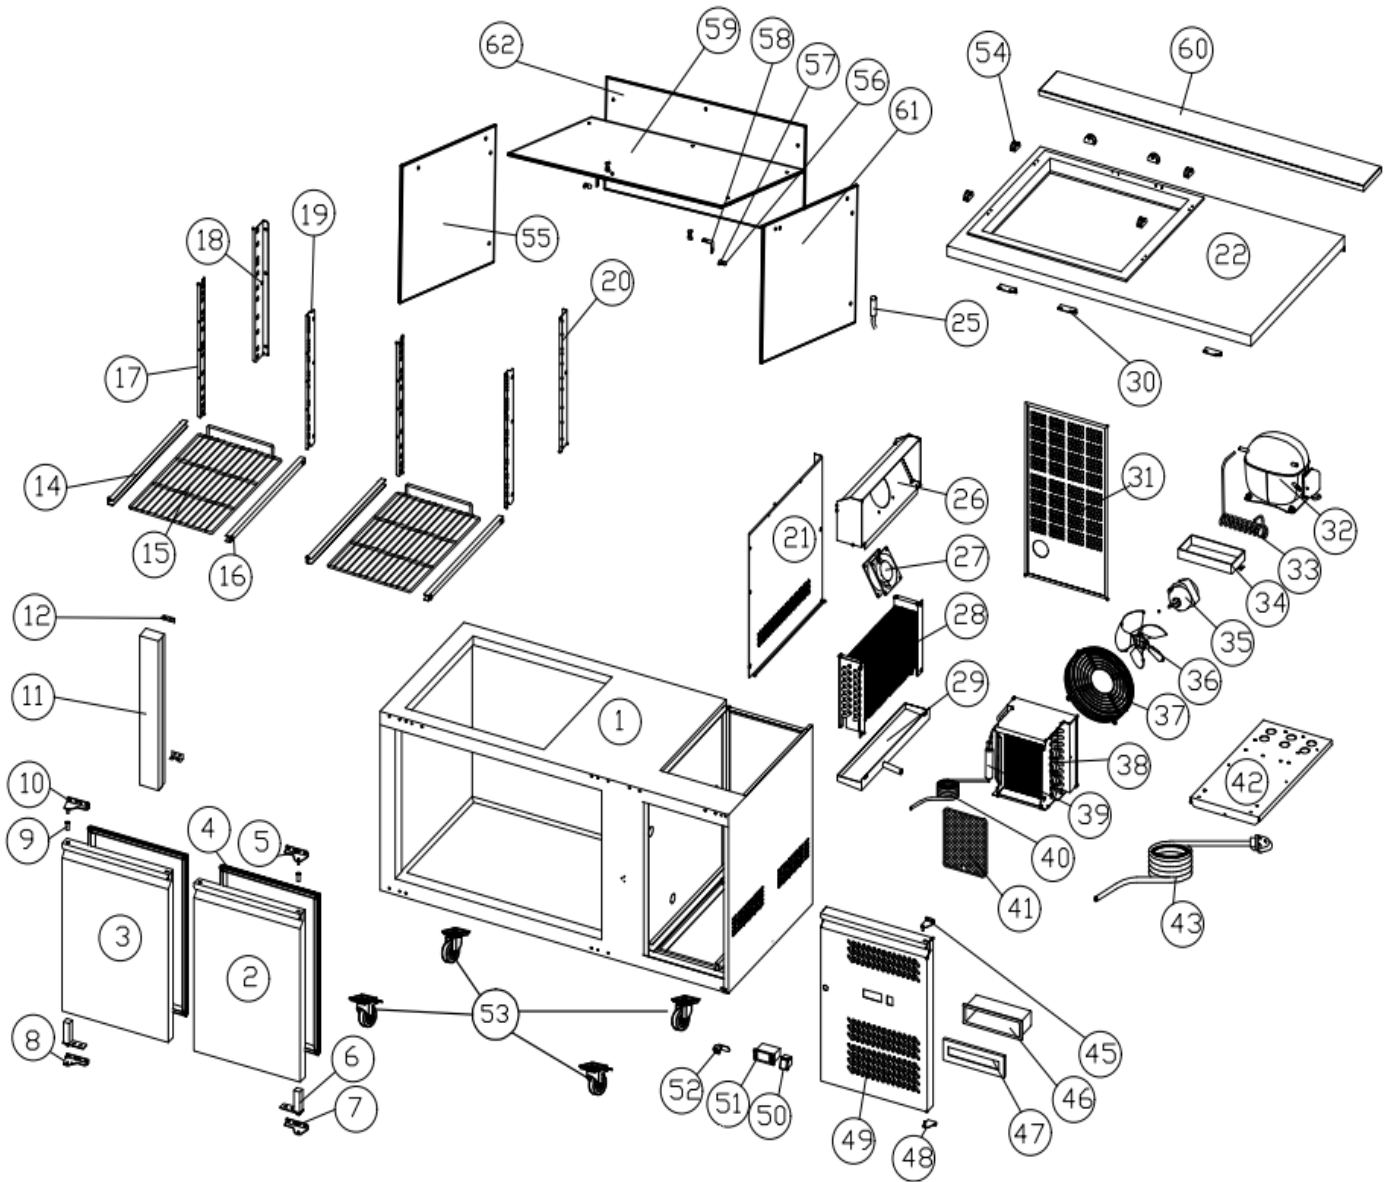

Item No.	Description	Position	Item No.	Description	Position
AX445	BODY FOR DISPLAY FREEZER 49186	1	AX449	UP HINGE RIGHT FOR DISPLAY FREEZER 49186	5
AX446	DOOR RIGHT FOR DISPLAY FREEZER 49186	2	AX450	DOOR SPRING FOR DISPLAY FREEZER 49186	6
AX447	DOOR LEFT FOR DISPLAY FREEZER 49186	3	AX451	DOWN HINGE RIGHT FOR DISPLAY FREEZER 49186	7
AX448	GASKET FOR DISPLAY FREEZER 49186	4	AX452	DOWN HINGE LEFT FOR DISPLAY FREEZER 49186	8


Parts Breakdown

Model PT-CN-0054R 49186

Item No.	Description	Position	Item No.	Description	Position
AX453	HINGE SET FOR DISPLAY FREEZER 49186	9	AX479	BASKET GUARD GRILLS FOR DISPLAY FREEZER 49186	37
AX454	UP HINGE LEFT FOR DISPLAY FREEZER 49186	10	AX480	CONDENSER FOR DISPLAY FREEZER 49186	38
AX455	FIXED FRONT PANEL FOR DISPLAY FREEZER 49186	11	AX481	FILTER DRIER FOR DISPLAY FREEZER 49186	39
AX456	BACK SUPPORT FOR DISPLAY FREEZER 49186	13	AX482	CAPILLARY FOR DISPLAY FREEZER 49186	40
AX457	MIDDLE BEAM FIXING FOR DISPLAY FREEZER 49186	12	AX483	FILTER FOR DISPLAY FREEZER 49186	41
AX458	SHELF GUIDE LEFT FOR DISPLAY FREEZER 49186	14	AX484	UNIT BOARD FOR DISPLAY FREEZER 49186	42
AX459	SHELF] FOR DISPLAY FREEZER 49186	15	AX485	POWER CORD FOR DISPLAY FREEZER 49186	43
AX460	SHELF GUIDE RIGHT FOR DISPLAY FREEZER 49186	16	AX486	FRONT PANEL UP HINGE FOR DISPLAY FREEZER 49186	45
AX461	FRONT SUPPORT LEFT FOR DISPLAY FREEZER 49186	17	AX487	WATER BOX PROTECTOR FOR DISPLAY FREEZER 49186	46
AX462	BACK SUPPORT LEFT FOR DISPLAY FREEZER 49186	18	AX488	WATER BOX PROTECTOR COVER FOR DISPLAY FREEZER 49186	47
AX463	FRONT SUPPORT RIGHT FOR DISPLAY FREEZER 49186	19	AX489	FRONT PANEL DOWN HINGE FOR DISPLAY FREEZER 49186	48
AX464	BACK SUPPORT RIGHT FOR DISPLAY FREEZER 49186	20	AX490	FRONT PANEL FOR DISPLAY FREEZER 49186	49
AX465	EVAPORATOR COVER FOR DISPLAY FREEZER 49186	21	AX491	SWITCH FOR DISPLAY FREEZER 49186	50
AX466	TOP FOR DISPLAY FREEZER 49186	22	AX492	THERMOSTAT FOR DISPLAY FREEZER 49186	51
AX467	SENSOR FOR DISPLAY FREEZER 49186	25	AX493	LOCK FOR DISPLAY FREEZER 49186	52
AX468	FAN SUPPORT FOR DISPLAY FREEZER 49186	26	AX494	CASTOR (WITH BRAKE) FOR DISPLAY FREEZER 49186	53
AX469	EVAPORATOR FAN FOR DISPLAY FREEZER 49186	27	AX494	CASTOR (WITHOUT BRAKE) FOR DISPLAY FREEZER 49186	53
AX470	EVAPORATOR FOR DISPLAY FREEZER 49186	28	AX495	GLASS CLIP FOR DISPLAY FREEZER 49186	54
AX471	WATER BOX FOR DISPLAY FREEZER 49186	29	AX723	SIDE GLASS LEFT FOR DISPLAY FREEZER 49186	55
AX472	TOP FIXING FOR DISPLAY FREEZER 49186	30	AX497	BOLT FOR DISPLAY FREEZER 49186	56
AX473	GRILL FOR DISPLAY FREEZER 49186	31	AX498	NUT FOR DISPLAY FREEZER 49186	57
AX474	COMPRESSOR FOR DISPLAY FREEZER 49186	32	AX499	CORNER BRACKET FOR DISPLAY FREEZER 49186	58
AX475	HOT PIPE FOR DISPLAY FREEZER 49186	33	AX724	GLASS FOR DISPLAY FREEZER 49186	59
AX476	WATER BOX FOR DISPLAY FREEZER 49186	34	AX501	CUTTING BOARD FOR DISPLAY FREEZER 49186	60
AX477	CONDENSER FAN FOR DISPLAY FREEZER 49186	35	AX725	SIDE GLASS RIGHT FOR DISPLAY FREEZER 49186	61
AX478	CONDENSER FAN BLADE FOR DISPLAY FREEZER 49186	36	AX726	BACK GLASS FOR DISPLAY FREEZER 49186	62

Parts Breakdown

Model PT-CN-0071R 49187

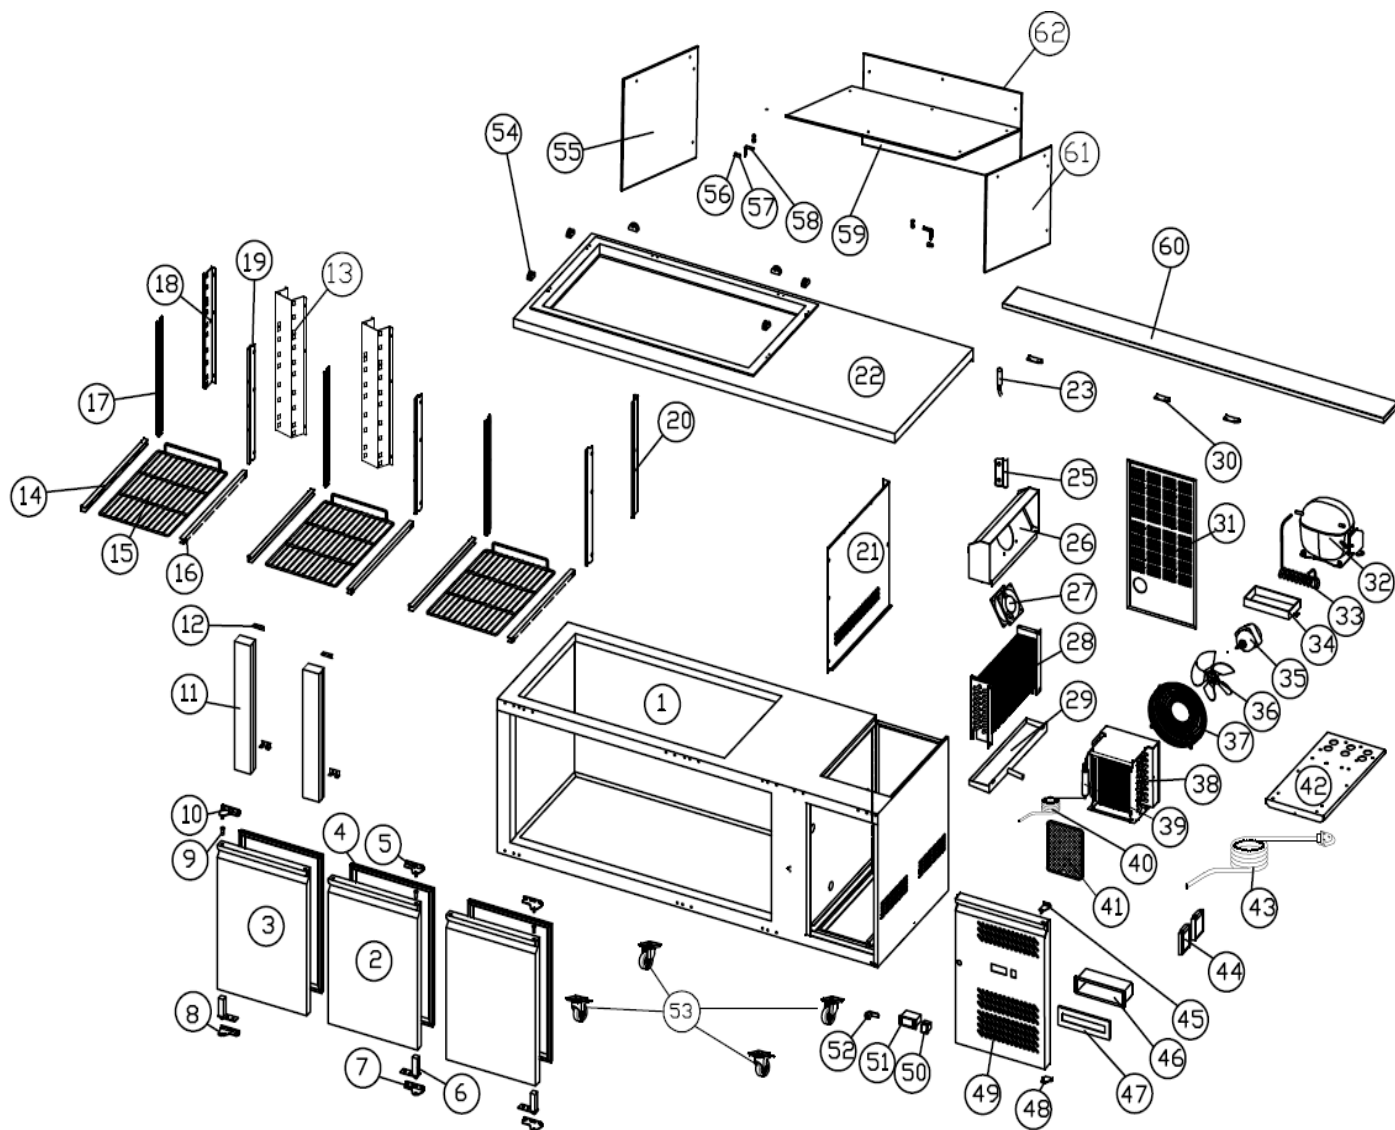



Item No.	Description	Position	Item No.	Description	Position
AX502	BODY FOR DISPLAY FREEZER 49187	1	AX449	UP HINGE RIGHT FOR DISPLAY FREEZER 49187	5
AX446	DOOR RIGHT FOR DISPLAY FREEZER 49187	2	AX450	DOOR SPRING FOR DISPLAY FREEZER 49187	6
AX447	DOOR LEFT FOR DISPLAY FREEZER 49187	3	AX451	DOWN HINGE RIGHT FOR DISPLAY FREEZER 49187	7
AX448	GASKET FOR DISPLAY FREEZER 49187	4	AX452	DOWN HINGE LEFT FOR DISPLAY FREEZER 49187	8

Parts Breakdown

Model PT-CN-0071R 49187

Item No.	Description	Position	Item No.	Description	Position
AX453	HINGE SET FOR DISPLAY FREEZER 49187	9	AX478	CONDENSER FAN BLADE FOR DISPLAY FREEZER 49187	36
AX454	UP HINGE LEFT FOR DISPLAY FREEZER 49187	10	AX479	BASKET GUARD GRILLS FOR DISPLAY FREEZER 49187	37
AX455	FIXED FRONT PANEL FOR DISPLAY FREEZER 49187	11	AX480	CONDENSER FOR DISPLAY FREEZER 49187	38
AX457	MIDDLE BEAM FIXING FOR DISPLAY FREEZER 49187	12	AX481	FILTER DRIER FOR DISPLAY FREEZER 49187	39
AX456	BACK SUPPORT FOR DISPLAY FREEZER 49187	13	AX482	CAPILLARY FOR DISPLAY FREEZER 49187	40
AX458	SHELF GUIDE LEFT FOR DISPLAY FREEZER 49187	14	AX483	FILTER FOR DISPLAY FREEZER 49187	41
AX459	SHELF] FOR DISPLAY FREEZER 49187	15	AX484	UNIT BOARD FOR DISPLAY FREEZER 49187	42
AX460	SHELF GUIDE RIGHT FOR DISPLAY FREEZER 49187	16	AX485	POWER CORD FOR DISPLAY FREEZER 49187	43
AX461	FRONT SUPPORT LEFT FOR DISPLAY FREEZER 49187	17	AX486	FRONT PANEL UP HINGE FOR DISPLAY FREEZER 49187	45
AX462	BACK SUPPORT LEFT FOR DISPLAY FREEZER 49187	18	AX487	WATER BOX PROTECTOR FOR DISPLAY FREEZER 49187	46
AX463	FRONT SUPPORT RIGHT FOR DISPLAY FREEZER 49187	19	AX488	WATER BOX PROTECTOR COVER FOR DISPLAY FREEZER 49187	47
AX464	BACK SUPPORT RIGHT FOR DISPLAY FREEZER 49187	20	AX489	FRONT PANEL DOWN HINGE FOR DISPLAY FREEZER 49187	48
AX465	EVAPORATOR COVER FOR DISPLAY FREEZER 49187	21	AX490	FRONT PANEL FOR DISPLAY FREEZER 49187	49
AX503	TOP FOR DISPLAY FREEZER 49187	22	AX491	SWITCH FOR DISPLAY FREEZER 49187	50
AX467	SENSOR FOR DISPLAY FREEZER 49187	23	AX492	THERMOSTAT FOR DISPLAY FREEZER 49187	51
AX504	SENSOR CLIP FOR DISPLAY FREEZER 49187	25	AX493	LOCK FOR DISPLAY FREEZER 49187	52
AX468	FAN SUPPORT FOR DISPLAY FREEZER 49187	26	AX494	CASTOR (WITH BRAKE) FOR DISPLAY FREEZER 49187	53
AX469	EVAPORATOR FAN FOR DISPLAY FREEZER 49187	27	AX494	CASTOR (WITHOUT BRAKE) FOR DISPLAY FREEZER 49187	53
AX470	EVAPORATOR FOR DISPLAY FREEZER 49187	28	AX495	GLASS CLIP FOR DISPLAY FREEZER 49187	54
AX471	WATER BOX FOR DISPLAY FREEZER 49187	29	AX497	BOLT FOR DISPLAY FREEZER 49187	56
AX472	TOP FIXING FOR DISPLAY FREEZER 49187	30	AX498	NUT FOR DISPLAY FREEZER 49187	57
AX473	GRILL FOR DISPLAY FREEZER 49187	31	AX499	CORNER BRACKET FOR DISPLAY FREEZER 49187	58
AX474	COMPRESSOR FOR DISPLAY FREEZER 49187	32	AX727	TOP GLASS FOR DISPLAY FREEZER 49187	59
AX475	HOT PIPE FOR DISPLAY FREEZER 49187	33	AX501	CUTTING BOARD FOR DISPLAY FREEZER 49187	60
AX476	WATER BOX FOR DISPLAY FREEZER 49187	34	AX725	SIDE GLASS RIGHT FOR DISPLAY FREEZER 49187	61
AX477	CONDENSER FAN FOR DISPLAY FREEZER 49187	35	AX728	BACK GLASS FOR DISPLAY FREEZER 49187	62

Electrical Diagram

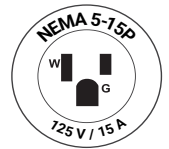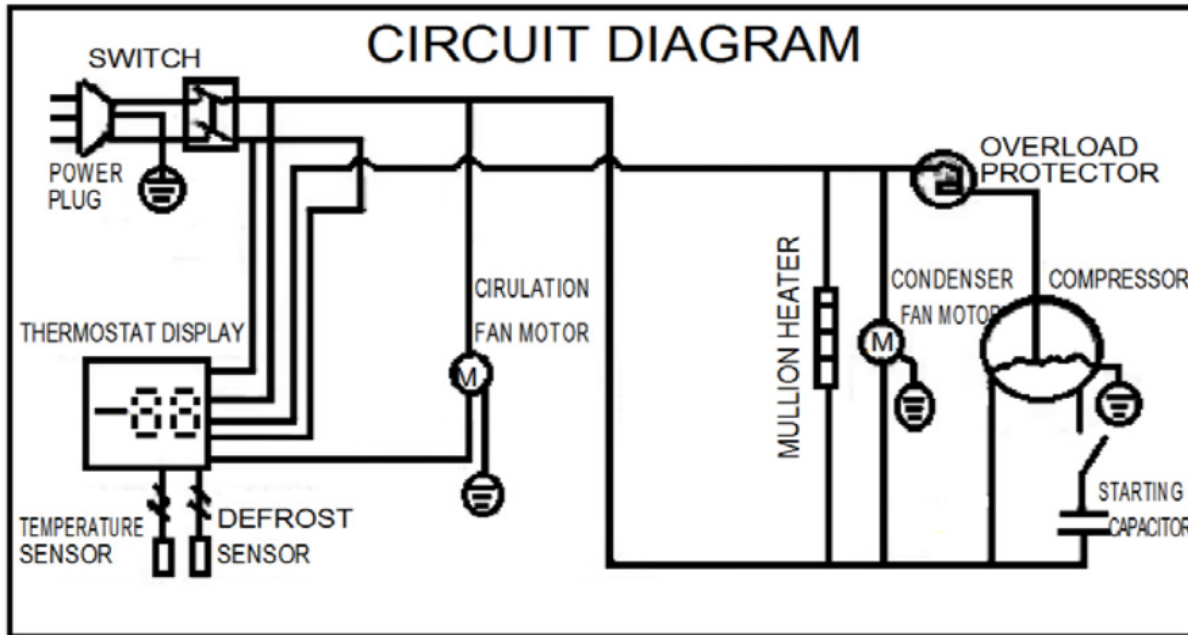

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
The appliance is not working the appliance is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call your agent or qualified Technician
	Fuse in the plug has blown	Replace the fuse
	Power supply	Check power supply
	Internal wiring fault	Call your agent or qualified Technician
The appliance turns on, but the temperature is too high/low	Too much ice on the evaporator	Defrost the appliance
	Condenser blocked with dust	Call your agent or qualified Technician
	Doors are not shut properly	Check doors are shut and seals are not damaged
	Appliance is located near a heat source or air flow to the condenser is being interrupted	Move the appliance to a more suitable location
	Ambient temperature is too high	Increase ventilation or move appliance to a cooler position
	Unsuitable foodstuffs are being stored in the appliance	Remove excessive hot foodstuff or blockages to the fan
	Appliance is overloaded	Reduce the amount of food stored in the appliance
The appliance is unusually loud	Loose nut/screw	Check and tighten all nuts and screws
	The appliance has not been installed in a level or stable position	Check installation position and change is necessary
The appliance is leaking water	The appliance is not properly levelled	Adjust the screw feet to level the appliance (if applicable)
	The discharge outlet is blocked	Clear the discharge outlet
	Movement of water to drain is obstructed	Clear the floor of the appliance (if applicable)
	The water container is damaged	Call your agent or qualified technician
	The drip tray is overflowing	Empty the drip tray (if applicable)

Notes

[illegible]



Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

<https://omcan.com/warranty-registration/>

For mailing in Canada

Pour postale au Canada

Por correo en Canadá

OMCAN

PRODUCT WARRANTY REGISTRATION

3115 Pepper Mill Court,
Mississauga, Ontario
Canada, L5L 4X5

For mailing in the US

Pour diffusion aux États-Unis

Por correo en los EE.UU.

OMCAN

PRODUCT WARRANTY REGISTRATION

4450 Witmer Industrial Estates, Unit 4,
Niagara Falls, New York
USA, 14305

or email to: service@omcan.com



Purchaser's Information

Name: _____

Address: _____

City: _____ Province or State: _____ Postal or Zip: _____

Country: _____

Dealer from which Purchased: _____

Dealer City: _____ Dealer Province or State: _____

Invoice: _____

Company Name: _____

Telephone: _____

Email Address: _____

Type of Company:

☐ Restaurant ☐ Bakery ☐ Deli

☐ Butcher ☐ Supermarket ☐ Caterer

☐ Institution (*specify*): _____

☐ Other (*specify*): _____

Model Name: _____ Model Number: _____ Serial Number: _____

Machine Description: _____

Date of Purchase (MM/DD/YYYY): _____ Date of Installation (MM/DD/YYYY): _____

Would you like to extend the warranty? ☐ Yes ☐ No

Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 6,500 globally sourced products.

Depuis 1951 Omcan a grandi pour devenir un des “leaders” de la distribution des équipements et matériel pour l’industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd’hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l’entreprise. Nous nous efforçons d’offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 6500 produits provenant du monde entier.

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 6,500 productos con origen a nivel mundial.

