



Parts Breakdown

Model FW-TW-3050 17133

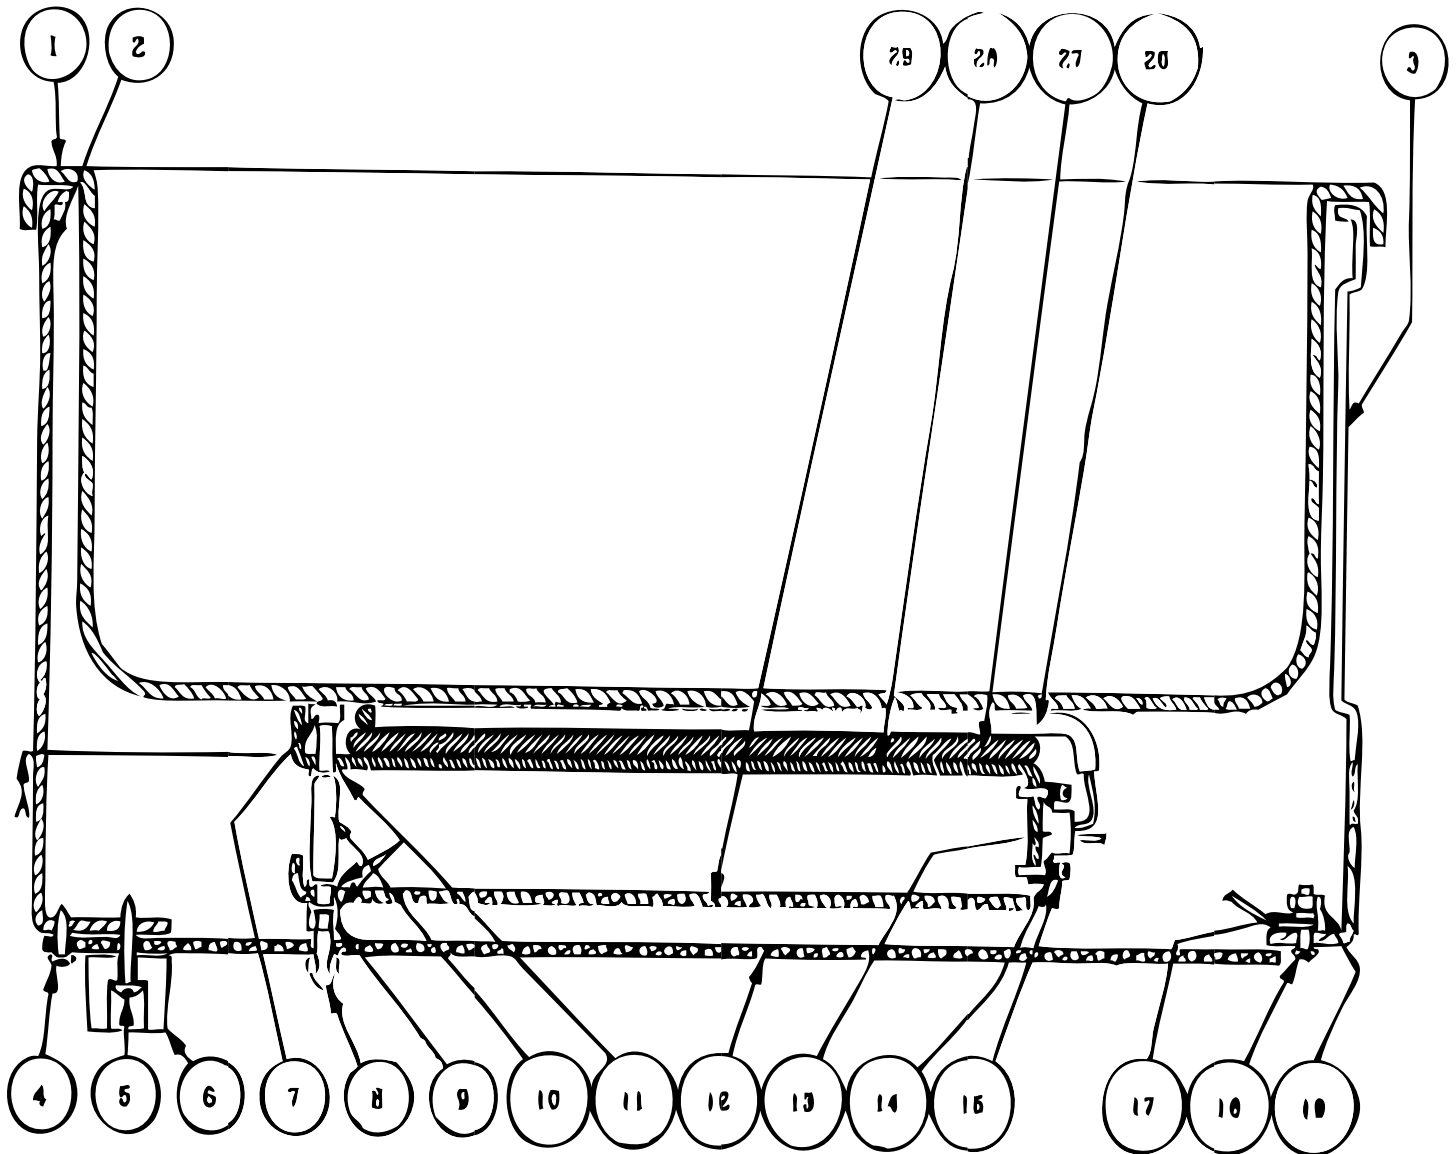

Parts Breakdown

Model FW-TW-3050 17133

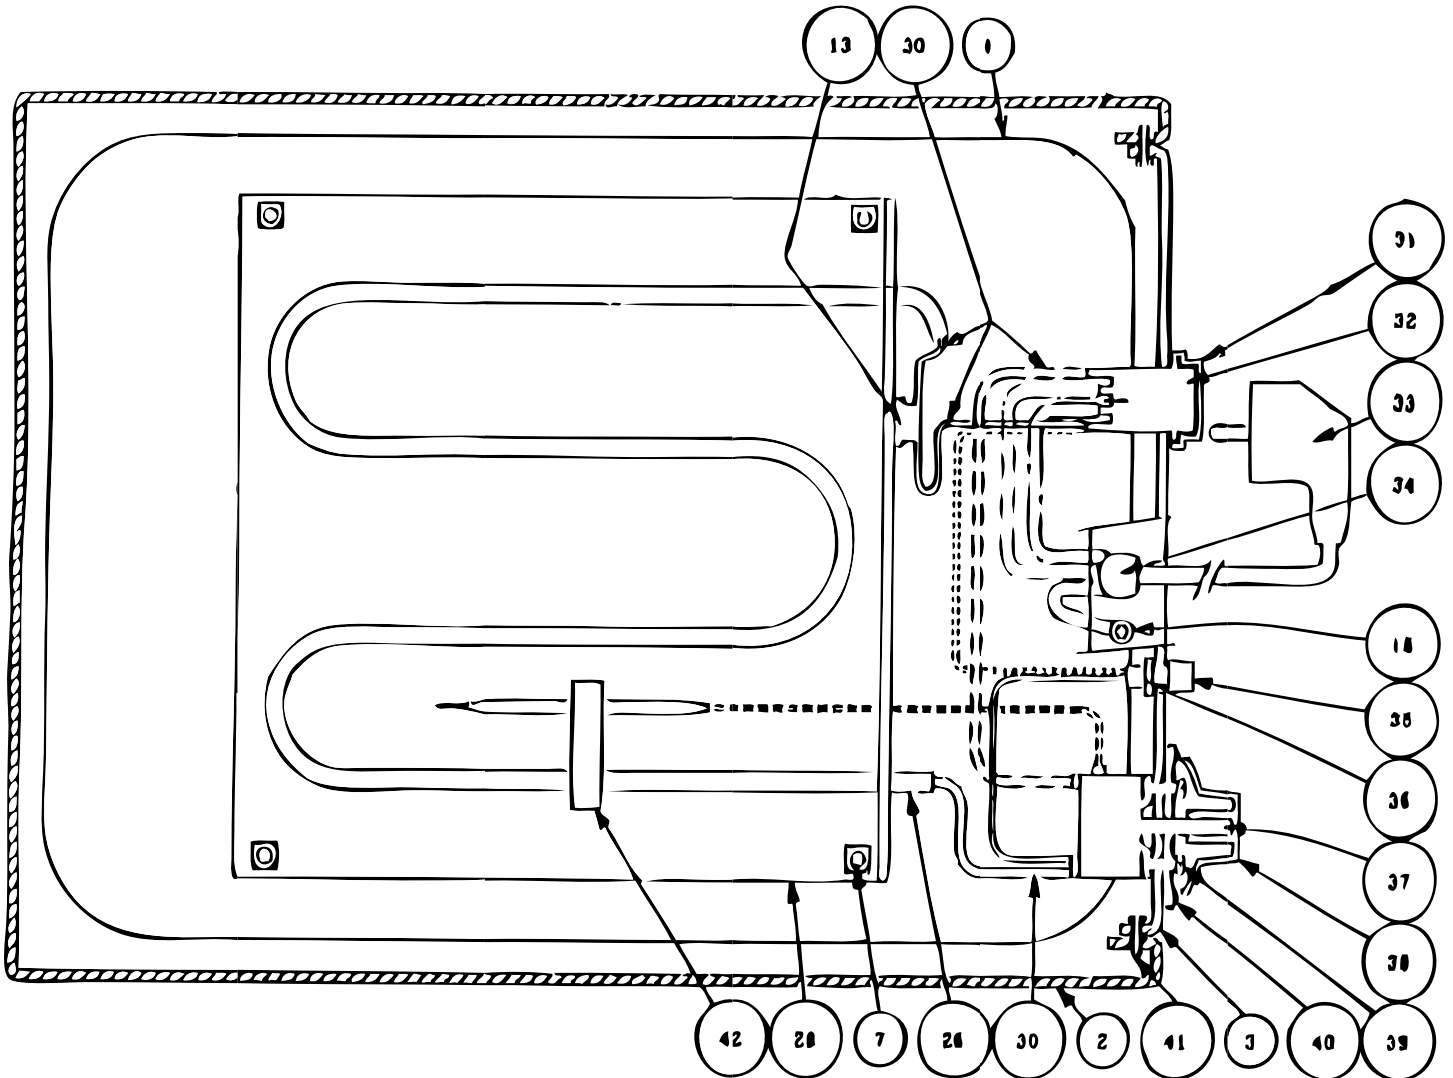

Parts Breakdown

Model FW-TW-3050 17133

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
74088	Stainless Steel Food Well for 17133	1	74091	Thermostat L160-20C for 17133	13	74097	Rocket Switch for 17133	32
74105	Stainless Steel Food Well for 17133	2	76139	SP Washer for 17133	14	74098	Power Cord with Plug for 17133	33
74107	Front Plate for 17133	3	76140	MM/ Screw for 17133	15	74114	Strain Relief for Power Cord for 17133	34
76131	Fixed Screw for Cover for 17133	4	76142	SP Washer for 17133	17	74099	Neon Light for 17133	35
76133	Rubber Leg for 17133	5	76143	Screw for Cover for 17133	18	76156	Screw for Neon Light for 17133	36
74089	Rubber Leg for 17133	6	76144	Screw for 17133	19	74115	Ego Thermostat Switch for 17133	37
76134	Welding Screw for 17133	7	76151	Cover for Tube Heater for 17133	26	74100	Dial Knob for 17133	38
76135	Screw for Welding Screw for 17133	8	74092	Fiber Protection for 17133	27	74101	Stainless Steel Food Pan Insert for 17133	43
76136	Screw Washer for Welding Screw for 17133	9	74093	Cover to Heater for 17133	28	74102	Stainless Steel Top Lid for 17133	44
76137	M6 Screw for 17133	10	74094	Plate Aluminum for 17133	29	74103	Stainless Steel Steaming Well Insert for 17133	45
76138	Washer for Welding Screw for 17133	11	74095	Heating Element Tube for 17133	30	74104	Stainless Steel Rack for 17133	46
74090	Bottom Cover Aluminum for 17133	12	74096	Plastic Cover to Switch for 17133	31			