


Parts Breakdown

 

Model **BS-VE-3200-T** 18943

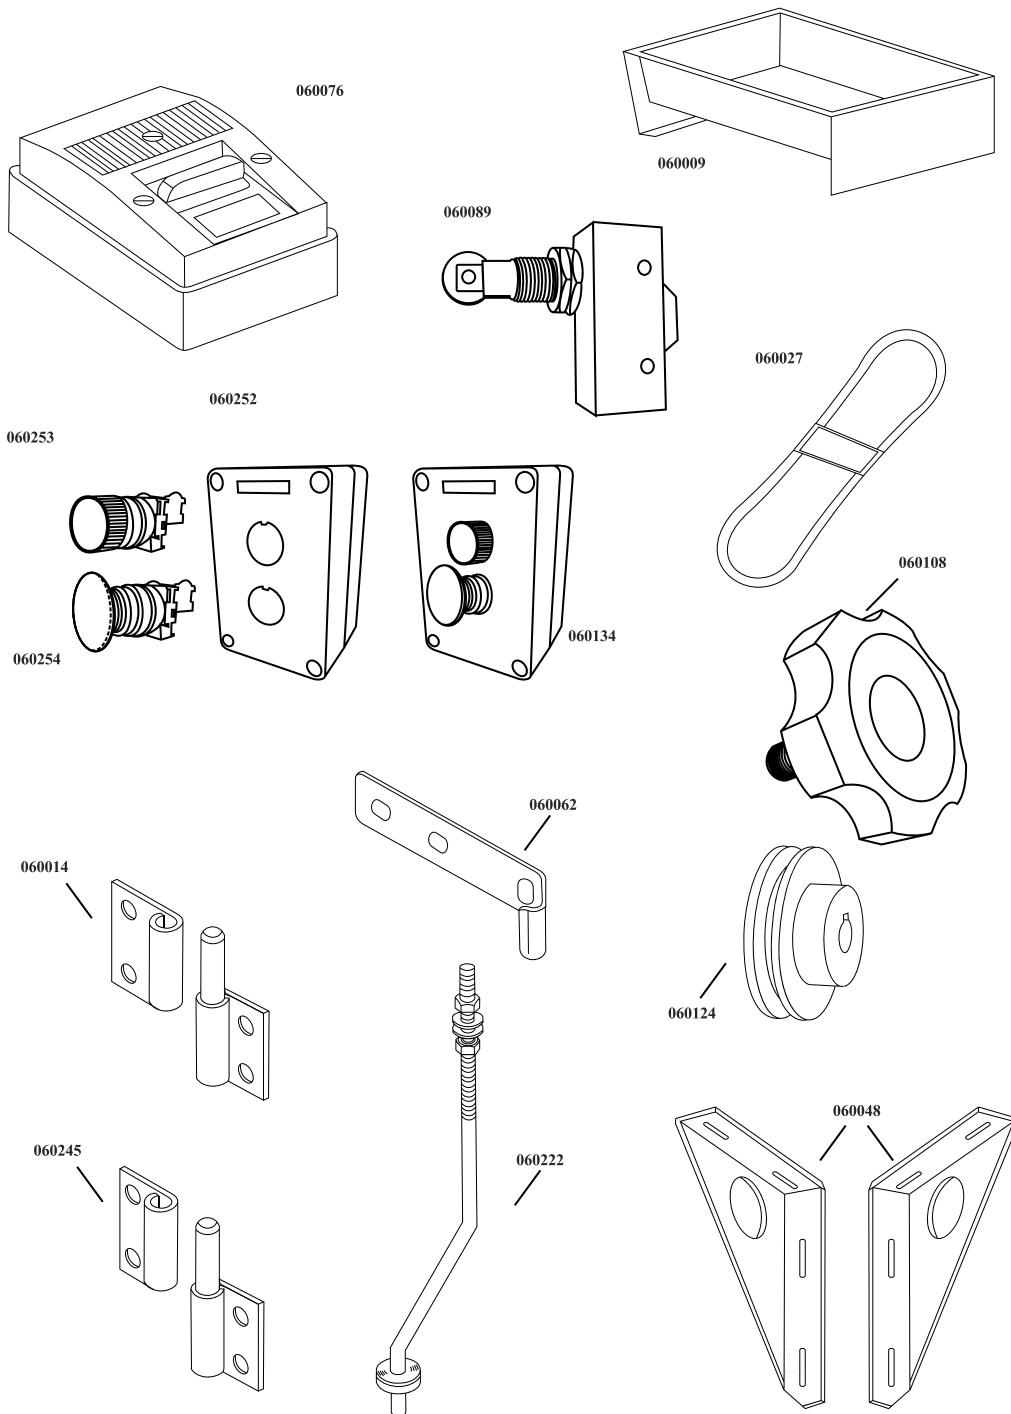

Parts Breakdown


Model BS-VE-3200-T 18943

060098

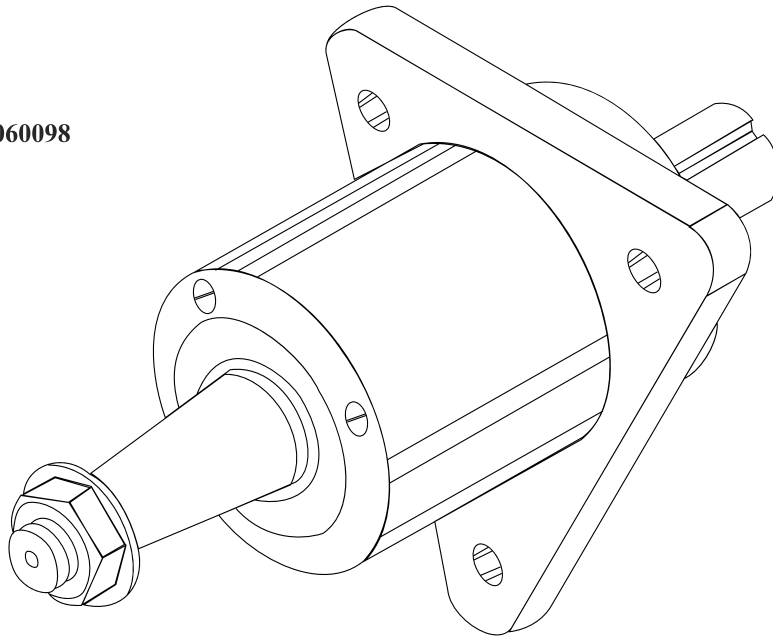


060035

060019

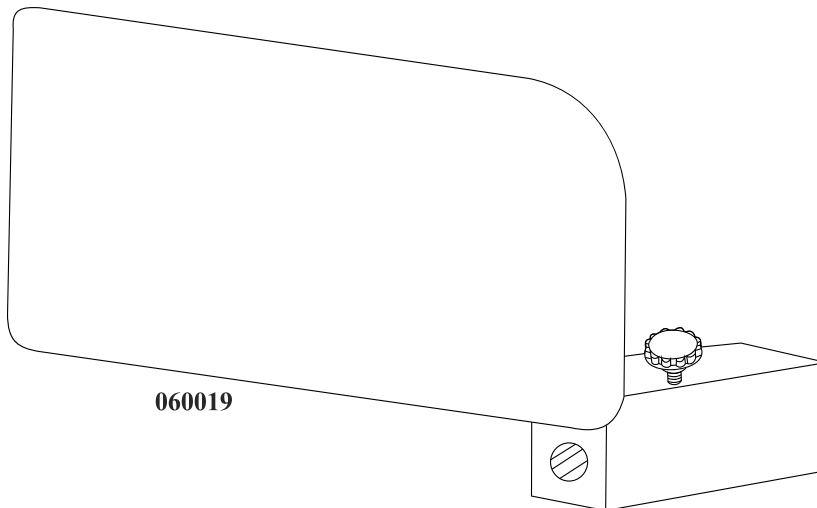


Parts Breakdown

Model BS-VE-3200-T 18943

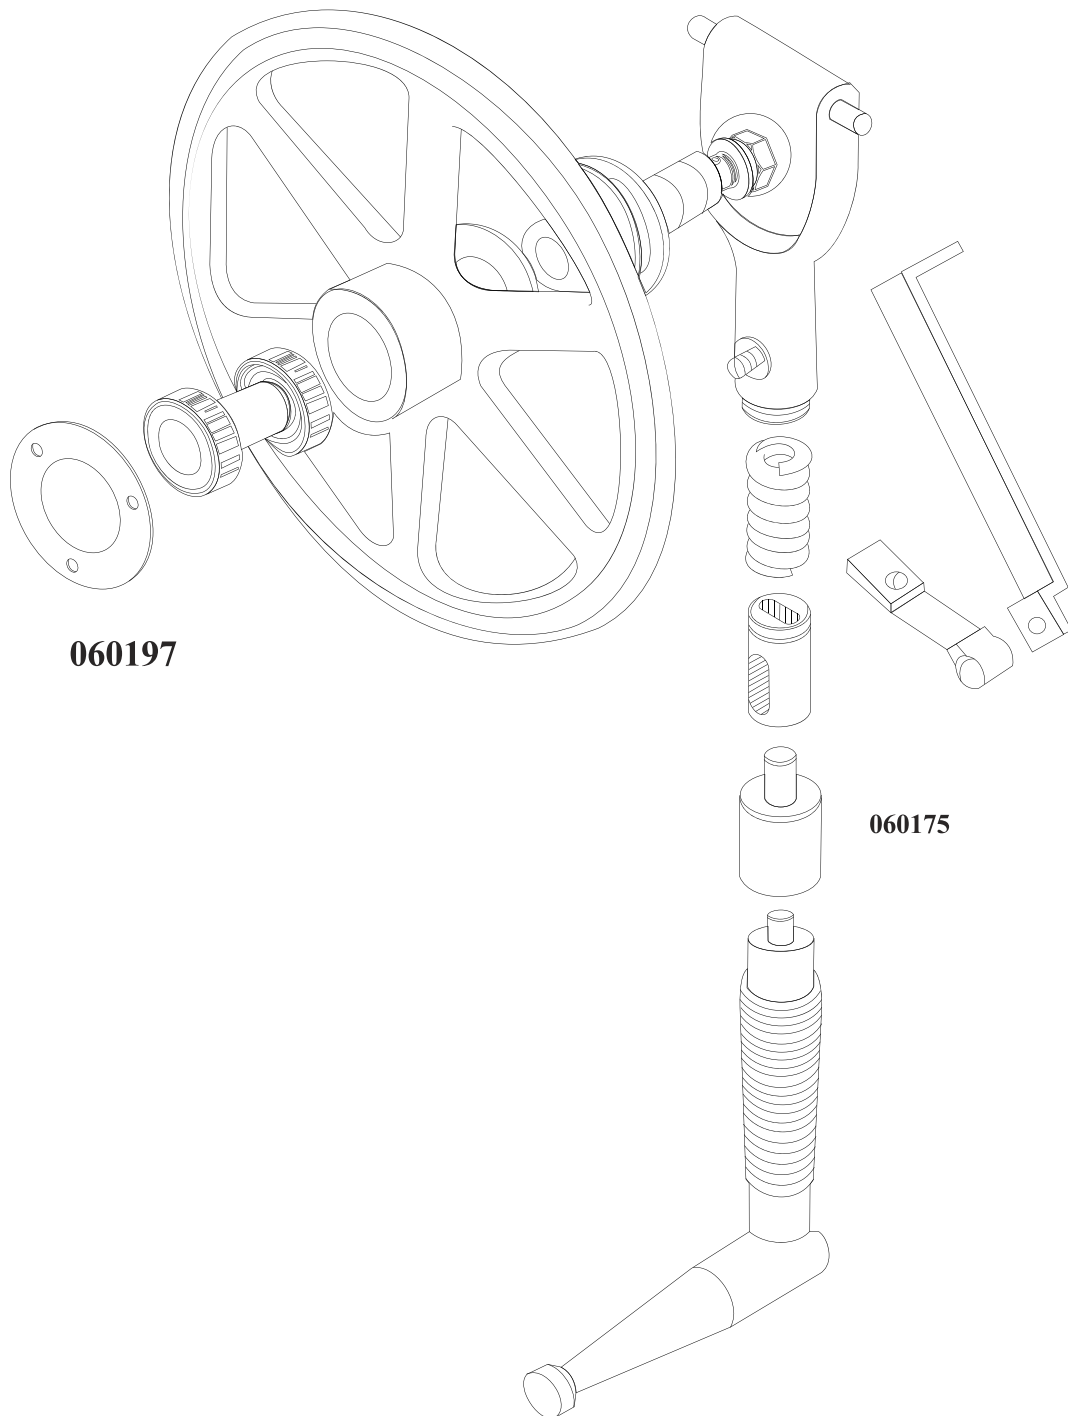


Parts Breakdown

Model **BS-VE-3200-T** 18943

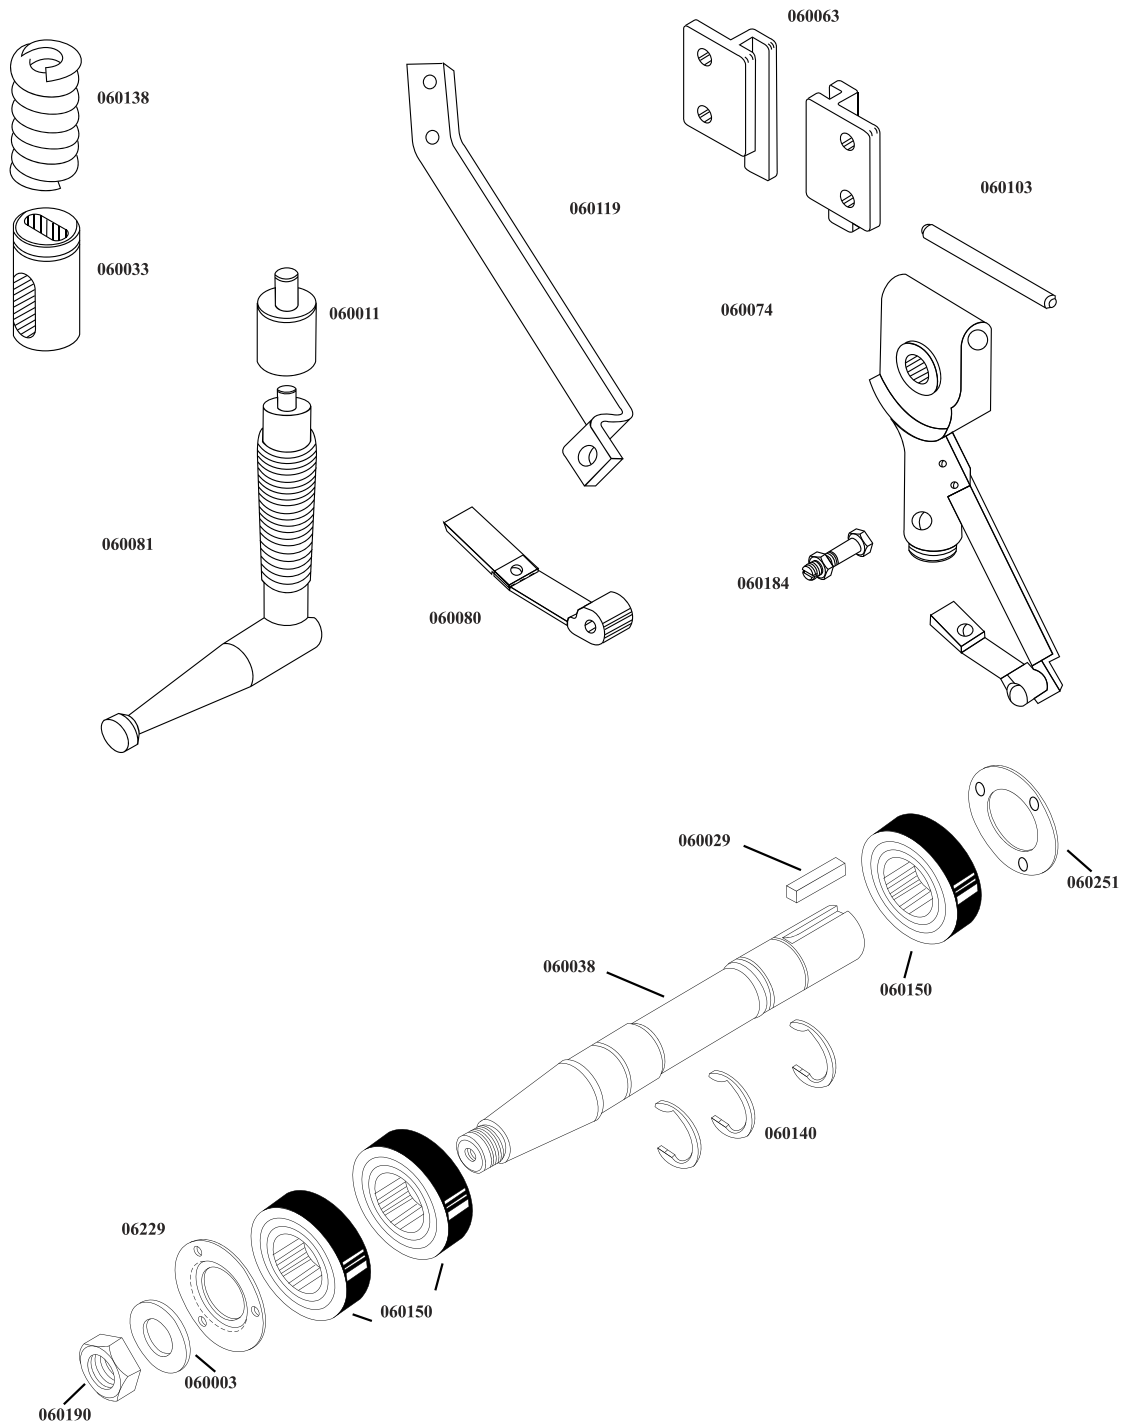


Parts Breakdown

Model **BS-VE-3200-T** 18943

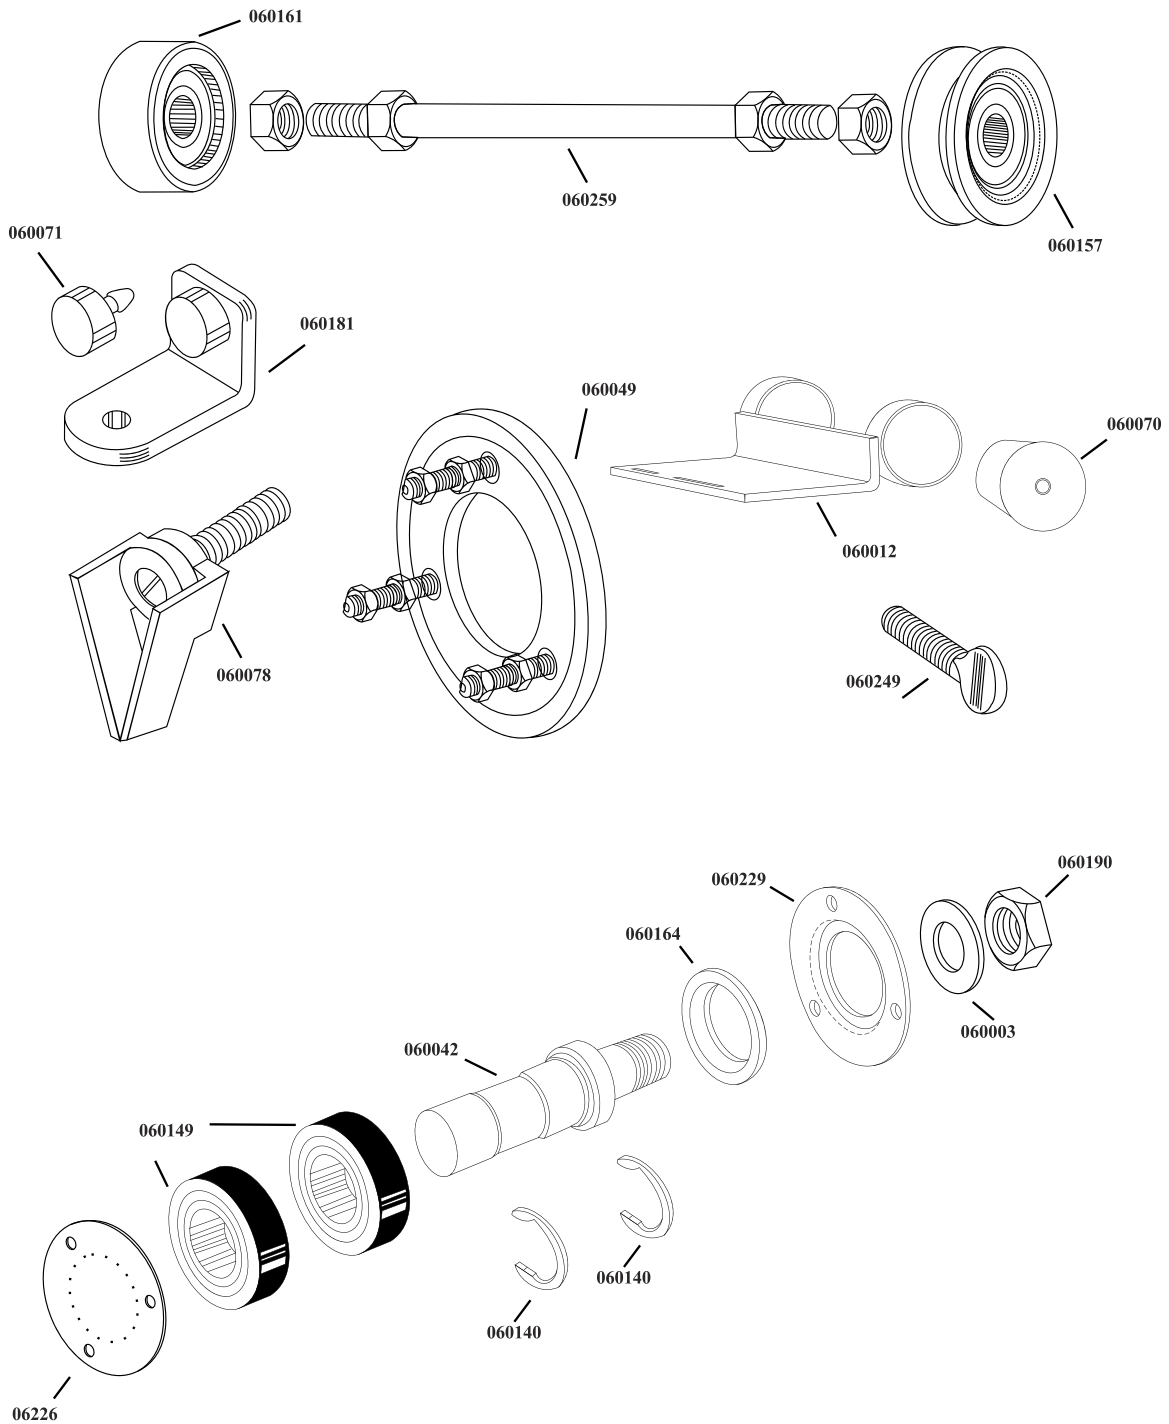


Parts Breakdown

Model **BS-VE-3200-T** 18943

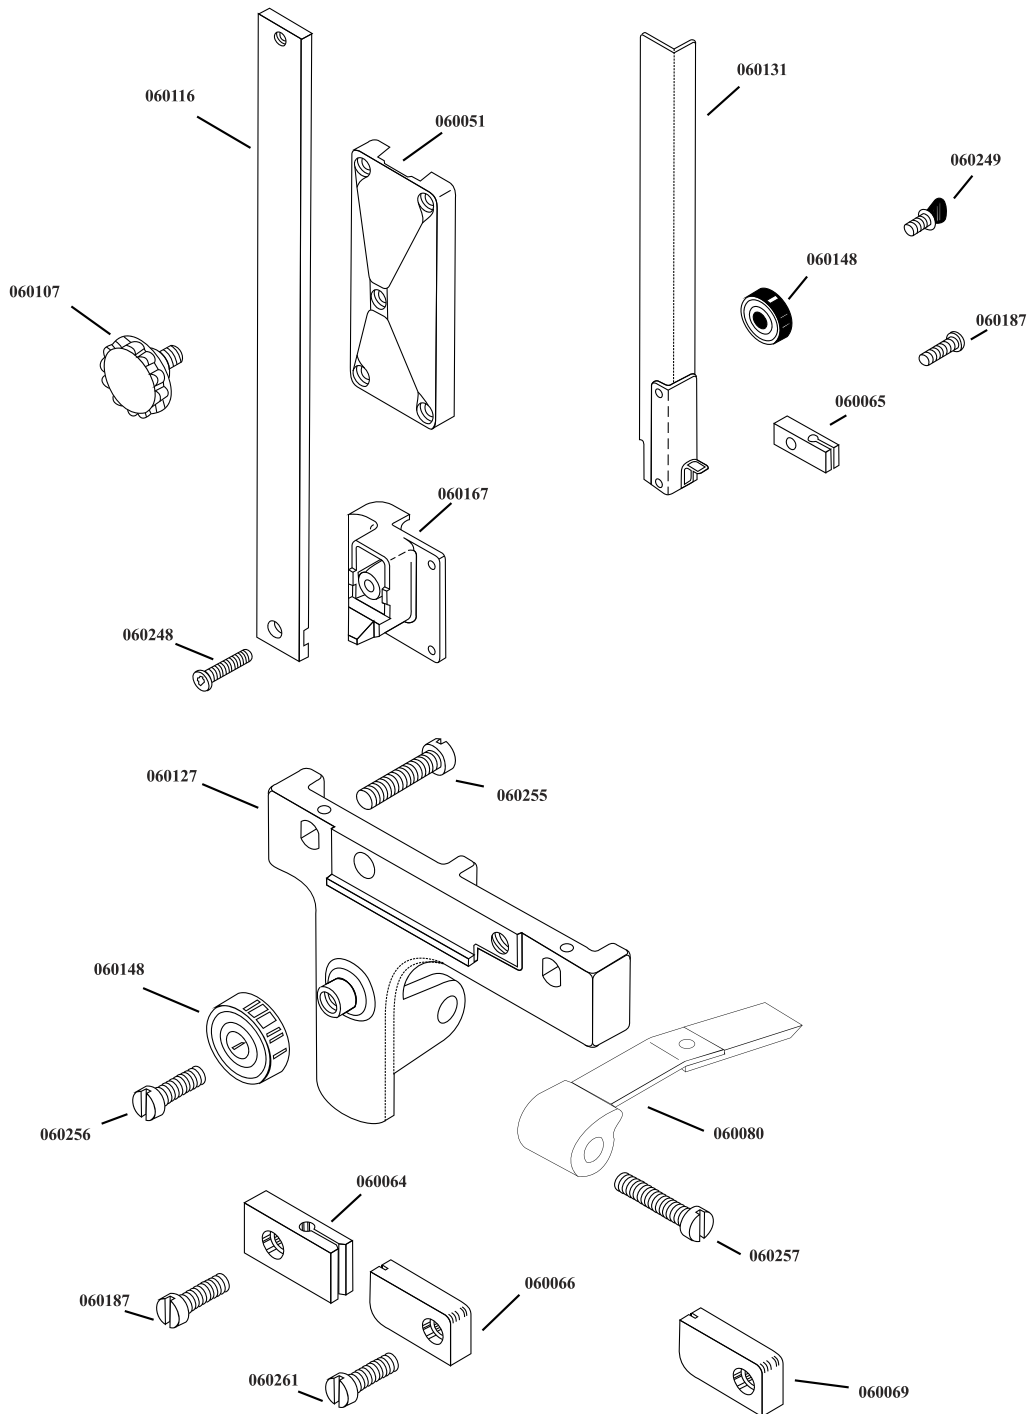


Parts Breakdown

Model BS-VE-3200-T 18943

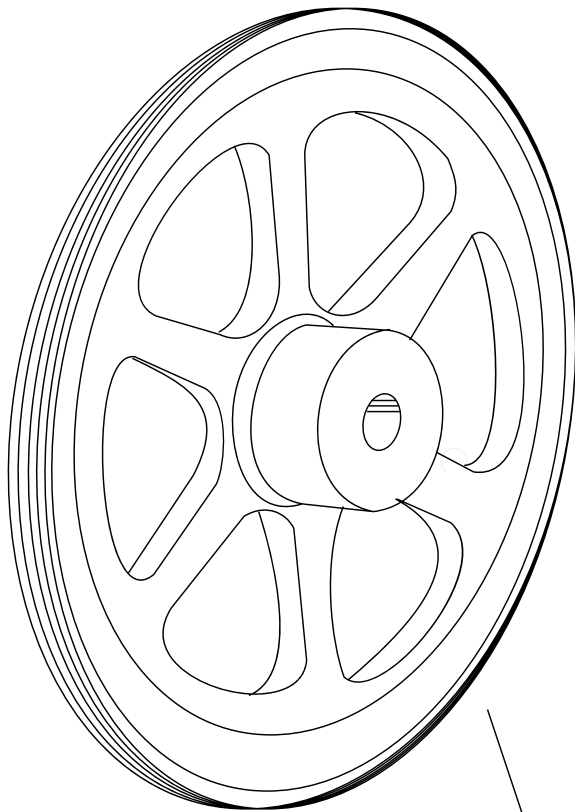

060193
060209

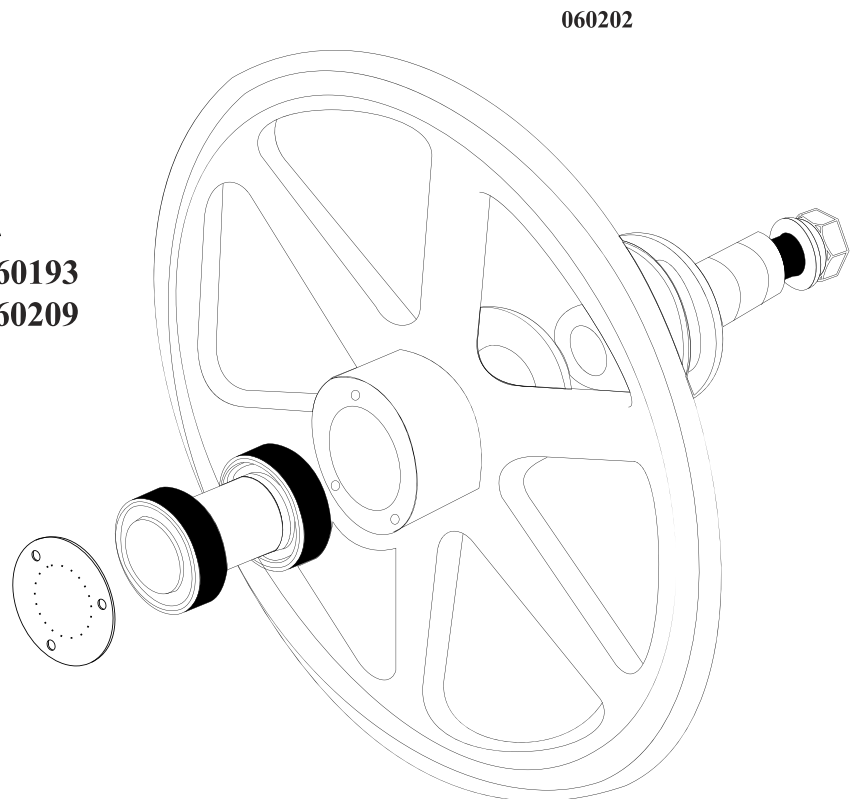


060202


Parts Breakdown

Model BS-VE-3200-T 18943


060239

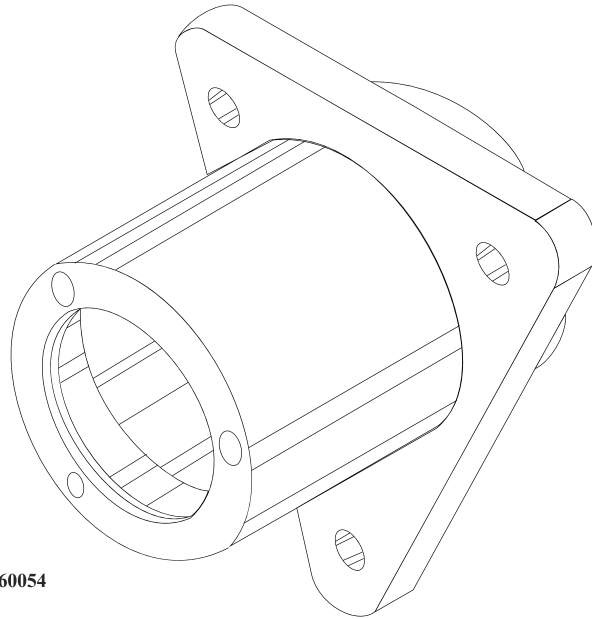

060054

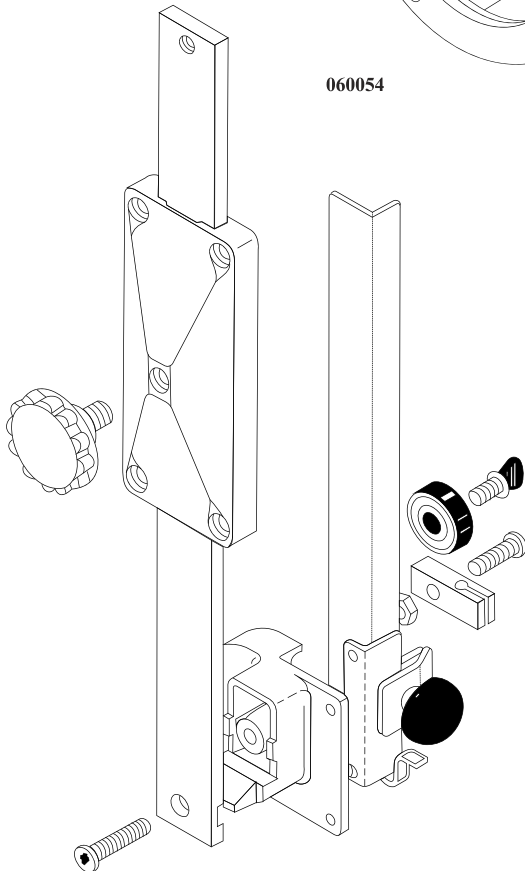

060128

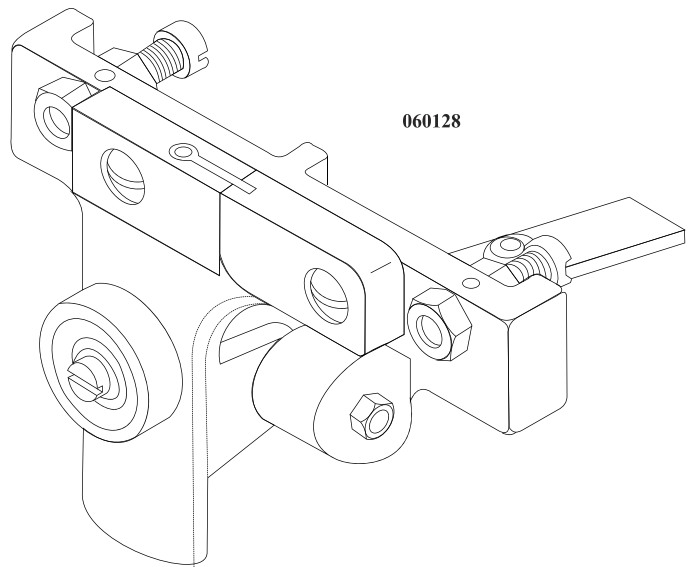



Parts Breakdown

Model BS-VE-3200-T 18943

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
62199	Front Cover for Steering Wheel for 18943	06226	24156	Scraper Bracket for 18943	060074	AJ916	Complete Strap with Iron Handle for 18943	060175
64825	Steel Cover for Steering Shaft for 18943	06229	62201	Switch for 18943	060076	62197	Complete Car Iron Wheel for 18943	060181
45115	Washer for 18943	060003	17707	Scraper for 18943	060078	24155	Bolt for 18943	060184
AJ917	Metal Tray for 18943	060009	17708	Scraper for 18943	060080	26129	Long Screw for Aluminum Guide for 18943	060187
62185	Base with Facial Steel Roller or Iron for 18943	060011	62186	Steel Handle for 18943	060081	44012	Lower Shaft Nut for 18943	060190
62152	Motor Base for 18943	060012	44013	Micro Switch for 18943	060089	64564	Lower Flywheel for 18943	060193
62061	Long Door Hinge for 18943	060014	64585	Complete Aluminum Housing for 18943	060098	62206	Complete Upper Cylindrical Flywheel for 18943	060197
62210	Full Arm Shield for 18943	060019	24154	Pin for 18943	060103	62206	Complete Upper Cylindrical Flywheel for 18943	060202
23716	Belt for 18943	060027	62078	Tightening Knob for 18943	060107	24137	Pulley for 18943	060209
45116	Pin for 18943	060029	16869	Knob for 18943	060108	62204	Motor Tension Screw for 18943	060222
62184	Spacer for 18943	060033	64592	Upper Steel Guide for 18943	060116	17717	Cover for 18943	060229
62209	Arm Shaft for 18943	060035	62188	Flywheel Scraper Holder for 18943	060119	62200	Aluminum Housing for 18943	060239
24135	Shaft for 18943	060038	62203	Motor Pulley for 18943	060124	62099	Door Hinge for 18943	060245
24139	Shaft for 18943	060042	45066	Guide for 18943	060127	62102	Front Plate Screw for 18943	060248
62205	Steel Square Brackets for 18943	060048	23718	Guide Assembly for 18943	060128	64570	Tension Screw for 18943	060249
62065	Aluminum Flange for 18943	060049	62193	Blade Protector for 18943	060131	17719	Cover for 18943	060251
62066	Aluminum Front for 18943	060051	AL385	Complete Box + Start & Stop Button for 18943	060134	31436	Housing (Box) only for Switch for 18943	060252
62207	Complete Front Plate for 18943	060054	62132	Hairpin Spring for 18943	060138	16873	Start Switch (Green Button) for 18943	060253
62170	Steel Door Hook for 18943	060062	17711	Clip for 18943	060140	16874	Stop Switch for 18943	060254
15587	Fluted Guide Pair for 18943	060063	45067	Bearing 6200 for 18943	060148	62143	Screw for Roller Port Guide for 18943	060255
64593	Lower Steel Guide for 18943	060064	16871	Bearing for 18943	060149	45068	Screw for 18943	060256
64592	Upper Steel Guide for 18943	060065	16872	Bearing 6205-2RS1 for 18943	060150	AJ915	Screw for 18943	060257
26128	Aluminum Guide for 18943	060066	62169	Trapezoidal Flywheel for 18943	060157	62195	Wheel Shaft for 18943	060259
64594	Nylon Guide for 18943	060069	62194	Complete Flat Wheel for 18943	060161	26130	Short Screw for Aluminum Guide for 18943	060261
62151	Motor Base Rubber for 18943	060070	40168	Seal for 18943	060164	64814	Motor 220/60/3 for 18943	
AJ570	Rubber Stopper for 18943	060071	62091	Aluminum Support for 18943	060167			