


Parts Breakdown

Model CE-CN-0034MV 37963

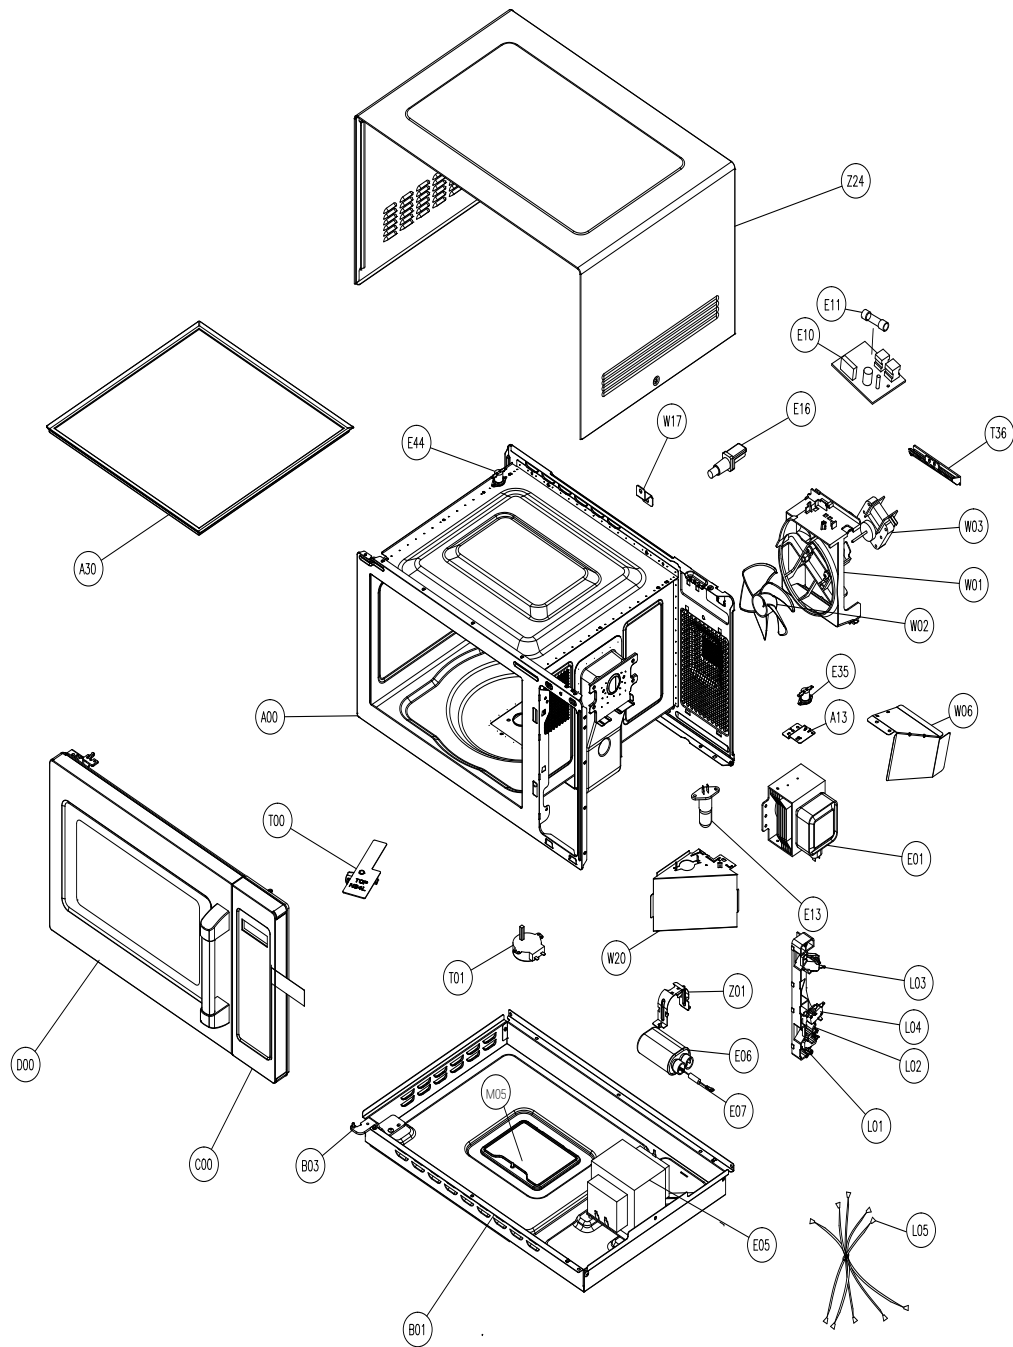



Parts Breakdown

Model CE-CN-0034MV 37963

Item No.	Description	Position	Item No.	Description	Position
AX189	CASE OUT FOR MICROWAVE 37962, 37963	Z24	AX221	FILTER NOISE FOR MICROWAVE 37962, 37963	E10
AX250	METAL WIND GUIDE COVER FOR MICROWAVE 37963	W20	AX220	FUSE FOR MICROWAVE 37962, 37963	E11
AX251	MOUNTING PLATE FOR MICROWAVE 37963	W17	AX222	HIGH VOLTAGE DIODE FOR MICROWAVE 37962, 37963	E07
AX192	DAMPER FOR MICROWAVE 37962, 37963	W06	AX223	HIGH VOLTAGE CAPACITOR FOR MICROWAVE 37962, 37963	E06
AX193	MOTOR FAN FOR MICROWAVE 37962, 37963	W03	AX224	HIGH VOLTAGE TRANSFORMER FOR MICROWAVE 37962, 37963	E05
AX194	FAN FOR MICROWAVE 37962, 37963	W02	AX219	LAMP FOR MICROWAVE 37962, 37963	E13
AX195	GUIDE FAN FOR MICROWAVE 37962, 37963	W01	AX225	MAGNETRON FOR MICROWAVE 37962, 37963	E01
AX252	ASSEMBLY STIRRER FOR MICROWAVE 37963	T00	AX244	DOOR FOR MICROWAVE 37962, 37963	D00
AX253	SEALING WATER BRKT FOR MICROWAVE 37963	T36	AX249	CONTROL PANEL ASSEMBLY FOR MICROWAVE 37962, 37963	C00
AX197	MOTOR TRAY FOR MICROWAVE 37962, 37963	T01	AX226	HINGE BRACKET ASSEMBLY FOR MICROWAVE 37962, 37963	B03
AX211	HARNESS MAIN FOR MICROWAVE 37962, 37963	L05	AX206	BASE PLANT FOR MICROWAVE 37962, 37963	B01
AX212	HARNESS MAIN FOR MICROWAVE 37962, 37963	L04	AX255	INNER PLATE COVER FOR MICROWAVE 37963	A30
AX213	MICROSWITCH INTERLOCK FOR MICROWAVE 37962, 37963	L03	AX207	ASSEMBLY CAVITY FOR MICROWAVE 37962, 37963	A00
AX214	LEVEL SWITCH FOR MICROWAVE 37962, 37963	L02	AX256	THERMOSTAT BRKT FOR MICROWAVE 37963	A13
AX215	BOARD LATCH FOR MICROWAVE 37962, 37963	L01	AX191	HOLDER H.V.C FOR MICROWAVE 37962, 37963	Z01
AX216	THERMOSTAT 160°C/95°C FOR MICROWAVE 37962, 37963	E35	AX217	POWER CORD ASSEMBLY FOR MICROWAVE 37962, 37963	E16
AX254	THERMOSTAT 120°C/0°C FOR MICROWAVE 37963	E44			

Parts Breakdown

Model CE-CN-0034MV 37963

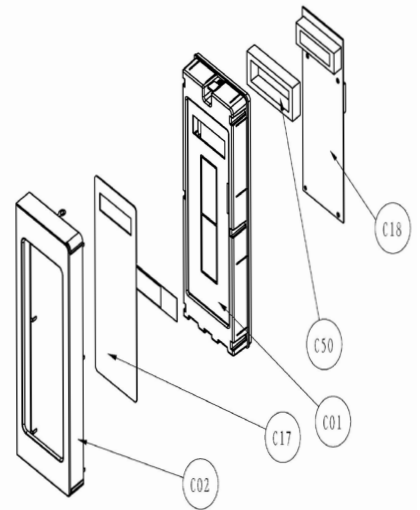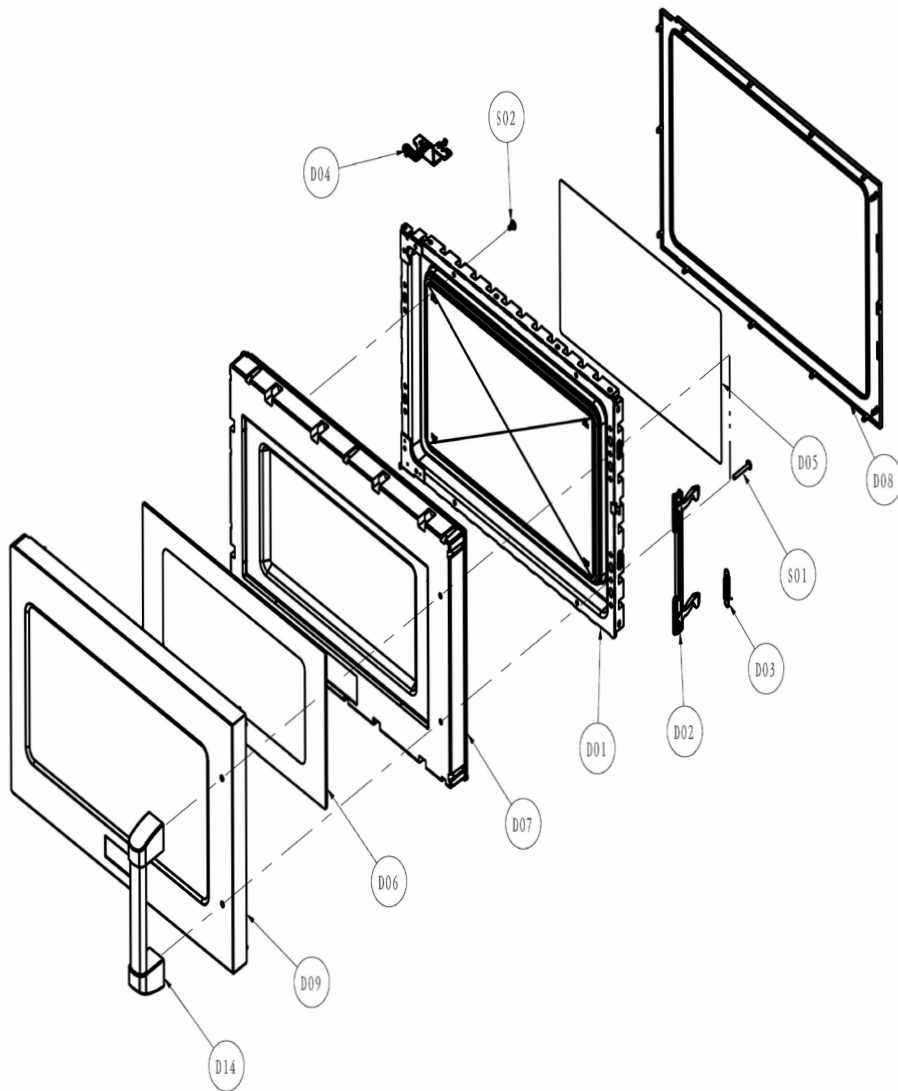

Parts Breakdown

Model CE-CN-0034MV 37963

Item No.	Description	Position	Item No.	Description	Position
AX246	SEALING RING FOR MICROWAVE 37962, 37963	C50	AX232	HANDLE FOR MICROWAVE 37962, 37963	D14
AX247	PCB ASSEMBLY FOR MICROWAVE 37962, 37963	C18	AX257	METAL DOOR DECO FOR MICROWAVE 37962	D09
AX238	MEMBRANE SWITCH FOR MICROWAVE 37962, 37963	C17	AX234	DOOR GASKET FOR MICROWAVE 37962, 37963	D08
AX239	CONTROL PANEL DECORATION FOR MICROWAVE 37962, 37963	C02	AX235	DOOR PANEL FOR MICROWAVE 37962, 37963	D07
AX248	CONTROL PANEL FOR MICROWAVE 37962, 37963	C01	AX236	DOOR SCREEN FOR MICROWAVE 37962, 37963	D06
AX210	SCREW CT3*8BBHC FOR MICROWAVE 37962, 37963	S01	AX237	DOOR INNER FILM FOR MICROWAVE 37962, 37963	D05
AX209	SCREW ST3*8PWBHC FOR MICROWAVE 37962, 37963	S02	AX240	UPPER HINGE FOR MICROWAVE 37962, 37963	D04
AX241	LATCH SPRING FOR MICROWAVE 37962, 37963	D03	AX242	LATCH FOR MICROWAVE 37962, 37963	D02
AX243	DOOR FRAME ASSEMBLY FOR MICROWAVE 37962, 37963	D01			