


Parts Breakdown

Model DW-CN-0186 44438

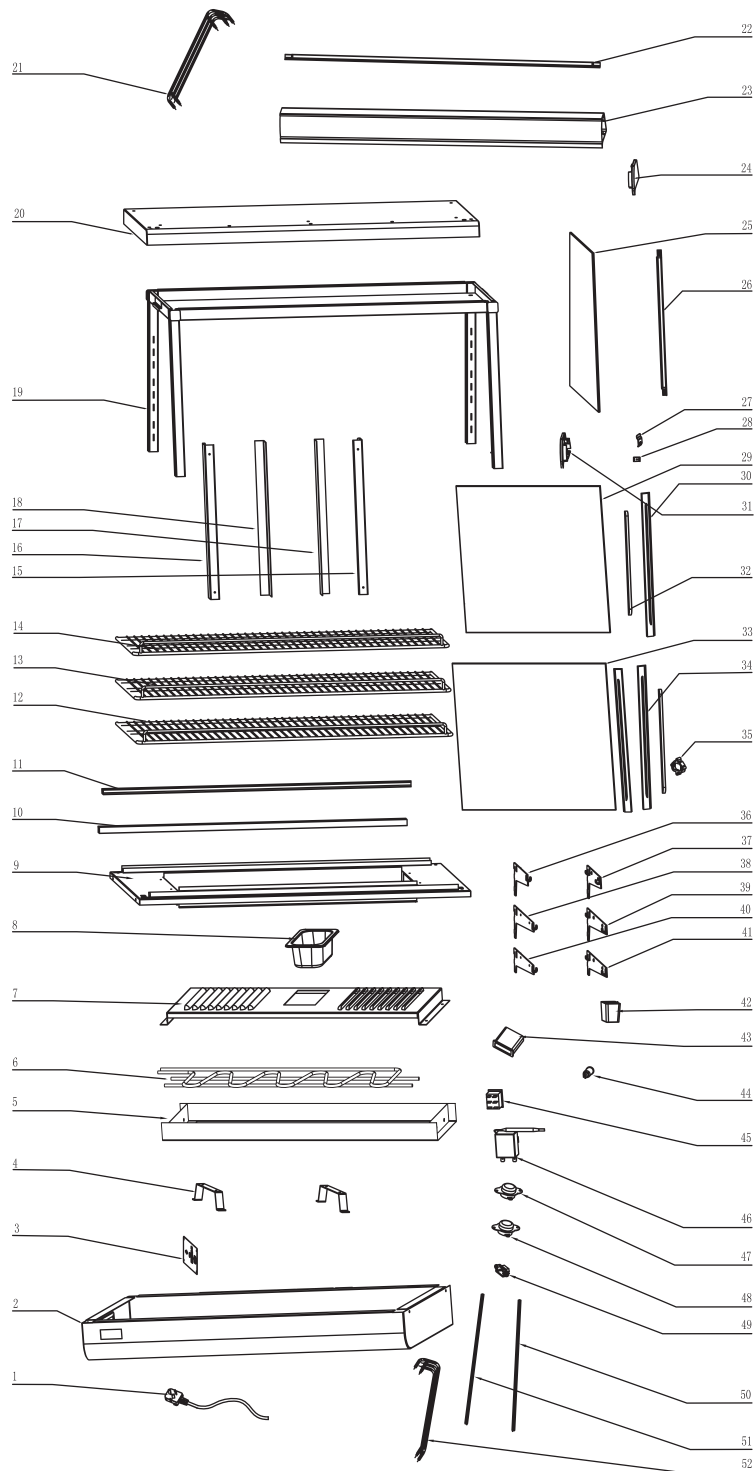

Parts Breakdown

Model DW-CN-0186 44438

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
30621	Power Cord for 44438	1	67345	Cabinet Frame for 44438	19	79336	Right Shelf Bracket for 44438	37
67335	Base for 44438	2	67346	Top Cover for 44438	20	30747	Left Shelf Bracket for 44438	38
67299	Control Panel for 44438	3	70664	Wire Fence Left for 44438	21	30750	Right Shelf Bracket for 44438	39
70647	Bracket for Heater for 44438	4	67347	LED Lights for 44438	22	67313	Bottom Shelf Bracket Left for 44438	40
67336	Tray for Heater for 44438	5	67348	Advertisement Light Box for 44438	23	67314	Bottom Shelf Bracket Right for 44438	41
67337	Heater Element for 44438	6	67312	Side Cover Right for 44438	24	71647	Base Feet for 44438	42
67338	Ventilated Board for 44438	7	67320	Side Glass for 44438	25	70686	Temperature Display for 44438	43
71658	1/9 GN Pan for 44438	8	67332	LED Lighting for 44438	26	60218	Indicator Light for 44438	44
67339	Bottom Panel for 44438	9	67349	Glass Clamp for 44438	27	71644	On/Off Switch (Red) for 44438	45
67340	Front Sliding Slot for 44438	10	67350	Nut for 44438	28	71640	Temperature Thermostat for 44438	46
67341	Back Sliding Slot for 44438	11	67351	Side Cover Left for 44438	29	70862	Thermostat T1/33 for 44438	47
67342	Bottom Shelf for 44438	12	70673	Front Door Knob for 44438	30	70863	Thermostat T1M/33 for 44438	48
67343	Middle Shelf for 44438	13	67308	Side Cover Left for 44438	31	70860	Socket for 44438	49
67344	Upper Shelf for 44438	14	70675	Sheath of Door Knob for 44438	32	70693	Waterproof Strip for 44438	50
67327	Lamp Holder Left for 44438	15	67352	Back Door Glass with Handle for 44438	33	70694	Waterproof Strip for 44438	51
67328	Lamp Holder Right for 44438	16	67353	Back Door Knob for 44438	34	70695	Wire Fence Right for 44438	52
67329	Transparent Lamp Cover Right for 44438	17	71638	Socket A for 44438	35			
67330	Transparent Lamp Cover Left for 44438	18	79322	Left Shelf Bracket for 44438	36			