


Parts Breakdown

Model MS-IT-0330-CE 46163


Base

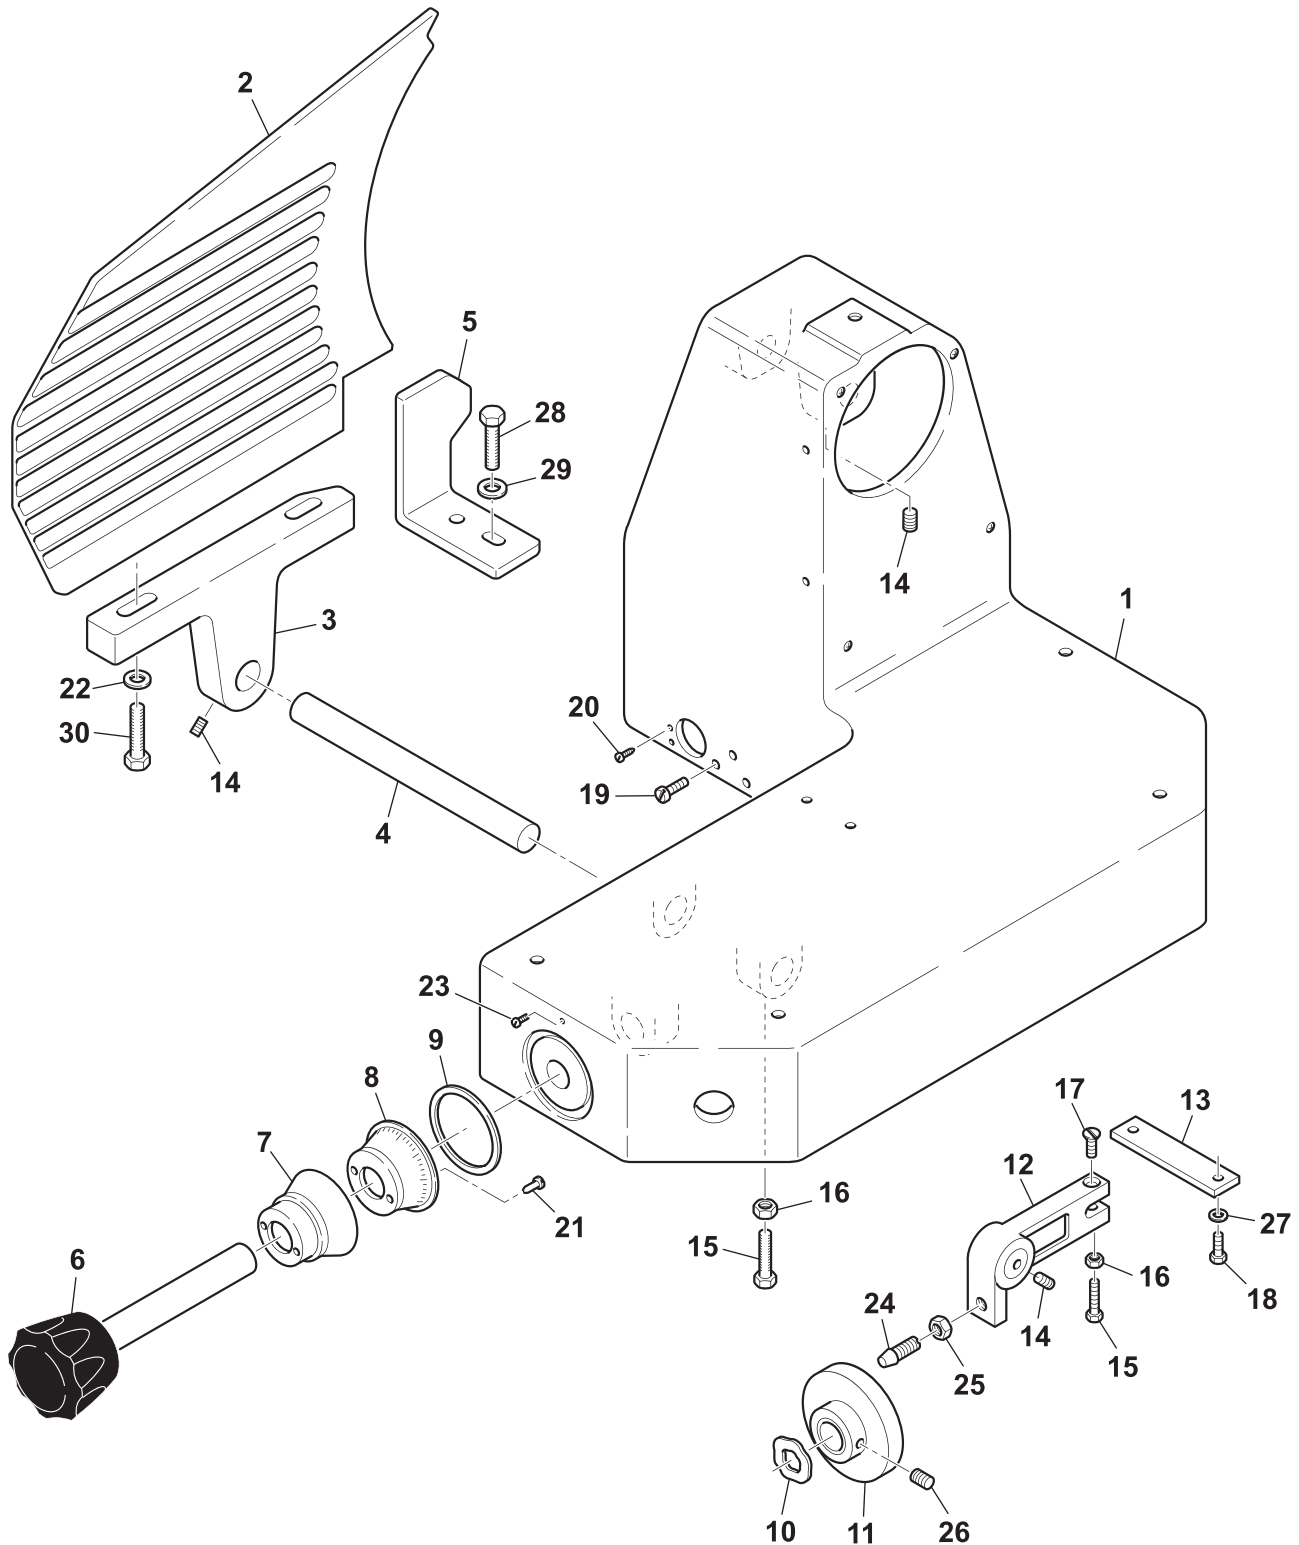

Parts Breakdown

Model MS-IT-0330-CE 46163


Guide

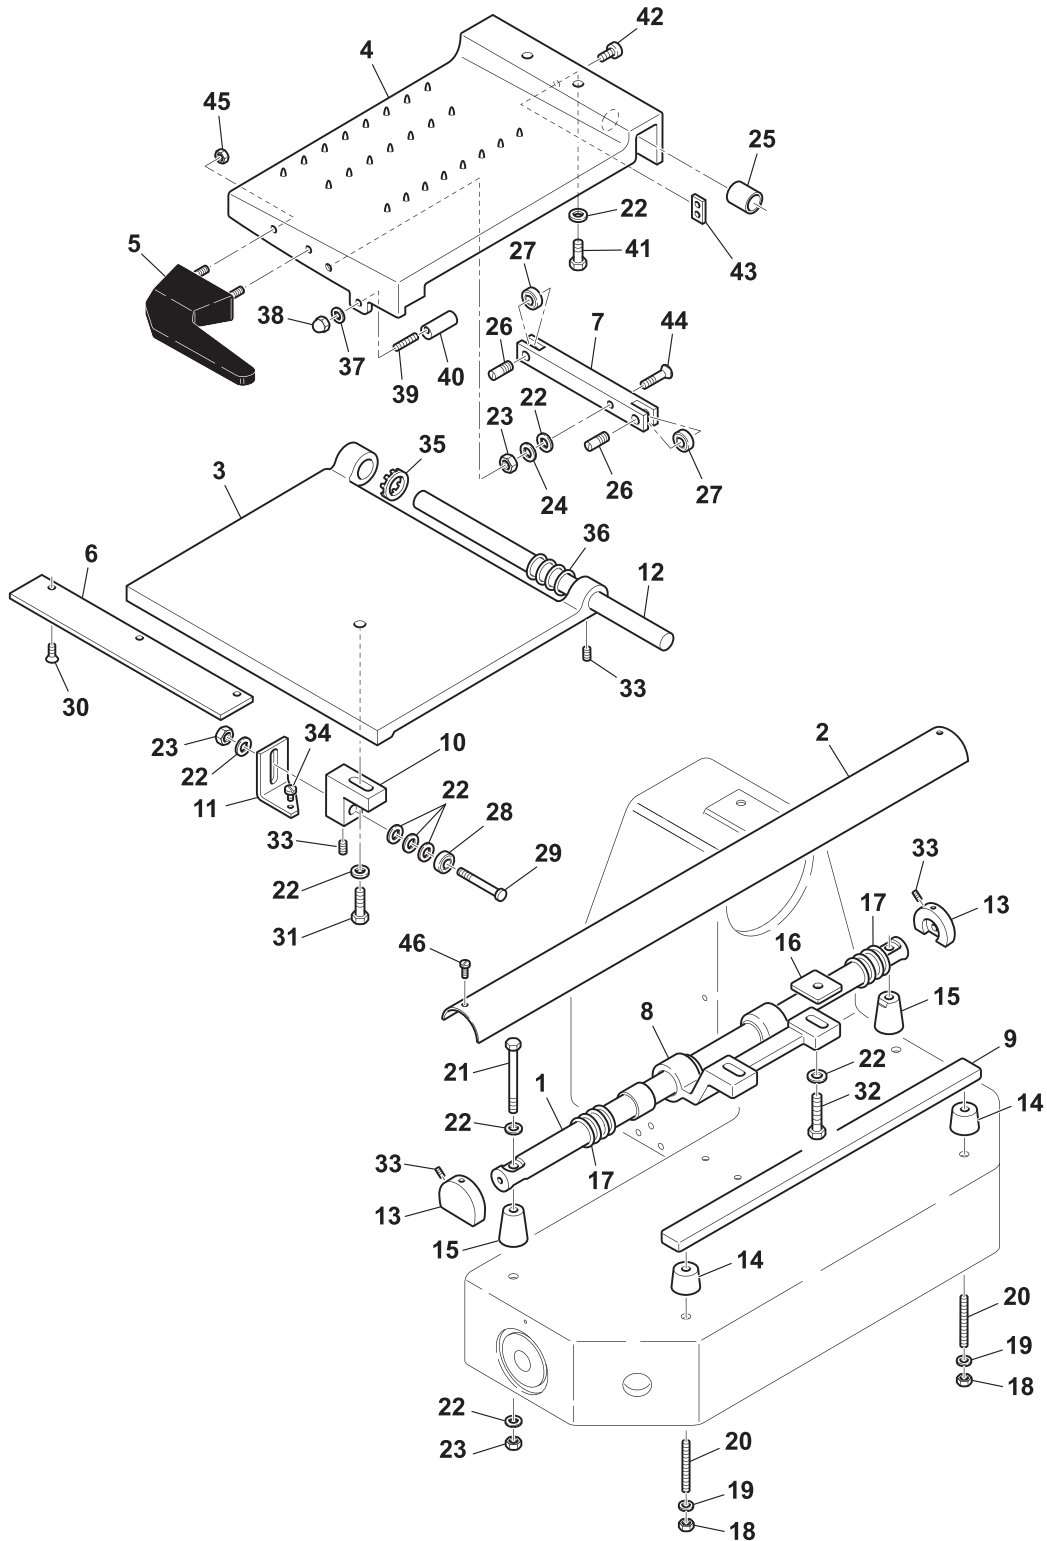

Parts Breakdown

Model MS-IT-0330-CE 46163


Blade

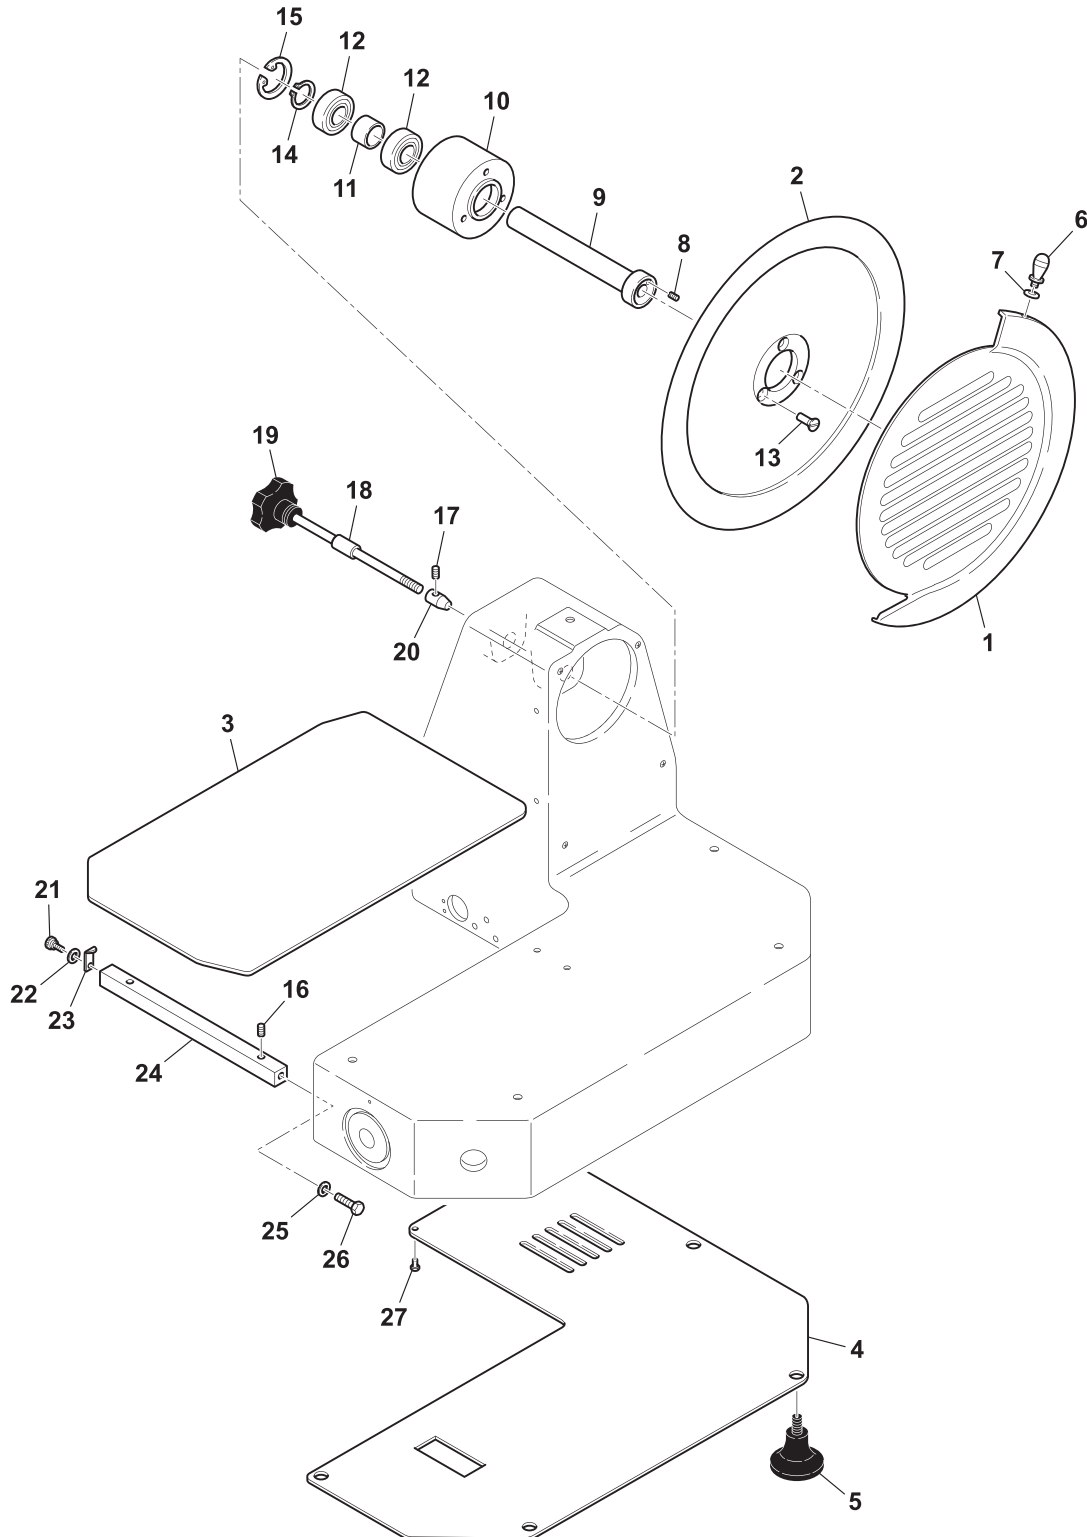

Parts Breakdown

Model MS-IT-0330-CE 46163


Product Grip

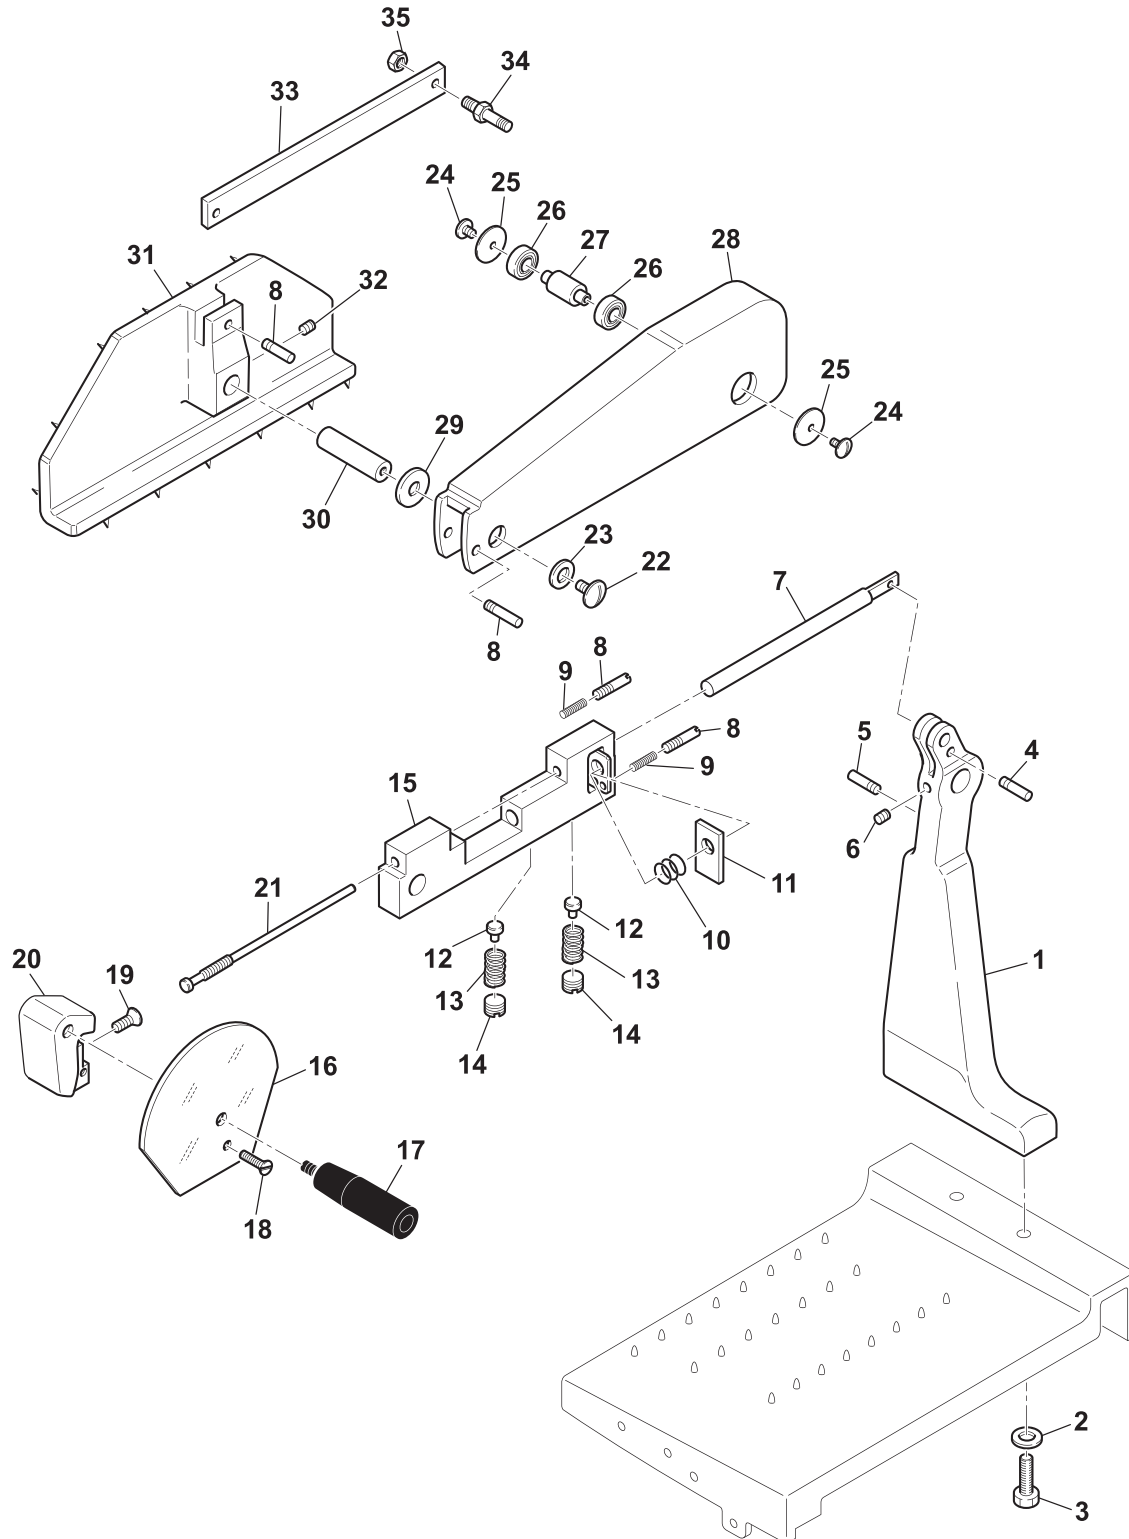

Parts Breakdown

Model MS-IT-0330-CE 46163


Blade Guard

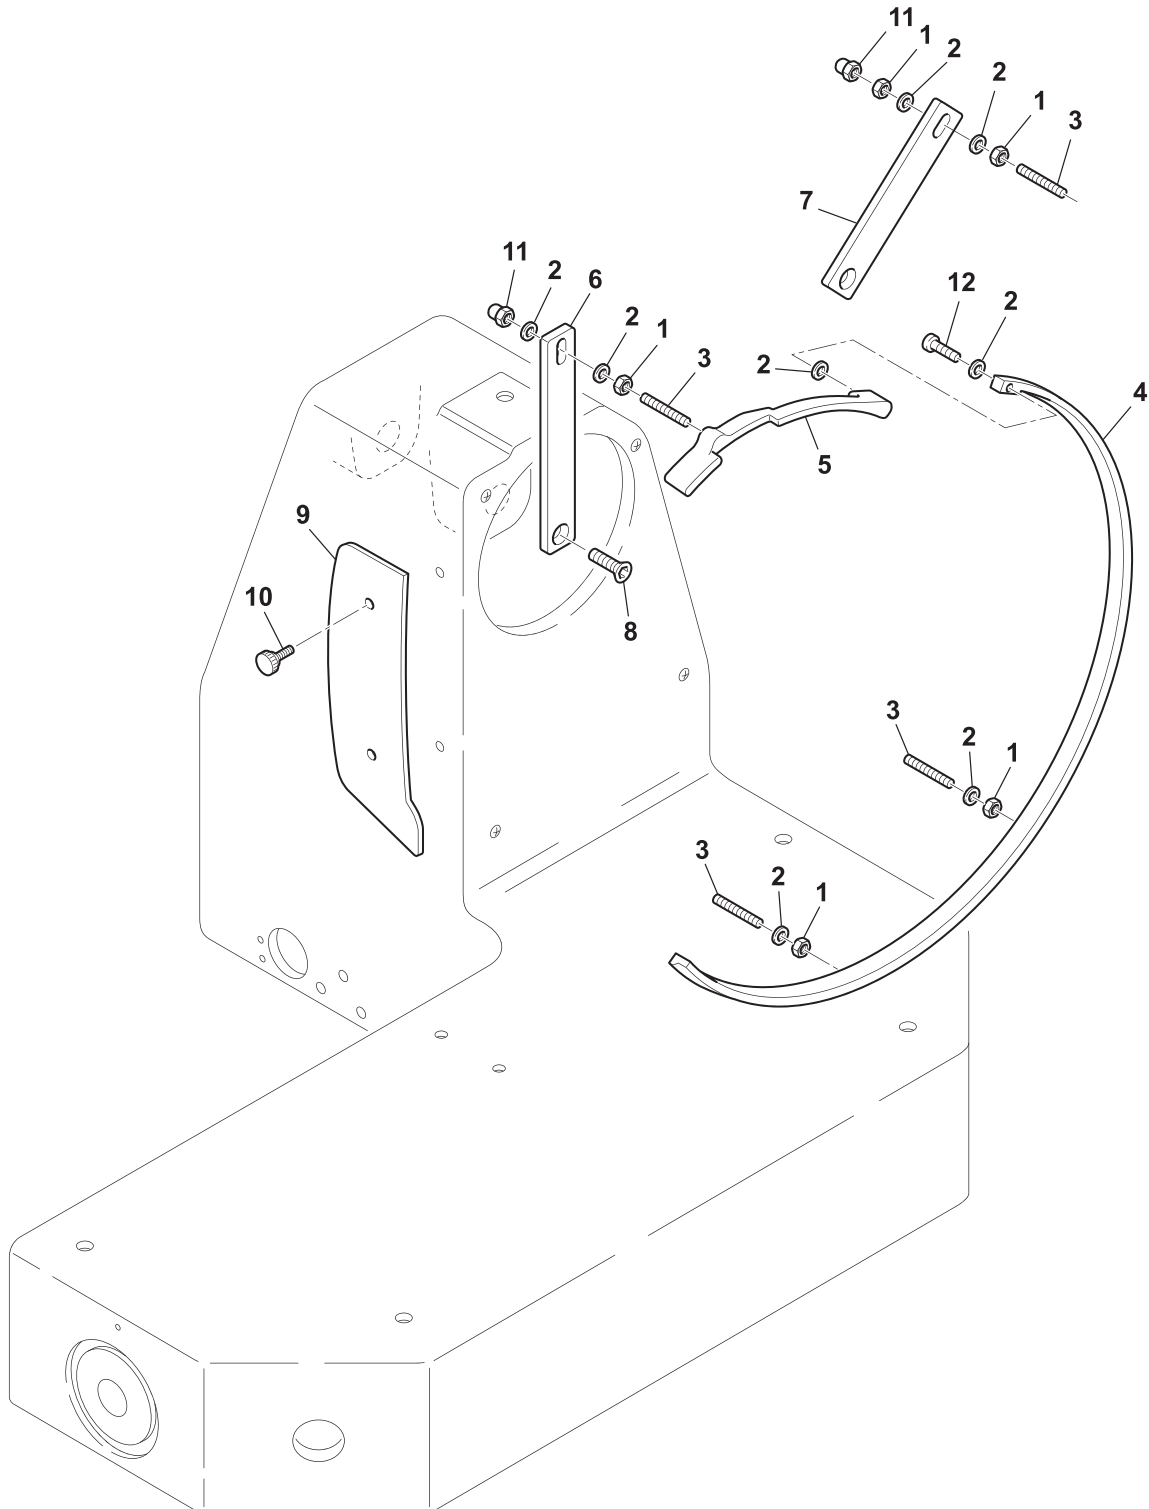

Parts Breakdown

Model MS-IT-0330-CE 46163


Electrical Components

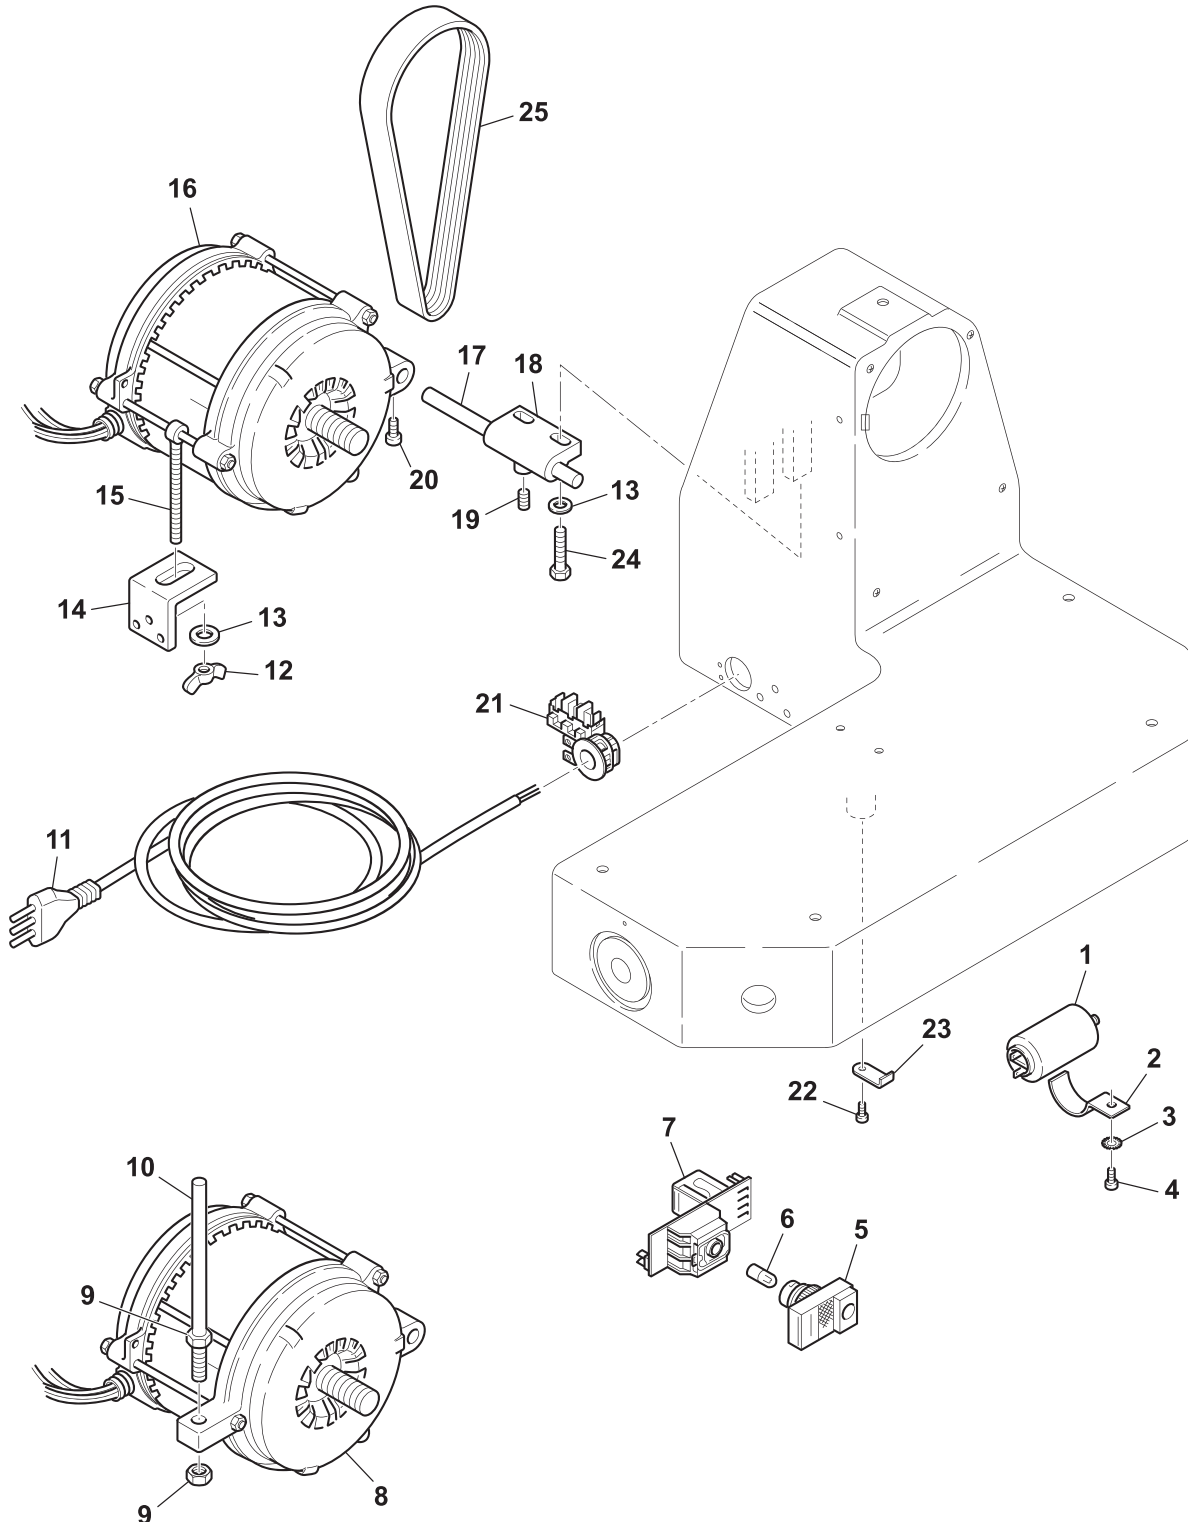

Parts Breakdown

Model MS-IT-0330-CE 46163


Sharpening Assembly

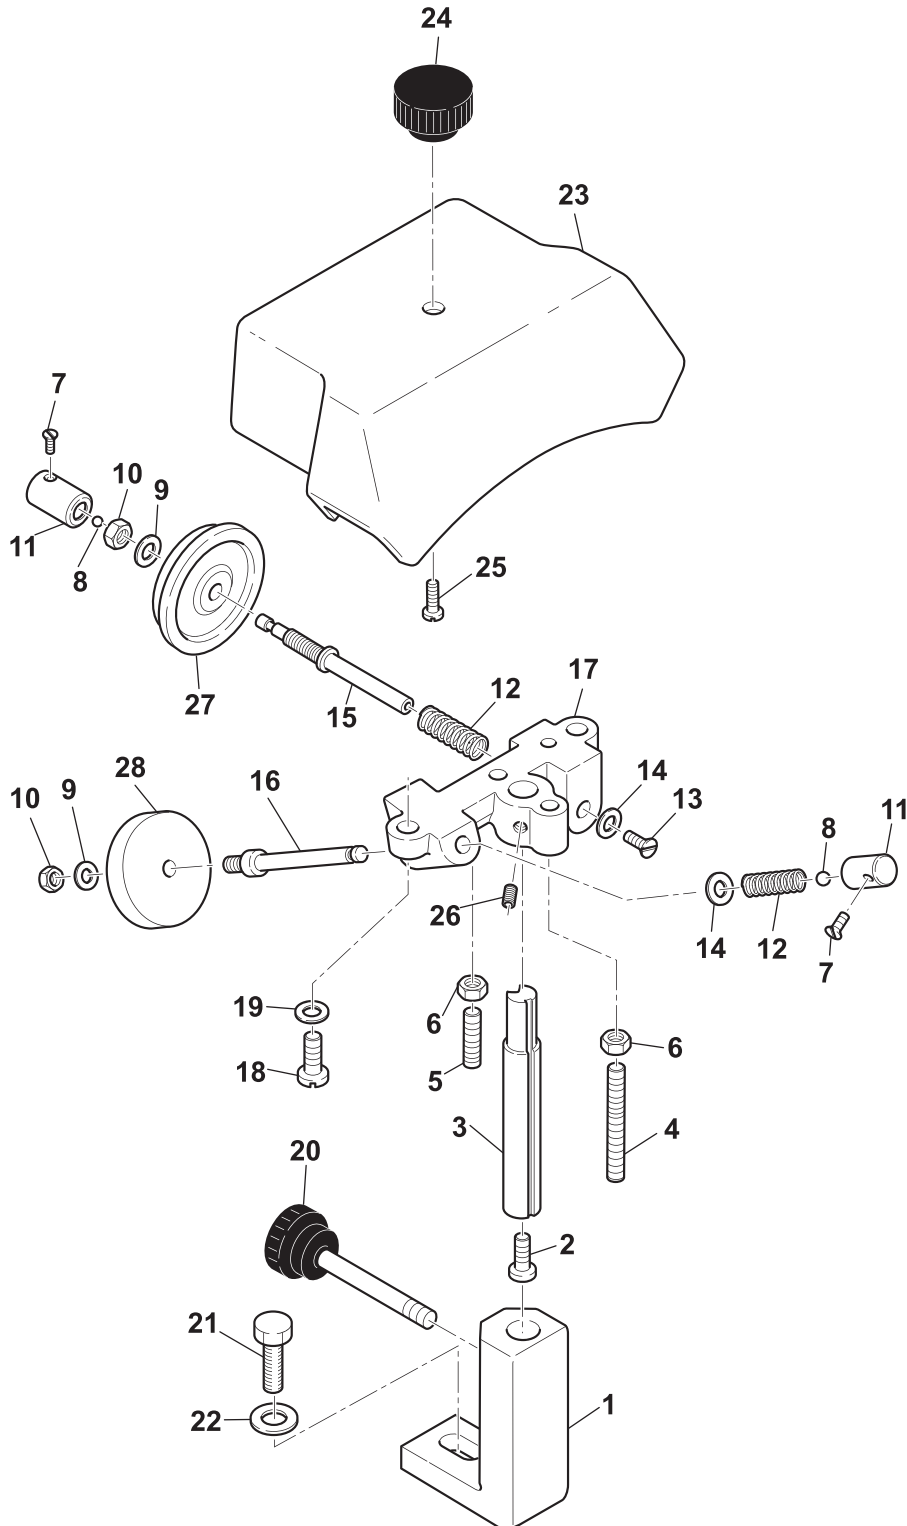

Parts Breakdown

Model MS-IT-0330-CE 46163

Product Holder Assembly

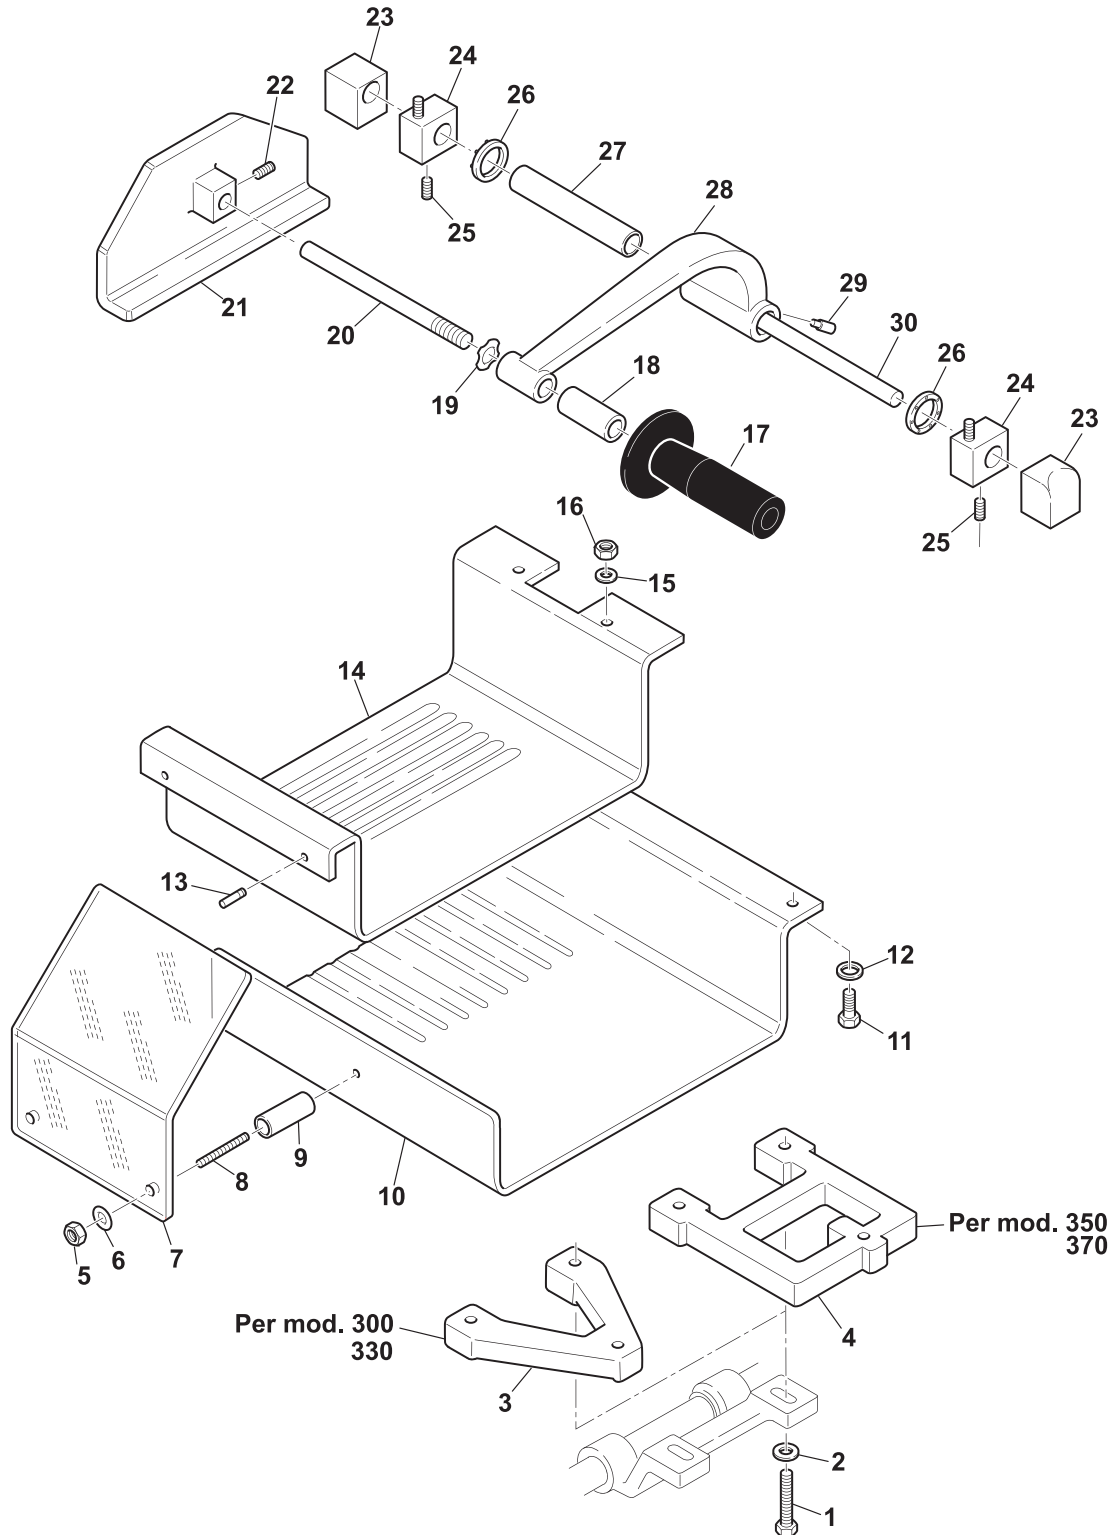

Parts Breakdown

Model MS-IT-0330-CE 46163

Base

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
32103	Housing for 46163	1	AG201	Complete Fork for 46163	12	32122	Washer 8 for 46163	22
32104	Guide Plate for 46163	2	AG202	Group Plate for 46163	13	32123	Copper Rivet for 46163	23
32105	Guide Plate Support for 46163	3	32115	Set Screw 8x10 T C for 46163	14	32124	Set Screw - Capped for 46163	24
32106	Guide Plate Shaft for 46163	4	32116	Bolt 5x20 for 46163	15	32125	Nut 8 for 46163	25
AG199	Ceppetto for 46163	5	32117	Nut 5 for 46163	16	32126	Set Screw 6x8 TP for 46163	26
AG200	Graduated Knob for 46163	6 - 8, 21	32118	Screw TPSV 5x10 for 46163	17	32127	Washer 5 for 46163	27
32109	Index Knob Bushing for 46163	9	32119	Screw TC 5x10 for 46163	18	32128	Screw TE 6x12 for 46163	28
32110	Wavy Washer for 46163	10	32120	Screw TE 6x12 for 46163	19	32129	Washer 6 for 46163	29
32111	Cam for 46163	11	32121	Tapping Screw 2.9x12 for 46163	20	32130	Screw TE 8x40 for 46163	30

Guide

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AG203	Round Bar for 46163	1	32147	Slide Bar Spring for 46163	17	32163	Set Screw 5x8 T C for 46163	33
32132	Slide Bar Cover for 46163	2	32148	Nut 6 for 46163	18	AG208	Screw TE for 46163	34
32133	Bottom Plate for 46163	3	32149	Washer 6 for 46163	19	32165	Rubber Washer 15 for 46163	35
32134	Top Plate for 46163	4	32150	Set Screw 6x30 for 46163	20	32166	Carriage Plate Spring for 46163	36
32135	Carriage Handle for 46163	5	32151	Screw TE 8x40 for 46163	21	32167	Washer 5 for 46163	37
32136	Flat Bar for 46163	6	32152	Washer 8 for 46163	22	32168	Acorn Cap for 46163	38
32137	Bearing Support Bar for 46163	7	32153	Nut 8 for 46163	23	32169	Set Screw 5x20 TP for 46163	39
32138	Carriage Support for 46163	8	32154	Washer 8 for 46163	24	32170	Set Screw PVC for 46163	40
32139	Carriage Rail for 46163	9	32155	Bushing for 46163	25	32171	Screw TE 8x20 for 46163	41
AG154	Underplate Pipette for 46163	10	32156	Set Screw 6x12 for 46163	26	AG209	Screw TPSV 4x10 for 46163	42
AG204	Plate Supp Bearing for 46163	11	AG206	Bearing 626 for 46163	27	32173	Flat Latch for 46163	43
32142	Carriage Plate Rod for 46163	12	AG207	Bearing 608 for 46163	28	32174	Thread Stud 8 for 46163	44
AG205	Round Bar Cover for 46163	13	32159	Bearing Pin 8 for 46163	29	32175	Nut 6 for 46163	45
32144	Rail Support for 46163	14	32160	Screw TPSV 5x10 for 46163	30	32176	Screw TC 4x5 for 46163	46
32145	Slide Bar Support for 46163	15	32161	Screw TE 8x20 for 46163	31			
32146	Spacer Plate for 46163	16	32162	Screw TE 8x25 for 46163	32			

Parts Breakdown

Model MS-IT-0330-CE 46163

Blade

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
17857	Blade Shield for 46163	1	32186	Pulley for 46163	10	32194	Tie Rod for 46163	19
44857	Blade 330 40-3-270 for 46163	2	32187	Bearing Spacer for 46163	11	32195	Tie Rod Spacer for 46163	20
32179	Aluminum Plate for 46163	3	AG212	Bearing 6004 2RS for 46163	12	32196	Thumb Screw for 46163	21
31958	Bottom Cover for 46163	4	AG213	Screw TPSV for 46163	13	32197	Washer for 46163	22
32181	Foot for 46163	5	32189	Clip for 46163	14	32198	Plate Stop for 46163	23
AG210	Knife Knob for 46163	6	32190	Clip for 46163	15	32199	Support Rail for 46163	24
32183	Washer 4 for 46163	7	32191	Set Screw for 46163	16	32200	Washer 8 for 46163	25
32184	Set Screw 5x8 TP for 46163	8	32192	Set Screw 6x8 TC for 46163	17	32201	Screw TE 8x20 for 46163	26
AG211	Spindle Pin for 46163	9	32193	Set Screw PVC for 46163	18	32202	Tapping Screw for 46163	27

Product Grip

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
32203	Support for Pusher Arm for 46163	1	32215	Spring 9x15 for 46163	13	32227	Washer 4x25 for 46163	25
32204	Washer 8 for 46163	2	AG215	Bead for 46163	14	AG218	Bearing 608 ZZ for 46163	26
32205	Screw TE 8x20 for 46163	3	32217	Presser Brake for 46163	15	32229	Bearing Spindle for 46163	27
32206	Set Screw 5x20 for 46163	4	AG216	Plexiglass Paradite for 46163	16	32230	Pusher Arm for 46163	28
32207	Set Screw 5x16 for 46163	5	32219	Meat Grip Handle for 46163	17	32231	PVC Washer 15x25 for 46163	29
32208	Set Screw 6x8 TC for 46163	6	32220	Screw TPSV 4x10 for 46163	18	32232	Presser Spacer for 46163	30
32209	Rod Brake for 46163	7	32221	Screw TPSV 45x12 for 46163	19	AG219	Meat Press for 46163	31
32210	Set Screw 6x19 for 46163	8	32222	Presser Handle Bracket for 46163	20	32234	Set Screw 6x6 TC for 46163	32
32211	Spring 3.5x19 for 46163	9	AG217	Astina C/Seiger SBL BRA PRES for 46163	21	AG220	Meat Presser Rod for 46163	33
32212	Spring 13.5x10 for 46163	10	32224	Screw Chrome for 46163	22	32236	Hex Pin 8x31 for 46163	34
32213	Iron Plate for 46163	11	32225	Washer 8 for 46163	23	32237	Locking Nut for 46163	35
AG214	Brake Pin for 46163	12	32226	Screw TPSV 4x10 for 46163	24	AG221	Complete Arm 330 for 46163	

Blade Guard

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
32239	Nut 5 for 46163	1	32243	Safety Ring Extension for 46163	5	AG222	Parafette for 46163	9
32240	Washer 5 for 46163	2	32244	Support Ring for 46163	6	32248	Thumb Screw 5 MA for 46163	10
32241	Set Screw 54x30 5x25 for 46163	3	32245	Support Ring for 46163	7	32249	Acorn Cap for 46163	11
32242	Ring for 46163	4	32246	Set Screw 6x12 for 46163	8			

Parts Breakdown

Model MS-IT-0330-CE 46163

Electrical Components

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AG223	Capacitor 300/8 350/6.3 for 46163	1	32257	Wing Nut for 46163	12	32264	Screw TC 4x10 for 46163	20
32251	Capacitor Bracket for 46163	2	32258	Washer 6 A Wide for 46163	13	32265	Terminal Block for 46163	21
32252	Washer 5 for 46163	3	32259	Motor Bracket for 46163	14	32266	Tapping Screw for 46163	22
32253	Screw 5x10 T C for 46163	4	32260	Adjustment Rod for 46163	15	32267	Stop Plate for 46163	23
AG224	Switch for 46163	5 - 7	32261	Motor Support Shaft for 46163	17	AG228	Belt for 46163	25
AG225	Motor for 46163	9 - 11, 16	AG227	Motor Hinge for 46163	18			
AG226	Cord for 46163	11	32263	Set Screw 5x8 T C for 46163	19			

Sharpening Assembly

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AG229	Pipette for 46163	1	32278	Sharpener Push Button for 46163	11	32288	Screw TE 8x20 for 46163	21
32269	Screw TPSV 6x12 for 46163	2	32279	Spring for 46163	12	32289	Washer 8 for 46163	22
32270	Shaft for Sharpener for 46163	3	32280	Screw TC for 46163	13	32290	Sharpener Cover for 46163	23
32271	Set Screw 5x40 for 46163	4	32281	Washer 3 for 46163	14	AG230	Canopy Pommel for 46163	24
32272	Set Screw 5x30 for 46163	5	32282	Sharpener Pin for 46163	15	32292	Screw TC 6x12 for 46163	25
32273	Nut 6 for 46163	6	32283	Sharpener Pin for 46163	16	32293	Set Screw 6x8 TC for 46163	26
32274	Sharpener Screw for 46163	7	32284	Sharpener Body for 46163	17	33553	Finishing Stone for 46163	27
32275	Ball Bearing for 46163	8	32285	Screw TC 4x20 for 46163	18	33032	45x9x6 Sharpening Stone for 46163	28
32276	Washer 6 for 46163	9	32286	Washer 4 for 46163	19			
33547	Nut for 46163	10	32287	Sharpener Tie Rod for 46163	20			

Product Holder Assembly

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
32295	Screw TE 8x35 for 46163	1	32306	Washer 8 for 46163	12	32316	Set Screw 6x8 TC for 46163	22
32296	Washer 8 for 46163	2	32307	Stud 5 MA for 46163	13	AG235	All Outside Block for 46163	23
32297	Carriage Plate Support V for 46163	3	32308	Carriage Plate - Small for 46163	14	AG236	All Inside Block for 46163	24
32299	Nut for 46163	5	32309	Washer 6x18 for 46163	15	32319	Set Screw 6x8 TC for 46163	25
AG231	Washer 6x18 for 46163	6	32310	Nut 6 for 46163	16	32320	Rubber Washer for 46163	26
AG232	Flat Hand Guard for 46163	7	AG233	Flywheel Pommel 330 for 46163	17	AG237	Tube X Block TC for 46163	27
32302	Stud 6x50 for 46163	8	AG234	Extension Leg All for 46163	18	AG238	Bracket for 46163	28
32303	Spacer for 46163	9	32313	Wavy Washer for 46163	19	32323	Stud PVC for 46163	29
32304	Carriage Plate - Large for 46163	10	32314	Stud 12 MA for 46163	20	32324	Presser Rod for 46163	30
32305	Screw TE 8x20 for 46163	11	32315	Presser Plate for 46163	21			