


Parts Breakdown

Models CE-CN-0110-NG 48761
CE-CN-0140-NG 49275

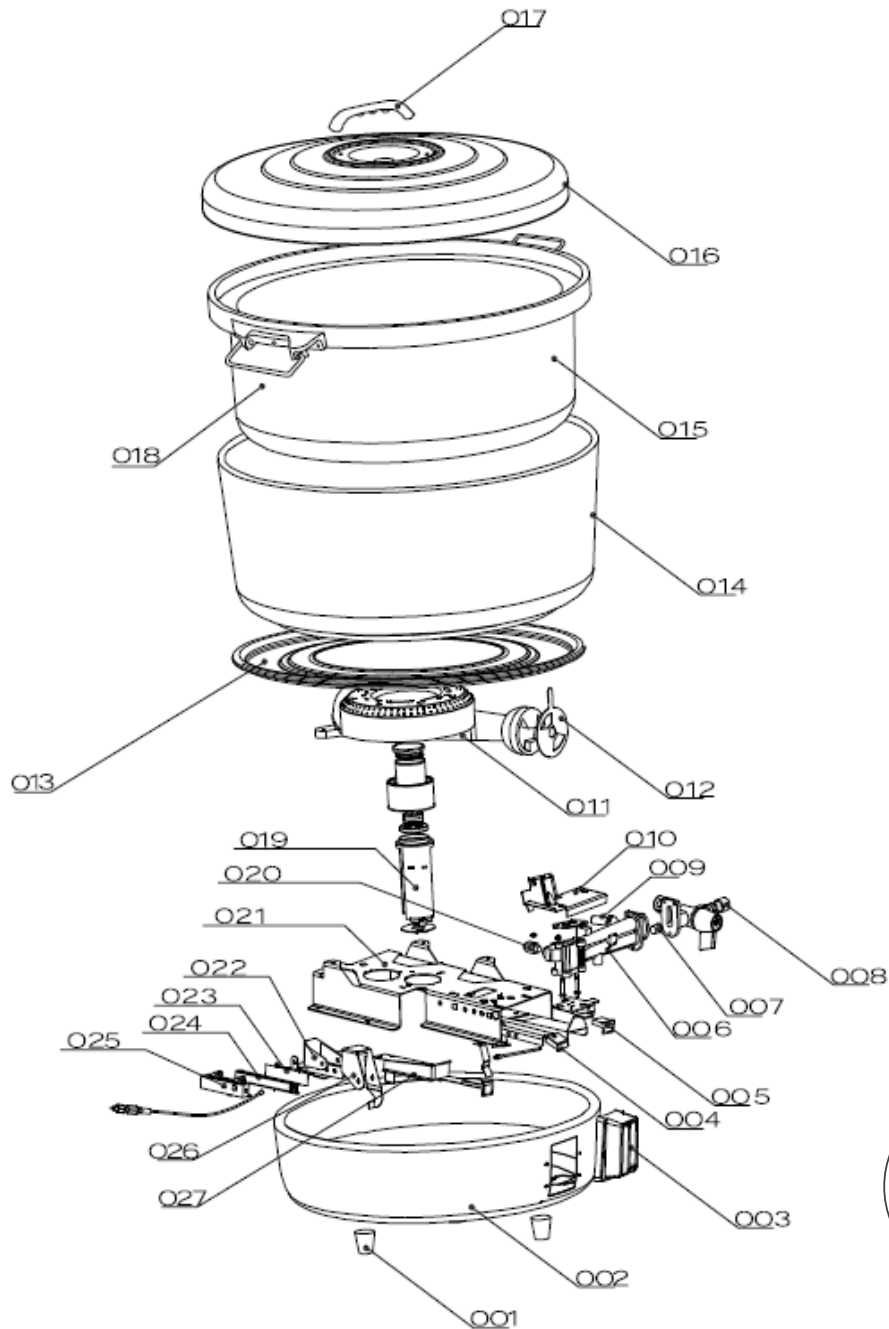

Parts Breakdown

Model CE-CN-0110-NG 48761

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AV192	RUBBER FOOT FOR GAS RICE COOKER	001	AV202	BURNER FOR GAS RICE COOKER	011	AV209	INNER POT HANDLE FOR GAS RICE COOKER	018
AV193	BASE FOR GAS RICE COOKER	002	AV203	GAS ADJUSTER FOR GAS RICE COOKER	012	AV210	THERMOSTAT FOR GAS RICE COOKER	019
AV194	SWITCH COVER FOR GAS RICE COOKER	003	AV204	WATER PAN FOR GAS RICE COOKER	013	AV212	ASSEMBLY SUPPORTER FOR GAS RICE COOKER	021
AV195	IGNITION ASSEMBLY FOR GAS RICE COOKER	004, 022, 026	AV205	BODY FOR GAS RICE COOKER	014	AV214	LIGHTER ASSEMBLY FOR GAS RICE COOKER	023, 024, 025
AV196	COOKING BUTTON (BUTTON) FOR GAS RICE COOKER	005	AV206	INNER POT FOR GAS RICE COOKER	015	AV218	KEEP WARM BUTTON FOR GAS RICE COOKER	027
AV197	SWITCH PART FOR GAS RICE COOKER	006, 007, 008, 009, 020	AV207	LID FOR GAS RICE COOKER	016			
AV201	GAS SWITCH VALVE COVER FOR GAS RICE COOKER	010	AV208	LID HANDLE FOR GAS RICE COOKER	017			

Model CE-CN-0140-NG 49275

Item No.	Description	Position	Item No.	Description	Position
AV192	RUBBER FOOT FOR GAS RICE COOKER	001	AX114	INNER POT FOR GAS RICE COOKER	015
AV193	BASE FOR GAS RICE COOKER	002	AX115	LID FOR GAS RICE COOKER	016
AV194	SWITCH COVER FOR GAS RICE COOKER	003	AV208	LID HANDLE FOR GAS RICE COOKER	017
AV195	IGNITION BUTTON FOR GAS RICE COOKER	004	AX116	INNER POT HANDLE FOR GAS RICE COOKER	018
AV196	COOKING BUTTON (BUTTON) FOR GAS RICE COOKER	005	AX117	THERMOSTAT FOR GAS RICE COOKER	019
AX108	VALVE MAIN PART FOR GAS RICE COOKER	006	AX118	GAS PIN FOR GAS RICE COOKER	020
AX109	GAS SWITCH FOR GAS RICE COOKER	007	AV212	ASSEMBLY SUPPORTER FOR GAS RICE COOKER	021
AX110	GAS SWITCH KNOB FOR GAS RICE COOKER	008	AV195	IGNITION SWITCH BRACKET FOR GAS RICE COOKER	022
AX111	GAS PIN BRACKET FOR GAS RICE COOKER	009	AV214	LIGHTER HOLDING PLATE FOR GAS RICE COOKER	023
AV201	GAS SWITCH VALVE COVER FOR GAS RICE COOKER	010	AV214	SLIDING PART FOR GAS RICE COOKER	024
AX112	BURNER FOR GAS RICE COOKER	011	AV214	LIGHTER ASSEMBLY FOR GAS RICE COOKER	025
AV203	GAS ADJUSTER FOR GAS RICE COOKER	012	AV195	LIGHTER SUPPORTER FOR GAS RICE COOKER	026
AV204	WATER PAN FOR GAS RICE COOKER	013	AV218	KEEP WARM BUTTON FOR GAS RICE COOKER	027
AX113	BODY FOR GAS RICE COOKER	014			