


Parts Breakdown

Model CE-CN-0110-NG 48761

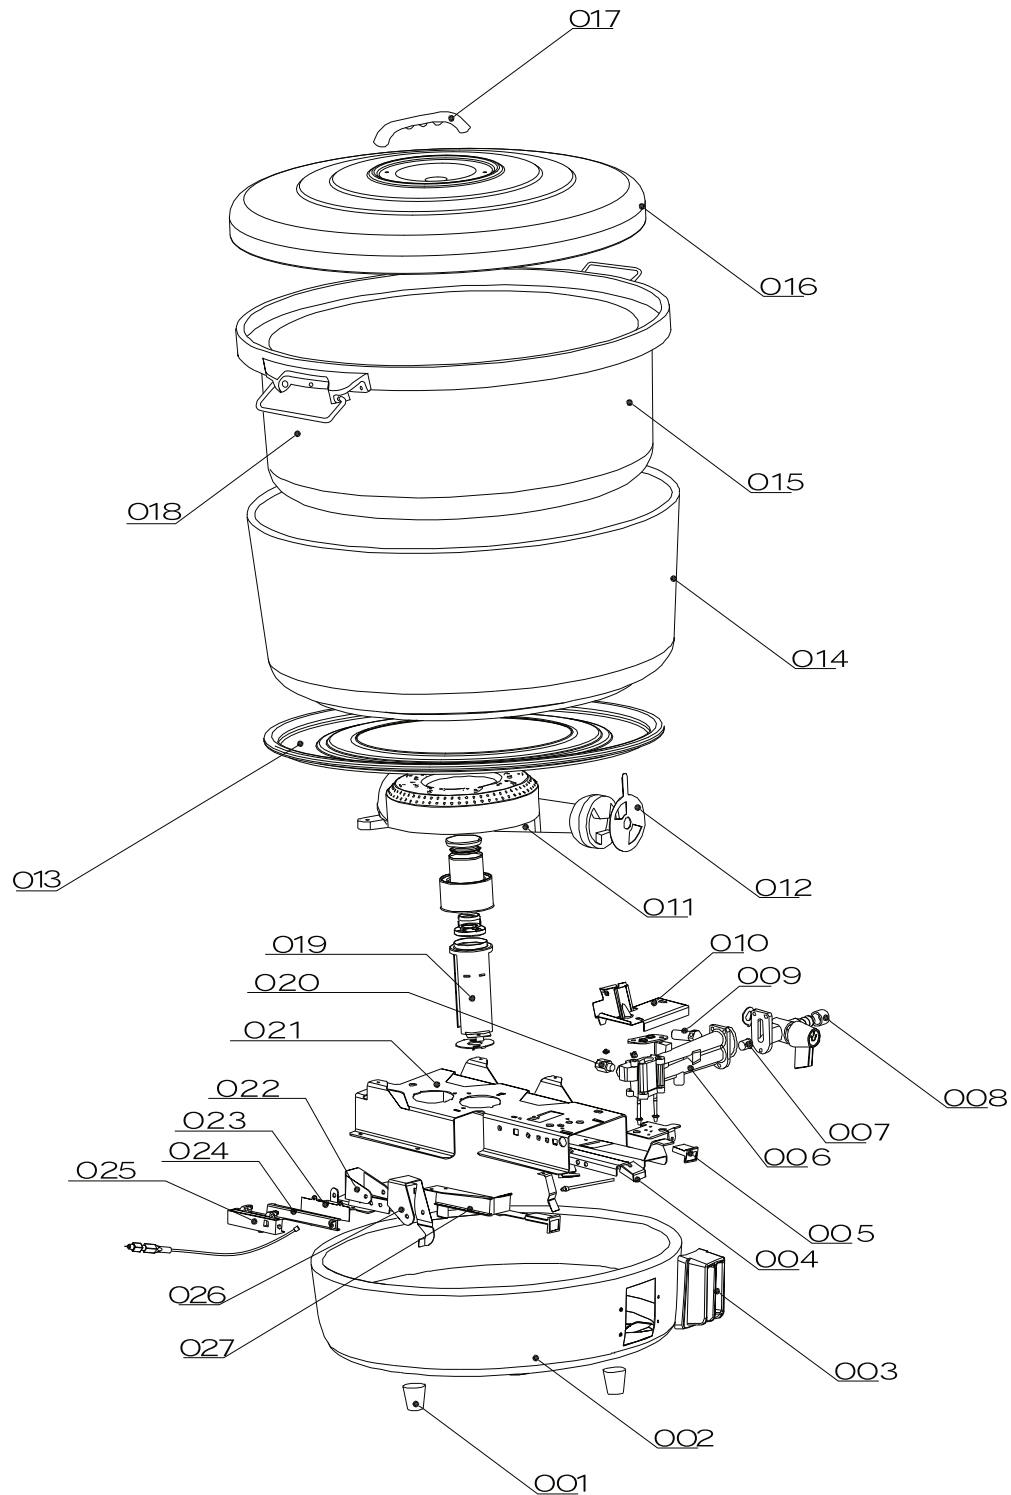

Parts Breakdown

Model CE-CN-0110-NG 48761

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AV192	Rubber Foot for 48761	001	AV202	Burner for 48761	011	AV209	Inner Pot Handle for 48761	018
AV193	Base for 48761	002	AV203	Gas Adjuster for 48761	012	AV210	Thermostat for 48761	019
AV194	Switch Cover for 48761	003	AV204	Water Pan for 48761	013	AV212	Assembly Supporter for 48761	021
AV195	Ignition Assembly for 48761	004, 022, 026	AV205	Body for 48761	014	AV214	Lighter Assembly for 48761	023, 024, 025
AV196	Cooking Button for 48761	005	AV206	Inner Pot for 48761	015	AV218	Keep Warm Button for 48761	027
AV197	Switch Part for 48761	006, 007, 008, 009, 020	AV207	Lid for 48761	016			
AV201	Gas Switch Valve Cover for 48761	010	AV208	Lid Handle for 48761	017			