



Parts Breakdown

Model CD-CN-UH50 49208


1. Main enclosure

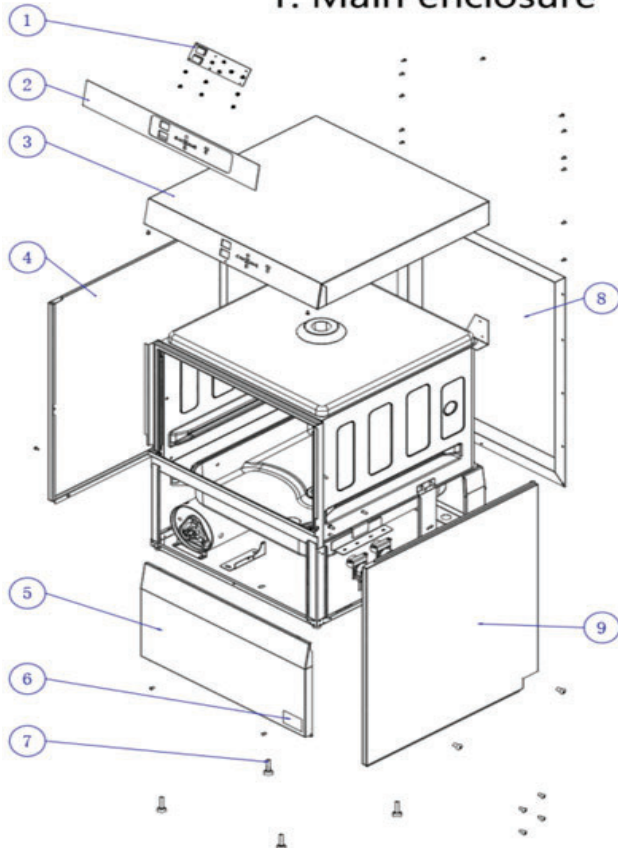


2. Wash cavity

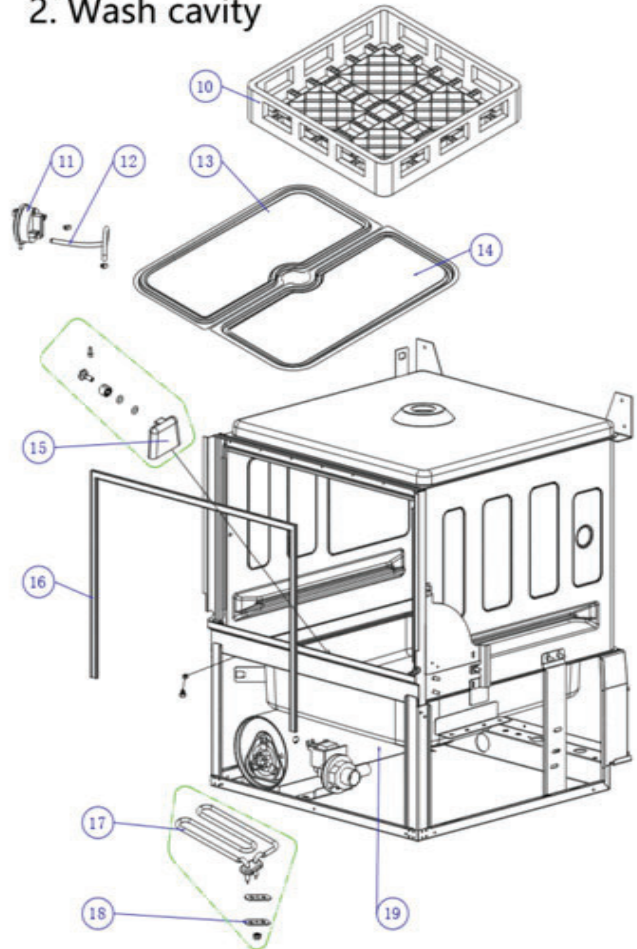

3. Internal structure

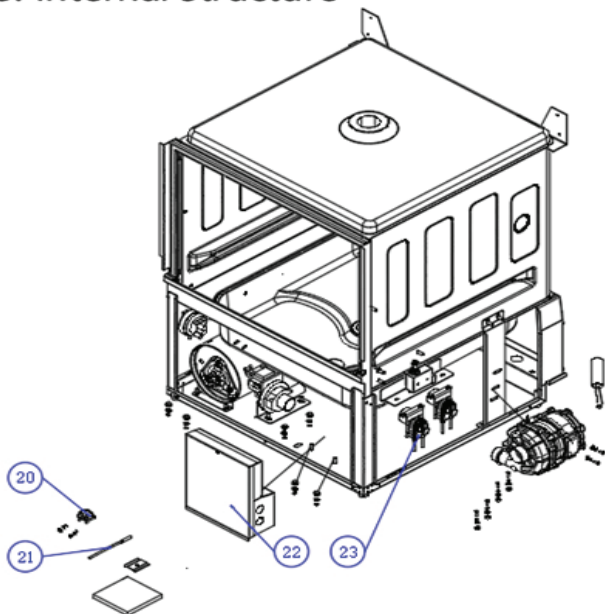


4. Door structure

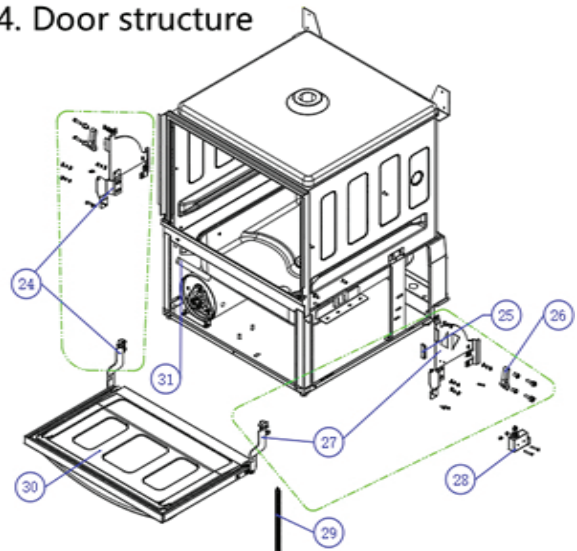


Parts Breakdown

Model CD-CN-UH50 49208



5. Washing system

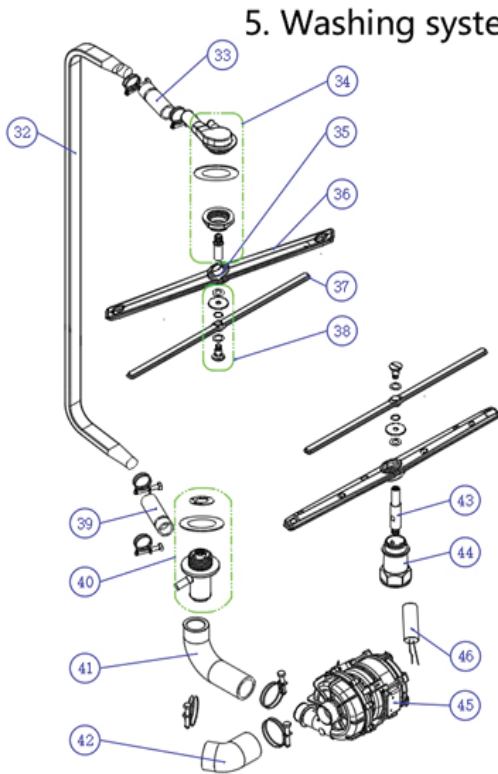


6. Spray system

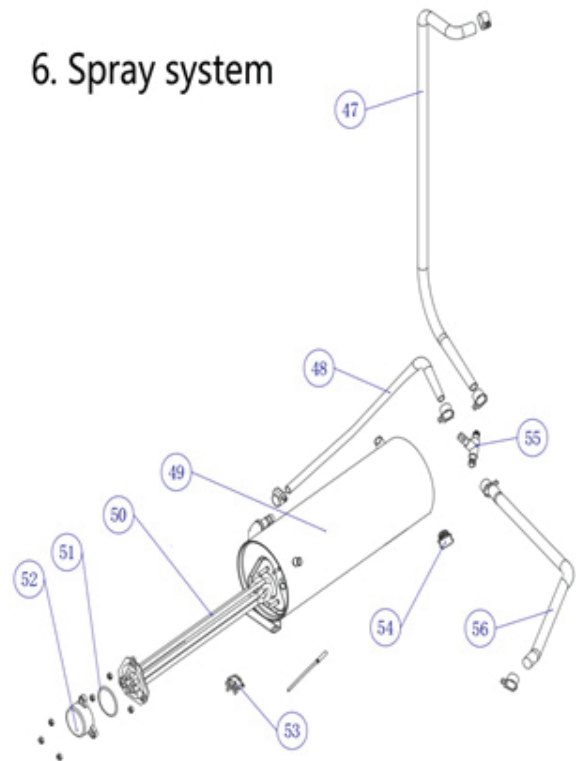

7. Water inlet 8. Drain system

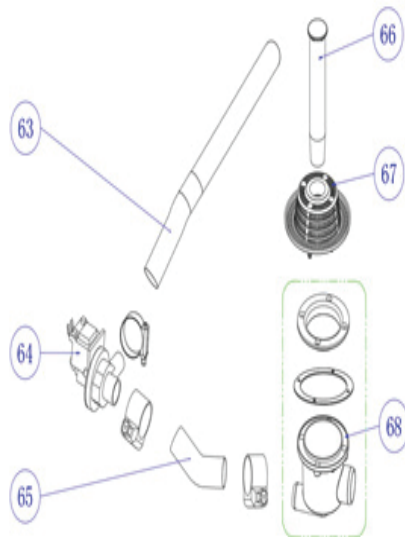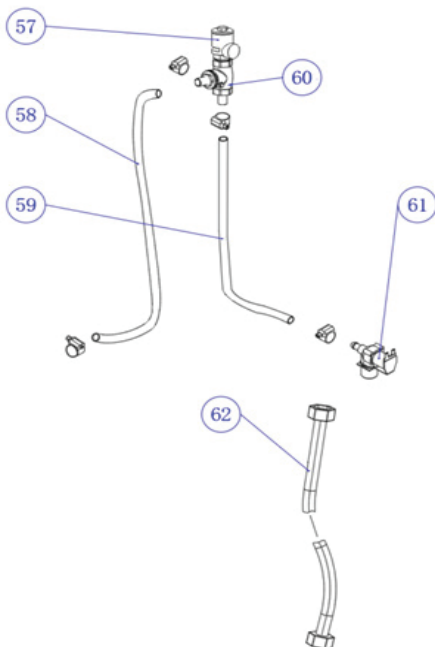

9. Electric control system

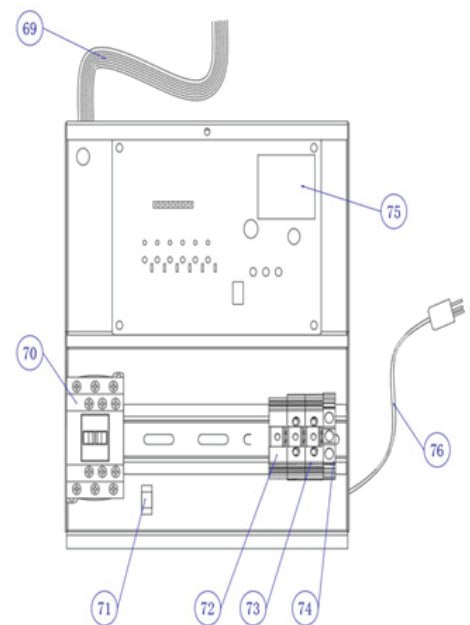

Parts Breakdown

Model CD-CN-UH50 49208

Item No.	Description	Position	Item No.	Description	Position
AX289	DISPLAY BOARD FOR DISWASHER 49208	1	AX314	SPRING STEEL STRIP (LEFT & RIGHT) FOR DISWASHER 49208	26
AX290	MYLAR FOR DISWASHER 49208	2	AX315	RIGHT DOOR HINGE ASSEMBLY FOR DISWASHER 49208	27
AX291	TOP COVER FOR DISWASHER 49208	3	AX316	DOOR SWITCH FOR DISWASHER 49208	28
AX292	LEFT PLATE FOR DISWASHER 49208	4	AX317	DOOR EXTENSION SPRING FOR DISWASHER 49208	29
AX293	BOTTOM FRONT COVER FOR DISWASHER 49208	5	AX318	DOOR ASSEMBLY FOR DISWASHER 49208	30
AX294	DATAPLATE FOR DISWASHER 49208	6	AX319	BLACK FOAM TUBE TO TANK FOR DISWASHER 49208	31
AX295	FOOT BOLT FOR DISWASHER 49208	7	AX320	UP INLET TUBE FOR DISWASHER 49208	32
AX296	BACK PLATE FOR DISWASHER 49208	8	AX321	SHORT PIPE1 FOR DISWASHER 49208	33
AX297	RIGHT PLATE FOR DISWASHER 49208	9	AX322	WASH TOP BASE ASSEMBLY FOR DISWASHER 49208	34
AX298	PEG DISHRACK FOR DISWASHER 49208	10	AX323	WASH ARM SLEEVE FOR DISWASHER 49208	35
AX299	PRESSURE SWITCH FOR DISWASHER 49208	11	AX324	WASH ARM FOR DISWASHER 49208	36
AX300	AIR GUIDE PIPE FOR DISWASHER 49208	12	AX325	SPRAY ARM FOR DISWASHER 49208	37
AX301	LEFT MESH PLATE FOR DISWASHER 49208	13	AX326	WASH BOTTOM ASSEMBLY FOR DISWASHER 49208	38
AX302	RIGHT MESH PLATE FOR DISWASHER 49208	14	AX327	SHORT PIPE2 FOR DISWASHER 49208	39
AX303	PRESSURE GAUGE CHAMBER ASSEMBLY FOR DISWASHER 49208	15/15A	AX328	BOTTOM TEE FITTING FOR DISWASHER 49208	40
AX304	DOOR SEAL FOR DISWASHER 49208	16	AX329	BOTTOM ELBOW FOR DISWASHER 49208	41
AX305	WASH HEATER ASSEMBLY FOR DISWASHER 49208	17	AX330	ELBOW TO MAIN WASH PUMP FOR DISWASHER 49208	42
AX306	WASH HEATER GASKET FOR DISWASHER 49208	18	AX331	BOTTOM WASH ROD FOR DISWASHER 49208	43
AX307	RINSE TANK ASSEMBLY FOR DISWASHER 49208	19	AX332	BOTTOM WASH BASE FOR DISWASHER 49208	44
AX308	90°C THERMOSTAT FOR DISWASHER 49208	20	AX333	MAIN WASH PUMP FOR DISWASHER 49208	45
AX309	PROBE FOR DISWASHER 49208	21	AX334	CAPACITANCE FOR DISWASHER 49208	46
AX310	POWR SUPPLY BOX FOR DISWASHER 49208	22	AX335	SPRAY INLET PIPE1 FOR DISWASHER 49208	47
AX311	DETERGENT PUMP(UNDERCOUNTER) FOR DISWASHER 49208	23	AX336	SPRAY INLET PIPE2 FOR DISWASHER 49208	48
AX312	LEFT DOOR HINGE ASSEMBLY FOR DISWASHER 49208	24	AX337	BOOSTER HEATER TANK WITH BLACK HOSE FOR DISWASHER 49208	49
AX313	WHITE STOPPER FOR DISWASHER 49208	25	AX338	BOOSTER HEATER ASSEMBLY FOR DISWASHER 49208	50

Parts Breakdown

Model CD-CN-UH50 49208

Item No.	Description	Position	Item No.	Description	Position
AX339	BOOSTER GASKET FOR DISWASHER 49208	51	AX352	DRAIN PUMP FOR DISWASHER 49208	64
AX340	BOOSTER HEATER CAP FOR DISWASHER 49208	52	AX353	DRAIN PUMP ELBOW FOR DISWASHER 49208	65
AX341	105C/110C THERMOSTAT FOR DISWASHER 49208, 49209	53	AX354	OVERFLOW PIPE FOR DISWASHER 49208	66
AX342	BOOSTER STOPPER FOR DISWASHER 49208	54	AX355	FILTER FOR DISWASHER 49208, 49209	67
AX343	TRIPLET FOR DISWASHER 49208	55	AX356	DRAIN ASSEMBLY FOR DISWASHER 49208, 49209	68
AX344	SPRAY INLET PIPE3 FOR DISWASHER 49208	56	AX357	RIBBON CABLE FOR DISWASHER 49208	69
AX345	VACUUM BREAKING VALVE FOR DISWASHER 49208	57	AX358	CONTACTOR FOR DISWASHER 49208, 49209	70
AX346	WATER CONNECT PIPE1 FOR DISWASHER 49208	58	AX359	FUSE FOR DISWASHER 49208, 49209	71
AX347	WATER CONNECT PIPE2 FOR DISWASHER 49208	59	AX360	TERMINAL CLAMP FOR DISWASHER 49208, 49209	72
AX348	3/4 TEE FITTING FOR DISWASHER 49208	60	AX361	TERMINAL BLOCK FOR DISWASHER 49208, 49209	73
AX349	WATER INLET VALVE FOR DISWASHER 49208, 49209	61	AX362	GROUND TERMINAL FOR DISWASHER 49208, 49209	74
AX350	INLET WATER HOSE FOR DISWASHER 49208, 49209	62/62A	AX363	ELECTRONIC CONTROL BOARD-UH FOR DISWASHER 49208	75
AX351	DRAIN PUMP OUTLET PIPE FOR DISWASHER 49208	63	AX364	POWER CORD SET FOR DISWASHER 49208	76