


Parts Breakdown

Model Santos 01P 46080

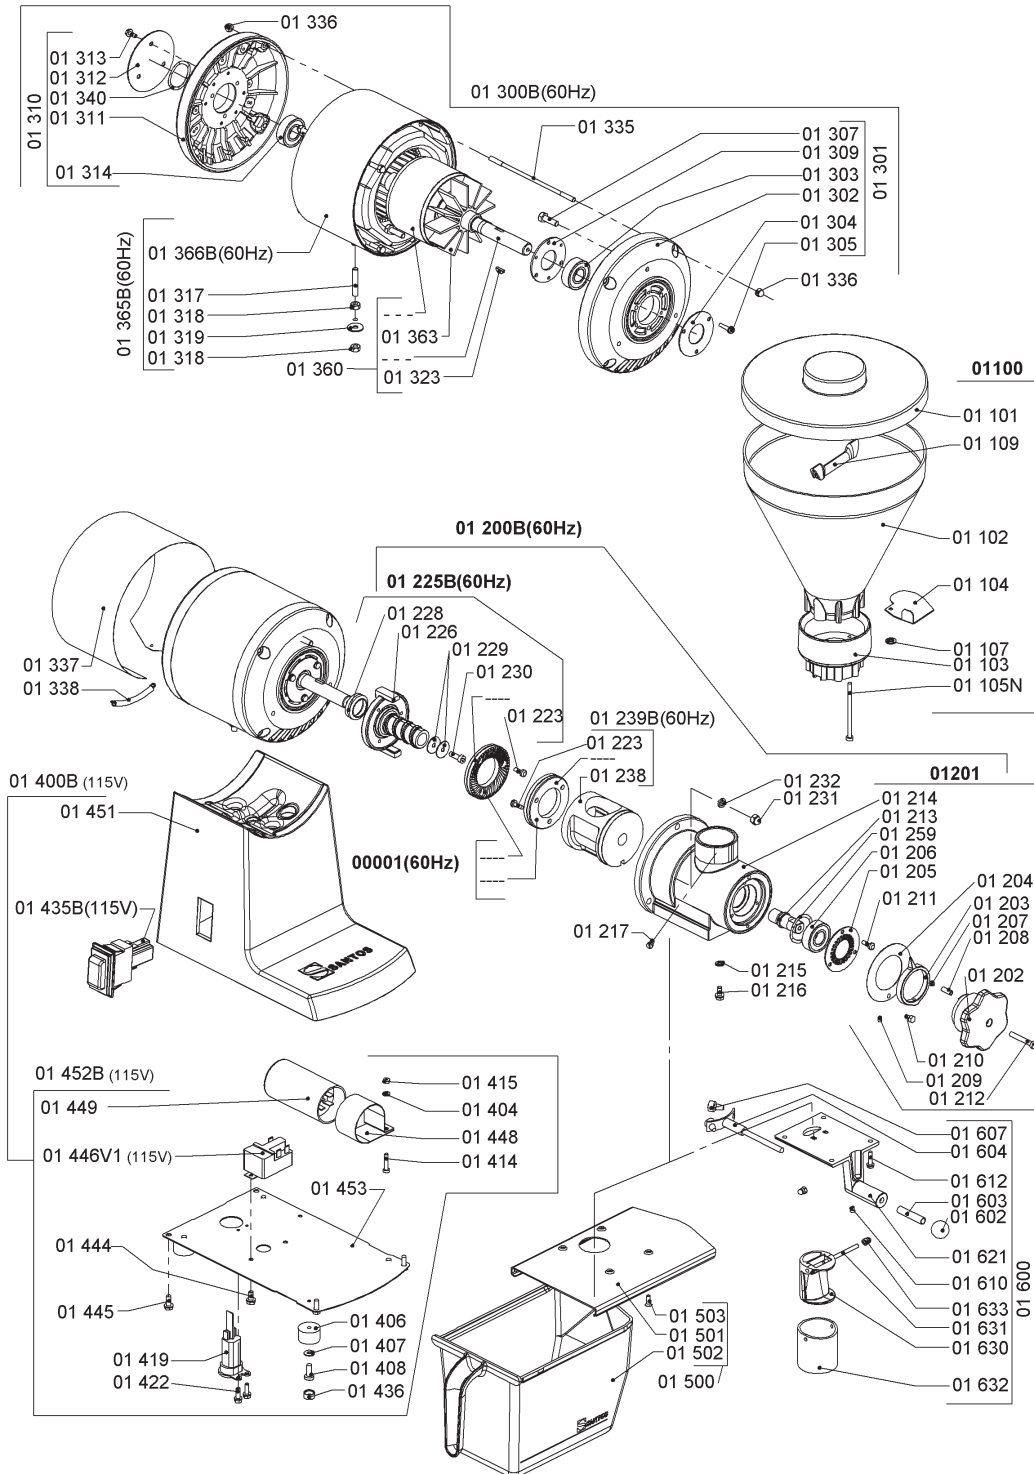

Parts Breakdown

Model Santos 01P 46080

| Item No. | Description | Position | Item No. | Description | Position | Item No. | Description | Position |
|----------|--|----------|----------|--|----------|----------|--|----------|
| 40659 | Set of 2 Grinding Discs (Standard) for 46080 | 00001 | AC598 | Screw CHC 5x15 for 46080 | 01230 | AC647 | Washer AZ 4 ZN for 46080 | 01404 |
| 40662 | Complete Hopper with Obturator for 46080 | 01100 | AC599 | Cap Nut H M6 for 46080 | 01231 | AC648 | Rubber Foot D 25 for 46080 | 01406 |
| 63502 | Lid for 46080 | 01101 | AC600 | Washer Diam 6 for 46080 | 01232 | AC649 | Washer 5x12 for 46080 | 01407 |
| AC566 | Hopper for 46080 | 01102 | AK382 | Grind Core for 46080 | 01238 | AC650 | Screw TCL 5.5x16 ZN for 46080 | 01408 |
| 40663 | Obturator for 46080 | 01103 | AK383 | Complete Grind Core 60Hz for 46080 | 01239B | AC655 | Capacitor Screw for 46080 | 01414 |
| AC567 | Obturator Handle for 46080 | 01104 | AK384 | Ondulated Washer 6202 for 46080 | 01259 | AC656 | Nut H M4 ZN for 46080 | 01415 |
| AK379 | Screw CX 4x70 Zn for 46080 | 01105N | AC617 | Complete Motor Single Phase 110V 60Hz for 46080 | 01300B | AC659 | Power Cord with USA Plug for 46080 | 01419 |
| AC570 | Belleville Washer 5x12 for 46080 | 01107 | AC618 | Complete Front Flange (Brown) for 46080 | 01301 | AC660 | Screw H 4.2x12.7 ZN for 46080 | 01422 |
| AC571 | Safety Bar for 46080 | 01109 | AC619 | Front Flange Only (Brown) for 46080 | 01302 | AC661 | Special On-Off Multifunctions Switch 230V 8A115V for 46080 | 01435B |
| AK380 | Complete Grind Housing 60Hz for 46080 | 01200B | AC620 | Bearing 6202 for 46080 | 01303 | AC662 | Cap D12.2x6.2 Black for 46080 | 01436 |
| AC573 | Grind Housing with Adjusting Button for 46080 | 01201 | AC621 | Bearing Washer (Thin) for 46080 | 01304 | AK385 | Screw H 5x10 Zn for 46080 | 01444 |
| AC574 | Adjusting Button for 46080 | 01202 | AC622 | Screw M4x16 for 46080 | 01305 | AC667 | Screw H M5x12 ZN Autotar for 46080 | 01445 |
| AC575 | Index for 46080 | 01203 | AC623 | Screw H M6x20 ZN for 46080 | 01307 | AK386 | Starting Relay 100-120V 50/60Hz for 46080 | 01446V1 |
| AC576 | Graduated Round Plate for 46080 | 01204 | AC624 | Bearing Washer (Thick) for 46080 | 01309 | AC669 | Capacitor Ring D46 for 46080 | 01448 |
| AC577 | Bearing Washer for 46080 | 01205 | AC625 | Complete Rear Flange for 46080 | 01310 | AK387 | Capacitor 75 µF Diam 46 for 46080 | 01449 |
| AC578 | Bearing 6202 for 46080 | 01206 | AC626 | Rear Flange Only Brown for 46080 | 01311 | AC670 | Painted Base for 46080 | 01451 |
| AC579 | Steel Ball D 6 for 46080 | 01207 | AC627 | Chromed Bearing Washer for 46080 | 01312 | AC671 | Complete Bottom Plate 115V for 46080 | 01452B |
| AC580 | Adjusting Button Spring for 46080 | 01208 | AC628 | Screw H 4x10 for 46080 | 01313 | AC672 | Bottom Plate for 46080 | 01453 |
| AC581 | Screw HC M4x8 for 46080 | 01209 | AC629 | Bearing 6202 for 46080 | 01314 | AC683 | Complete Drawer with Sustainer+Screws for 46080 | 01500 |
| AC582 | Screw H 4x8 ZN for 46080 | 01210 | AC632 | Screw 6x35 for 46080 | 01317 | AC684 | Drawer Sustainer Only for 46080 | 01501 |
| AC583 | Screw H 4x8 ZN for 46080 | 01211 | AC633 | Nut H M6 ZN for 46080 | 01318 | 40667 | Grater Drawer for 46080 | 01502 |
| AC584 | Screw CB M5x35 ZN for 46080 | 01212 | AC634 | Washer 6x18x1 for 46080 | 01319 | AC685 | Screw TF M4x10 ZN for 46080 | 01503 |
| AC585 | Grind Adjustment Screw for 46080 | 01213 | AC635 | Pin 3x5 for 46080 | 01323 | AC686 | Complete Bag Holder for 46080 | 01600 |
| AC586 | Grind Housing for 46080 | 01214 | AC636 | Assembling Threaded Rod M5x134 for 46080 | 01335 | AC688 | Bakelite Ball for 46080 | 01602 |
| AC587 | Washer AZ 5 for 46080 | 01215 | AC637 | Cap Nut H M5 for 46080 | 01336 | AC689 | Bag Holder Spring for 46080 | 01603 |
| AC588 | Screw H 5x10 ZN for 46080 | 01216 | AC638 | Stainless Steel Motor Protector for 46080 | 01337 | AC690 | Complete Bag Holder Axle for 46080 | 01604 |
| AC589 | Screw CB M4x10 ZN for 46080 | 01217 | AC639 | Motor Protector Spring for 46080 | 01338 | AC691 | Rubber Buffer D12 H 7.5 for 46080 | 01607 |
| AC593 | Screw M4x10 for 46080 | 01223 | AC640 | Ondulated Washer 6202 for 46080 | 01340 | AC693 | Screw FZ M3x6 for 46080 | 01610 |
| AK381 | Complete Feeding Screw (Pepper) 60Hz for 46080 | 01225B | AC641 | Complete Rotor with Shaft - Single Phase and Pin for 46080 | 01360 | AK388 | Bag Holder Sole for 46080 | 01621 |
| AC595 | Feeding Screw for 46080 | 01226 | AC642 | Complete Stator (Winding) 110V 60Hz for 46080 | 01365B | AK389 | Pepper Output for 46080 | 01630 |
| AC596 | V Ring Gasket V20 for 46080 | 01228 | AC643 | Stator Only Single Phase 110V 60Hz for 46080 | 01366B | AK390 | Outlet Chute Axle for 46080 | 01631 |
| AC597 | Washer 5x20 for 46080 | 01229 | AC644 | Complete Base - 1 Phase 110-120V 60 Hz for 46080 | 01400B | AK391 | Bag Holder Tube (Polished) for 46080 | 01632 |