



# Parts Breakdown

## Model BS-CN-2400 46787

| Item No. | Description                | Position | Item No. | Description                        | Position | Item No. | Description                        | Position |
|----------|----------------------------|----------|----------|------------------------------------|----------|----------|------------------------------------|----------|
| AF384    | Cover for 46787            | 1        | AF412    | Stand for 46787                    | 29       | AF440    | Shaft for 46787                    | 57       |
| AF385    | Nut for 46787              | 2        | AF413    | Cleaner 1 for 46787                | 30       | AF441    | Sliding Plate of Groove for 46787  | 58       |
| AF386    | Gasket for 46787           | 3        | AF414    | Cleaner 2 for 46787                | 31       | AF442    | Protection of Moving for 46787     | 59       |
| AF387    | Spring for 46787           | 4        | AF415    | Handle for 46787                   | 32       | AF443    | Moving Guide Shaft for 46787       | 60       |
| AF388    | Adjusting Handle for 46787 | 5        | AF468    | Sliding Working Table for 46787    | 33       | AF444    | Guide Part for 46787               | 61       |
| AF389    | Sheath for 46787           | 6        | AF469    | Cover for 46787                    | 34       | AF445    | Rubber Gasket for Switch for 46787 | 62       |
| AF390    | Round Ball for 46787       | 7        | AF418    | Bakelite Handle for 46787          | 35       | AF479    | Length Board for 46787             | 63       |
| AF391    | Lid Cover for 46787        | 8        | AF419    | Collar for Top Shaft for 46787     | 36       | AF447    | Tightening Screw for 46787         | 64       |
| AF392    | Tightening Shaft for 46787 | 9        | AF470    | Pulley 2 for 46787                 | 37       | AF448    | Bending Board for 46787            | 65       |
| AF393    | Pin for 46787              | 10       | AF421    | Bottom for 46787                   | 38       | AF480    | Support Frame of Motor for 46787   | 66       |
| AF394    | Spring for 46787           | 11       | AF422    | Adjusting Feet for 46787           | 39       | AF450    | Waste Setting (Selected) for 46787 | 67       |
| AF395    | Bushing for 46787          | 12       | AF423    | Non-Adjusting Feet for 46787       | 40       | AF451    | Hexagon Screw for 46787            | 69       |
| AF396    | Box of Switch for 46787    | 13       | AF471    | Seat for 46787                     | 41       | AF452    | Big Gasket for 46787               | 70       |
| AF397    | Stop Button for 46787      | 14       | AF472    | Body for 46787                     | 42       | AF453    | Seat of Transform for 46787        | 71       |
| AF398    | Start Button for 46787     | 15       | AF473    | Drawer for Waste for 46787         | 43       | AF454    | Star Handle for 46787              | 72       |
| AF399    | Locker for 46787           | 16       | AF474    | Door for 46787                     | 44       | AF455    | Hexagon Screw for 46787            | 73       |
| AF400    | Handle of Locker for 46787 | 17       | AF428    | Protection for Saw for 46787       | 45       | AF456    | Fixing Stand for 46787             | 74       |
| AF401    | Retaining Plate for 46787  | 18       | AF429    | Shaft for 46787                    | 46       | AF481    | Shaft for 46787                    | 75       |
| AF402    | Pulley 1 for 46787         | 19       | AF430    | Protection for Saw for 46787       | 47       | AF458    | Nut for 46787                      | 76       |
| AF403    | Shaft of Pulley for 46787  | 20       | AF431    | Shaft for 46787                    | 48       | AF459    | Gasket for 46787                   | 77       |
| AF404    | Sealing Ring for 46787     | 21       | AF475    | Back Cover for 46787               | 49       | AF460    | Handle for 46787                   | 78       |
| AF405    | Bearing for 46787          | 22       | AF476    | Motor for 46787                    | 50       | AF461    | Moving Shaft for 46787             | 79       |
| AF406    | Spacer for 46787           | 23       | AF434    | Microswitch for 46787              | 51       | AF462    | Clamping Plate 1 for 46787         | 80       |
| AF466    | Shaft for 46787            | 24       | AF435    | Contacting and Capacitor for 46787 | 52       | AF482    | Seat with Drawer for 46787         | 81       |
| AF408    | Collar for Shaft for 46787 | 25       | AF436    | Handle for 46787                   | 53       | AF483    | Drawer for 46787                   | 82       |
| AF409    | O Ring for 46787           | 26       | AF477    | Cover of Back for 46787            | 54       | AF484    | Cover for Door for 46787           | 83       |
| AF410    | Gland for 46787            | 27       | AF438    | Guiding Part for 46787             | 55       |          |                                    |          |
| AF467    | Saw for 46787              | 28       | AF478    | Sliding Part for 46787             | 56       |          |                                    |          |