

# **ASSEMBLY INSTRUCTIONS**

CONTENTS  General Instructions 1  Major Locker Components 2  Hardware and Small Locker Parts 3  Basic Defiant Assembly Instructions (Single Row Lockers) 4-5  Guidelines for Rear Leg Spacing 4  Hook and Coat Rod Guidelines 5	
---	--

# **GENERAL INSTRUCTIONS**


- 1. These instructions are for the person who will actually perform or supervise the assembly of the lockers.
- **2.** Check material received against the packing list. First check the number of packages received and then check the contents of each package.
- **3.** Check material received for damage. If any of it is damaged, secure a "damage notation" from the carrier.
- **4.** Identify each part as it is unpacked and put like parts together as close as possible to the working area in which they are to be assembled.
- 5. Be careful to use the correct hardware as specified in the assembly instructions.

## **CAUTION**


It is the responsibility of the persons assembling the lockers to properly install all components and hardware as specified in these instructions and any accompanying drawings for specific installation.

- INSTALL ALL UNITS PLUMB AND LEVEL
- TIGHTEN ALL HARDWARE SECURELY

### MAJOR LOCKER COMPONENTS For 1,2,3,4,5,6 TIER AND MULTI-TIER DOORS

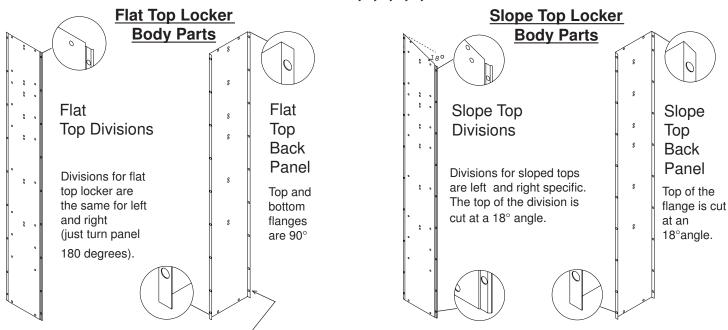

Bottom of divisons and back panels have the first hole on flange 1-3/4" from edge, (top of divisons and back panel have the first hole 1-1/4" from edge).

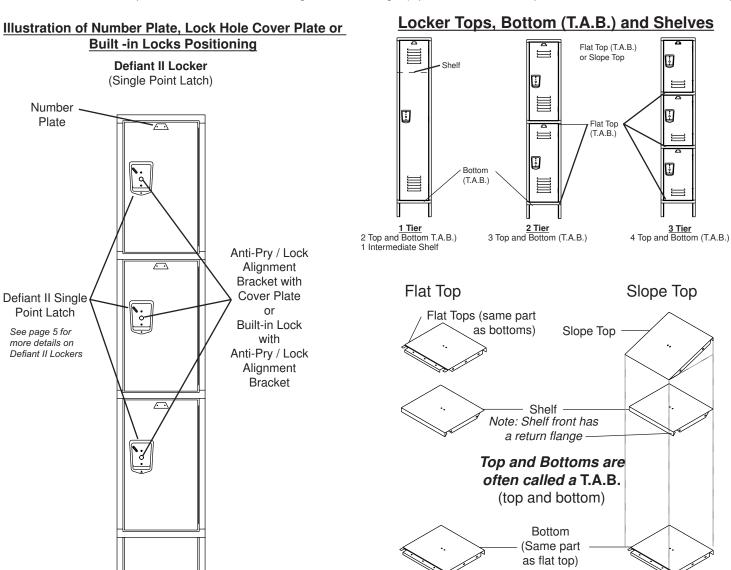

Single row lockers must be floor and wall anchored, double row lockers must be floor anchored and if possible wall or ceiling anchored.

#### HARDWARE AND SMALL LOCKER PARTS

Not all parts come with all lockers. Check packing list for what parts are to be used with what models of lockers.



#### **Number Plate and Rivet**

To be riveted to top of locker door.



#### Single Prong Wall Hook

To be bolted to divisions and to back panel.



#### Single & Double Prong Ceiling Hook

To be bolted to bottom of shelf or top of locker.



#### Coat Rod Hooks with Rod

Hooks to be bolted to divisions with coat rod in between, used in single tier, Duplex, 2,7,8 person and Dual lockers 18" or more in depth.



#### **Hook Clip**

Used to attach single prong wall hooks and coat rod hooks in lockers with Diamond Perforated divisions at ends only.



 
#### **Door Pull**

Used on box locker door unless a built-in lock is used. To be mounted on inside of door with pull tab inserted through vertical slot in door.



#### **Lock Hole Cover Plate**

Used to cover hole in door when built-in locks are not used. To be mounted on inside of door.



10-24 x 3/8"



Truss fin head bolt and nut for assembly of locker body parts. Tighten nut with a wrench or nut driver. (bolt is tamper resistant so it has no

slot for a screw driver)

10—24 x ½"

 


Truss fin head bolt and nut for assembly of the entire Invinicible II locker. In the Vanguard and Guardian lockers this nut and bolt is used in joining locker groups, locker legs and 2 hooks with the partition betweeen the hooks. Tighten nut with a wrench or nut driver (bolt is tamper resistant so it has no slot for a screw driver)

NO. 8 x 3/8 "

Sheet metal screw for slope tops only.





#### **Bracket Support (Defiant II)**


Strengthens locking point on Defiant II lockers. Bolts to Defiant II hasp and to side of locker.



# Anti-Pry / Lock Alignment Bracket


(**Defiant II**) Used on back of recessed pocket in Defiant II Lockers (Single Point Latch).

#### LOCKER ASSEMBLY INSTRUCTIONS

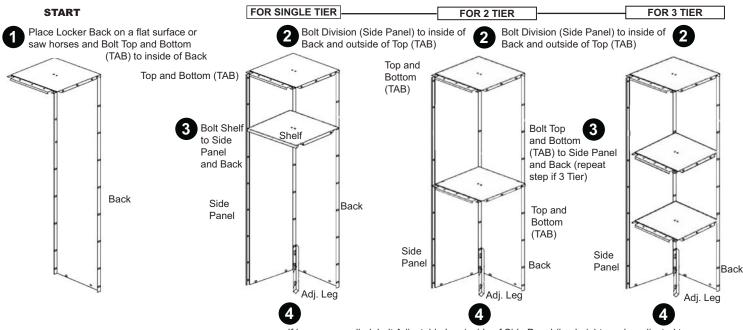

If legs are supplied, bolt Adjustable Leg inside of Side Panel (leg height can be adjusted to level and anchor locker)

6

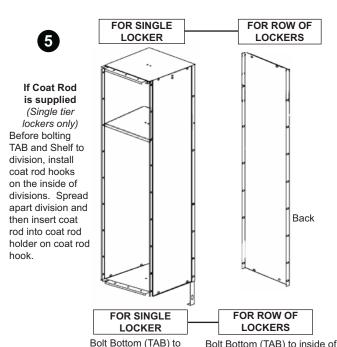


inside of Back and

then bolt Divisions to

Back, TAB, and shelf

or shelves if provided.

Bolt Bottom (TAB) to inside of Back and Divisions. Then bolt through Back, Division and the next locker's back. If legs are supplied, see Rear Leg Spacing for Single Row Lockers below. Then repeat steps 1 to 5. Due to size and bulk, it is best to build lockers in groups of no more than 3 wide before putting doors on and then putting them in place.

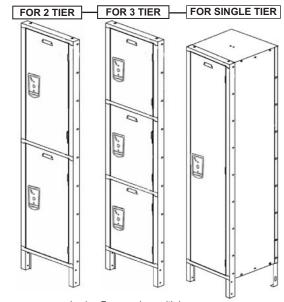

Locker Frames show with legs

Place Locker Door and Frame over edges of Divisions (Side Panels), and edges of Top and Bottom (TAB). Open Door and bolt Door Frame to Divisions, Top and Bottoms (TABS). If needed, loosen bolts on Legs to level locker and then re-tighten.

#### **REAR LEG SPACING FOR SINGLE ROW LOCKERS**


**IMPORTANT:** If lockers have been ordered with grouping specified, assemble lockers as ordered. Back legs should not exceed 45" distance between legs. If grouping has not been specified assemble lockers using the chart.

Width of Single Locker (inches)	7-1/2"	9"	12"	15"	18"	24"
Lockers in a Single Row Grouping	9	8	7	6	4	3
Back Legs in Each Grouping	9	6	5	4	3	2

# JOINING LOCKER GROUPINGS Top View of Two Groupings of Three Lockers First Second Locker Group Group

#### FOR SAFETY PURPOSES WE STRONGLY RECOMMEND THAT ALL LOCKERS BE EITHER FLOOR OR WALL ANCHORED


#### LOCKER ASSEMBLY INSTRUCTIONS

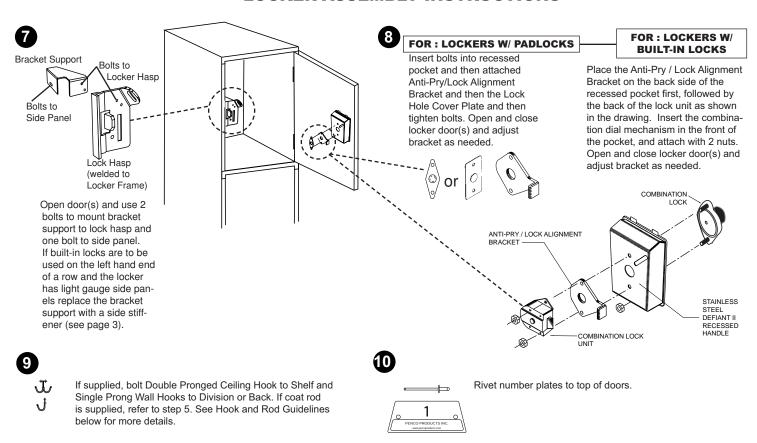

#### **Hook and Coat Rod Guidelines**

Number of Pieces Supplied per Locker FRAME \* - Standard Construction Only

 	iber of Freces Supplied per Locker Franking - Standard Softstruction Only									
	1 Tier	2 Tier	3 Tier	4,5,6,8,9 Tier	2 Person	7 Person	8 Person	16 Person	Duplex	Dual
Single Prong Hooks					-					
Depth Less than 18" AND:										
Width less than 15"	3	6	9	ı	n/a	n/a	n/a	n/a	n/a	4
Width =15" or more	4	8	12	1	4	n/a	n/a	n/a	4	4
Depth 18" or more AND:										
Width less than 15"	1	6	12	ı	n/a	-	-	n/a	n/a	-
Width =15" or more	2	8	12	ı	-	-	-	n/a	ı	1
Double Prong Hooks						-				
Depth 18" or more	-	-	-	1	-	-	-	-	1	-
Depth LESS than 18" AND:										
Width is LESS than 21"	1 **	2	-	ı	-	n/a	n/a	n/a	ı	-
Width is 21" or more	2	4	-	ı	n/a	n/a	n/a	n/a	n/a	-
Coat Rod Hooks										
Depth Less than 18"	-	ı	-	ı	-	n/a	n/a	n/a	1	1
Depth 18" or more	2	1	-	1	4	2	4	-	4	4
Coat Rods										
Depth Less than 18"	-	-	-	-	-	n/a	n/a	n/a	-	-
Depth 18" or more	1	-	-	-	2	1	2	1	2	2



<sup>\*</sup> Exceptions: 7, 8 & 16 Person quantities are for entire unit.

Single row lockers must be floor and wall anchored

<sup>\*\*</sup> Exception: Single Tier 9" wide x 15" deep has N0 Double Prong Hooks