


Parts Breakdown

Model MS-IT-0250-I 13621

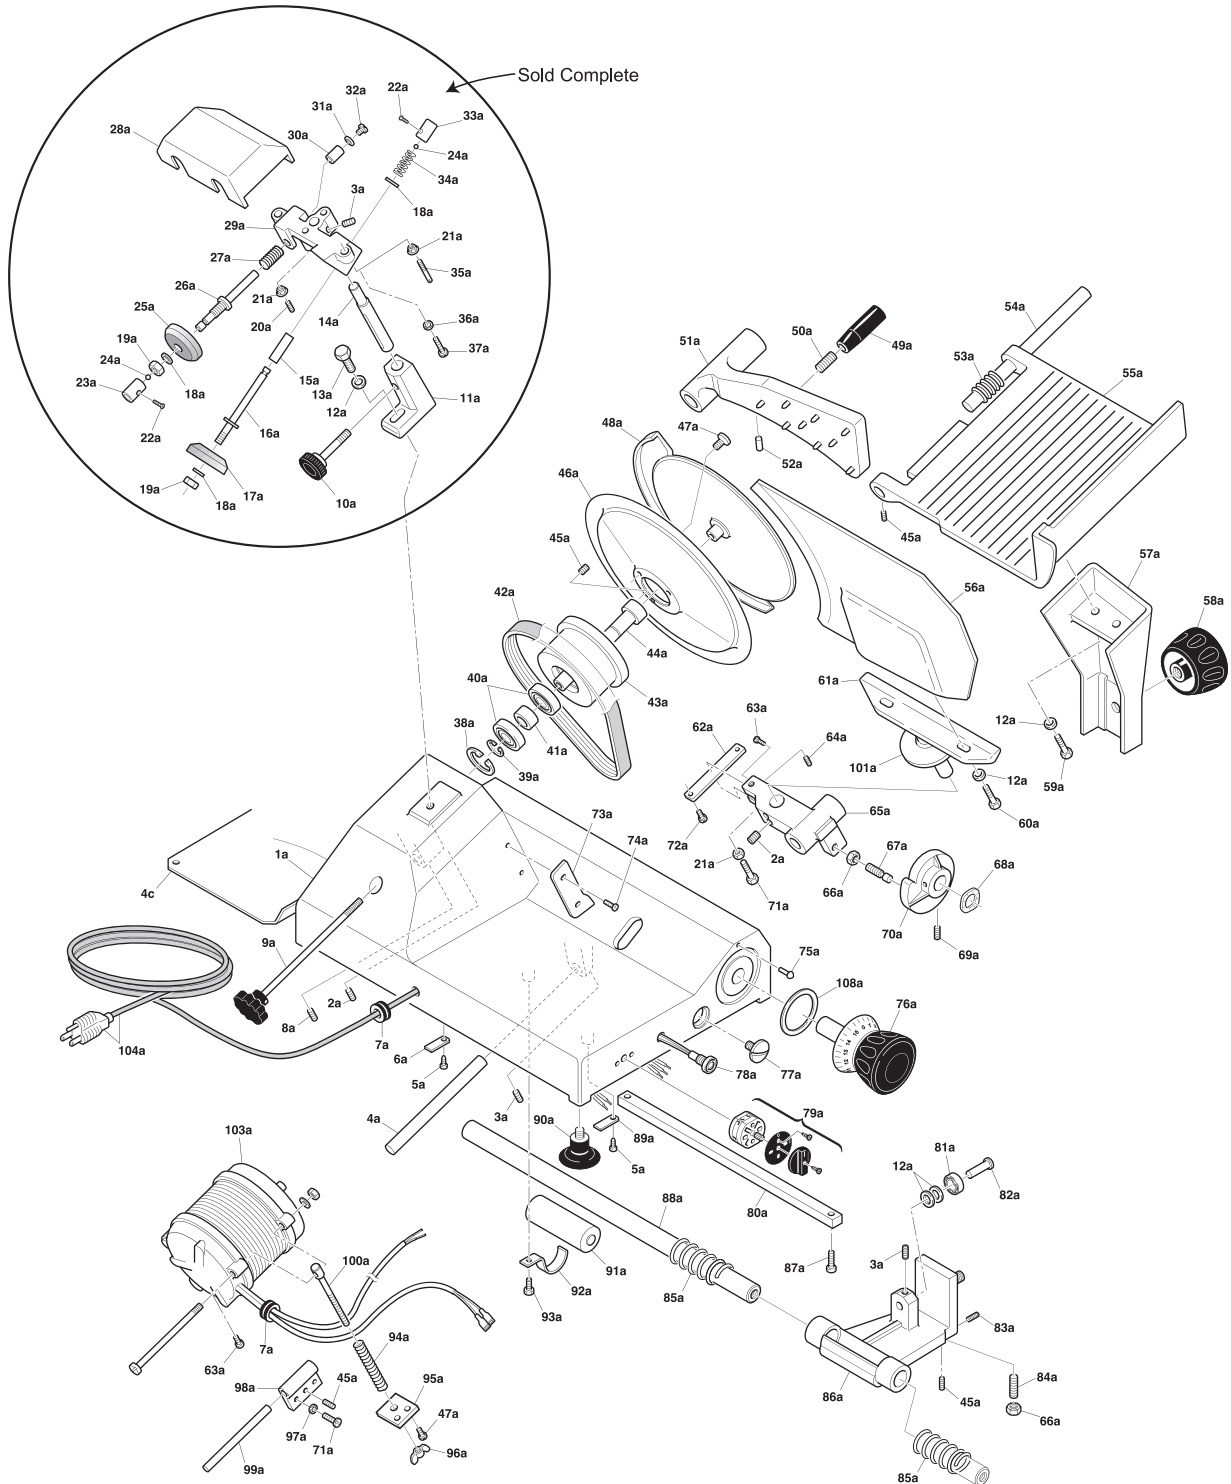

Parts Breakdown

Model MS-IT-0250-I 13621

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
33997	Housing for 13621	A1	15057	Clip for 13621	A38	15071	Meat Deflector for 13621	A73
15026	Set Screw TC for 13621	A2	15058	Clip for 13621	A39	34026	Screw TC for 13621	A74
15027	Set Screw TC for 13621	A3	AJ215	Bearing for 13621	A40	34027	Copper Rivet for 13621	A75
AJ209	Small Group Pin for 13621	A4	15060	Spacer for 13621	A41	34028	Index Knob for 13621	A76
AJ210	Screw TC for 13621	A5	34002	Belt TB2-310x8 for 13621	A42	AJ223	Screw Inox for 13621	A77
33998	Stop Plate for 13621	A6	AJ216	Spindle Pulley for 13621	A43	34030	Light for 13621	A78
33999	Strain Relief for 13621	A7	AJ217	Spindle Pin for 13621	A44	15195	Switch - On/Off for 13621	A79
15030	Set Screw TP for 13621	A8	15064	Blade Set Screw for 13621	A45	AJ224	Square Bar for 13621	A80
17686	Tie Rod for 13621	A9	13586	Blade 250E/F/R 40-3-210 for 13621	A46	AJ225	Bearing for 13621	A81
15031	Sharpener Tie Rod for 13621	A10	15065	Screw TPSV for 13621	A47	34034	Bearing Pin for 13621	A82
AJ211	Pipette for 13621	A11	15066	Blade Shield for 13621	A48	AJ226	Grain in Iron for 13621	A83
15033	Washer for 13621	A12	AJ218	Pressing Knob for 13621	A49	AJ227	Wheat P.V.C. Telescope for 13621	A84
15034	Screw TE for 13621	A13	AJ219	Captive for 13621	A50	34037	Slide Bar Spring for 13621	A85
15035	Shaft for Sharpener for 13621	A14	AJ220	Presser for 13621	A51	34038	Carriage Support for 13621	A86
15037	Sharpener Pin for 13621	A16	34005	Plastic Dowel for 13621	A52	34039	Screw TC for 13621	A87
33553	Finishing Stone for 13621	A17	34006	Meat Tray Shaft Spring for 13621	A53	AJ228	Round Bar for 13621	A88
15038	Washer for 13621	A18	34007	Meat Tray Shaft for 13621	A54	34041	Stop Plate for 13621	A89
15039	Nut for 13621	A19	34008	Meat Tray for 13621	A55	15073	Foot for 13621	A90
15040	Set Screw for 13621	A20	34009	Guide Plate for 13621	A56	15074	Capacitor for 13621	A91
15041	Nut for 13621	A21	34010	Meat Tray Support for 13621	A57	AJ229	Condenser Clamp for 13621	A92
15042	Screw TGS for 13621	A22	15070	Carriage Knob for 13621	A58	34043	Screw TC for 13621	A93
15043	Sharpener Push Button for 13621	A23	34011	Screw TE for 13621	A59	AJ230	Nut for 13621	A94
15044	Ball Bearing for 13621	A24	34012	Screw TE for 13621	A60	AJ231	Engine Plate for 13621	A95
33032	45x9x6 Sharpening Stone for 13621	A25	34013	Guide Plate Support for 13621	A61	AJ232	Nut for 13621	A96
15045	Sharpener Pin for 13621	A26	AJ221	Group Plate for 13621	A62	34047	Washer for 13621	A97
15046	Sharpener Pin Spring for 13621	A27	34015	Screw TC for 13621	A63	34048	Hinge for 13621	A98
AJ212	Canopy for 13621	A28	34016	Set Screw TC for 13621	A64	34049	Motor Support Shaft for 13621	A99
AJ213	Sharpening Body for 13621	A29	34017	Cam Guide for 13621	A65	15076	Guide Plate Support Cover for 13621	A101
15050	Washer for 13621	A31	34019	Nut for 13621	A66	AJ233	Motor Dom for 13621	A103
15051	Screw TC for 13621	A32	34020	Cam Screw for 13621	A67	AJ234	Cord for 13621	A104
15052	Sharpener Push Button for 13621	A33	AJ222	Corrugated Washer for 13621	A68	AJ235	White Ring for 13621	A108
15053	Sharpener Pin Spring for 13621	A34	34022	Set Screw for 13621	A69	AJ236	Protection of Electrical Parts for 13621	C4
AJ214	Bead for 13621	A35	34023	Cam for 13621	A70	15350	Complete Sharpening Assy. for 13621	
15055	Washer for 13621	A36	34024	Screw TE for 13621	A71	34018	Cam Assembly for 13621	
15056	Screw TC for 13621	A37	34025	Screw TC for 13621	A72			