


# Parts Breakdown

Model PM-CN-0150-S 46587

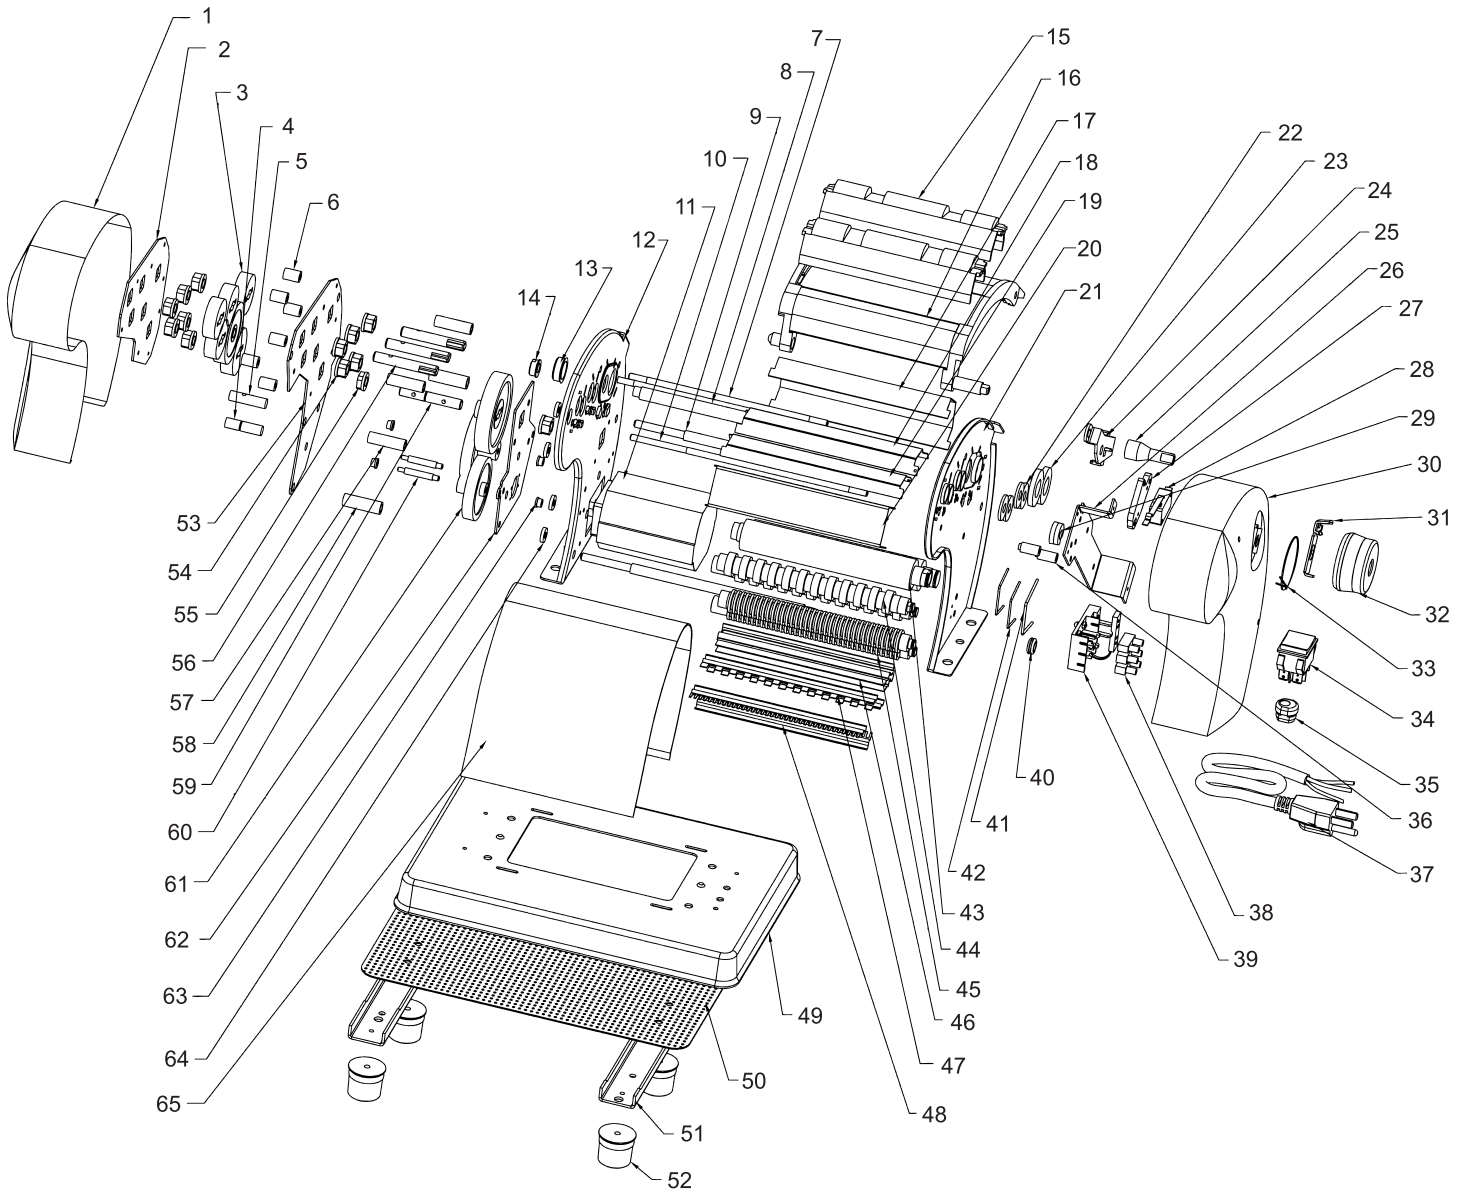

# Parts Breakdown

## Model PM-CN-0150-S 46587

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AJ058	Right Cover for 46587	1	AJ015	Roller Gear (2pc) for 46587	23	AJ037	Cutter Chief Axis (2), Cutter Auxiliary (2) for 46587	45
AI994	Gear Rack I, Screw (6pc), Spring Pad (6pc), Flat Pad (6pc) for 46587	2	AJ016	Adjusting Bracket, Nut (2pc), Wedge (21pc) for 46587	24	AJ038	150 Scraping Knife (2pc) for 46587	46
AI995	One Stage Transmission Gear, Two Stage Transmission Gear, Three Stage Transmission Gear (4pc) for 46587	3	AJ017	Eccentric Shaft for 46587	25	AJ039	Combs 6 (2pc) for 46587	47
AI996	Gear Shaft II, Steering Ring (1pc) for 46587	4	AJ018	Left Cover Frame, Screw (2pc), Grooved Metal Gasket (2pc) for 46587	26	AJ040	Combs 2 (2pc) for 46587	48
AI997	Gear Shaft I, Cylindrical Pin (1pc) for 46587	5	AJ019	Switch Frame, Tapping Screw with Pad (2pc) for 46587	27	AJ061	Lampstand for 46587	49
AI998	Shore III (6pc) for 46587	6	AJ020	Touch Switch, Tapping Screw (2pc) for 46587	28	AJ042	Breathable Sheet for 46587	50
AI999	Binding Bolt M5 (2pc) for 46587	7	AJ021	Switch for 46587	29	AJ043	Bottom Board (2pc), Self Tapping Screw (4pc) for 46587	51
AJ000	Eccentric Shaft for 46587	8	AJ060	Left Cover, Tapping Screw (2pc) for 46587	30	AJ044	Straw (4pc), Self Tapping Screw (4pc) for 46587	52
AJ001	M6 Long Double Threaded Screw (2pc) for 46587	9	AJ023	Adjusting Plate for 46587	31	AJ045	Gear Rack II, Nut (3pc), Screw (2pc), Spring Pad (5pc), Flat Pad (5pc) for 46587	53
AJ002	M5 Long Double Threaded Screw for 46587	10	AJ024	Adjusting Handle, Screw (1pc) for 46587	32	AJ046	Inserts (11pc) for 46587	54
AJ003	Electric Motor, Screw (6pc), Spring Pad (4pc) for 46587	11	AJ025	Round Spring for 46587	33	AJ047	Short Sleeve for 46587	55
AJ004	Right Bracket for 46587	12	AJ026	Button Switch (Four Second) for 46587	34	AJ048	Gear Shaft III (3pc)-Cylindrical Pin (3pc) for 46587	56
AJ005	Axle Sleeve (2pc) for 46587	13	AJ027	Power Line Deduction (6N-4) for 46587	35	AJ049	Shore I (3pc) for 46587	57
AJ006	Eccentric Bushing for 46587	14	AJ028	Screw Hole Pillar (2pc) for 46587	36	AJ050	Shore II (2pc) for 46587	58
AJ007	Surface Cover (2pc) for 46587	15	AJ029	Power Line for 46587	37	AJ051	Layer of Output Shaft, Cylindrical Pin (2pc), Adjusting Wedge for 46587	59
AJ059	Cover of Forearm, Cover of Rear Arm, Cover of Left Arm, Cover of Right Arm, Screw (4pc) for 46587	16	AJ030	Wiring Terminal, Connecting Line I, Connecting Line II, Connecting Line III, Tapping Screw (2pc) for 46587	38	AJ052	Dowel (2pc), Distance Piece for 46587	60
AJ009	Front Baffle for 46587	17	AJ031	Wire Holder, Screw (2pc) for 46587	39	AJ053	Output Gear, Mid Gear, Helical Gear for 46587	61
AJ010	Mid Baffle for 46587	18	AJ032	Rubber Sleeve for 46587	40	AJ054	Gear Rack III, Screw (5pc), Spring Pad (5pc) for 46587	62
AJ011	Small Intermediate Baffle for 46587	19	AJ033	Roller Spring Clip (2pc) for 46587	41	AJ055	Fixed Plate Set (4pc) for 46587	63
AJ012	Back Baffle for 46587	20	AJ034	Cutter Spring Clip (2pc) for 46587	42	AJ056	Damping Pad (5pc) for 46587	64
AJ013	Left Bracket for 46587	21	AJ035	Roller Chief Axis, Roller Auxiliary Axis, Bulkhead for 46587	43	AJ057	Motor Cover for 46587	65
AJ014	Cutter Gear (4pc), Axial Ring File (4pc) for 46587	22	AJ036	Cutter Chief Axis (6), Cutter Auxiliary (6) for 46587	44			