


PARTS BREAKDOWN

ITEM	MODEL
48111	Santos 10CV1

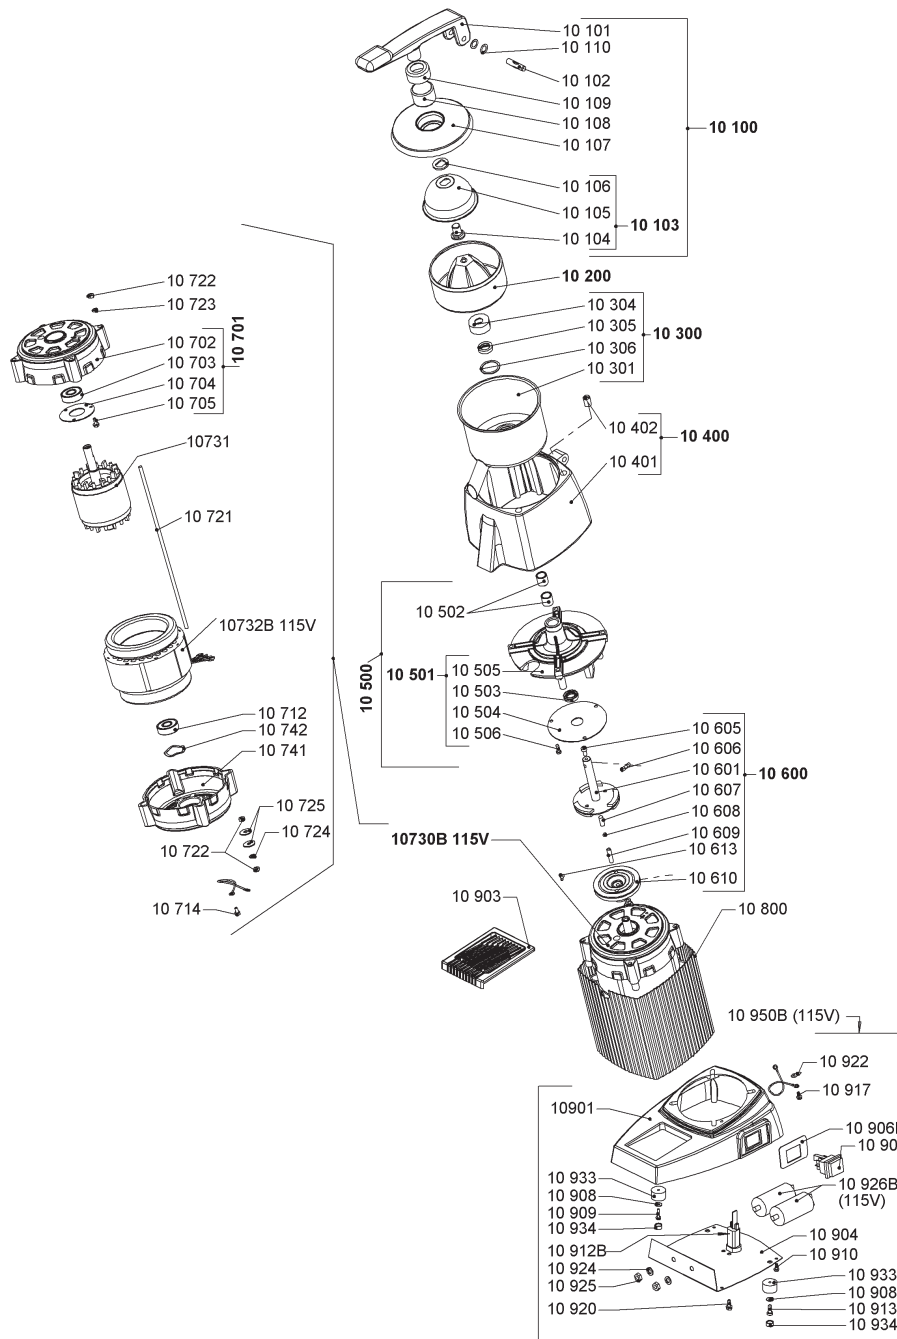

PARTS BREAKDOWN

ITEM	MODEL
48111	Santos 10CV1

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
39729	Complete Lever for 48111	10100	73120	Friction Plate for 48111	10504	AM922	Complete Motor 110V 60Hz for 48111	10730B
40683	Black Lever for 48111	10101	73121	Intermediate Flange Only for 48111	10505	AC370	Complete Rotor with Shaft for 48111	10731
40421	Lever Axle (Pin) D8x34 for 48111	10102	73122	Screw H4x12 for 48111	10506	AM923	Stator Only 110V 60Hz for 48111	10732B
40684	Complete Cup with Screw and Washer for 48111	10103	40699	Complete Friction Clutch for 48111	10600	AC371	Lower Flange for 48111	10741
40685	Cup Locking Screw for 48111	10104	40700	Friction Clutch & Disc (Welded) for 48111	10601	AC372	Ondulated Washer for 48111	10742
40686	Stainless Steel Cup Only for 48111	10105	40701	Screw HC M5x10 Stainless Steel for 48111	10605	73141	Stainless Steel Housing for 48111	10800
40687	Stainless Steel Washer for 48111	10106	40529	Stainless Steel Driving Pin for 48111	10606	44062	Chromed Base Only for 48111	10901
73114	Stainless Steel Cover Only for 48111	10107	40702	Fiber Pushing Pin for 48111	10607	40706	Plastic Drip Tray for 48111	10903
73115	Stainless Steel Spring for 48111	10108	40703	Steel Ball D6 for 48111	10608	73144	Bottom Plate for 48111	10904
73116	Stainless Steel Spring Cap for 48111	10109	40704	Brake Stainless Steel Spring for 48111	10609	40707	Switch for 48111	10905
73117	Lever Washer for 48111	10110	40705	Complete Drive Plate for 48111	10610	AM924	On-Off Plate (110V UL) for 48111	10906B
40688	Perforated Strainer (Stainless Steel) for 48111	10200	AC367	Screw HC M6x8 for 48111	10613	73147	Washer 4x10 for 48111	10908
40689	Complete Stainless Steel Bowl with Nut for 48111	10300	73125	Complete Upper Flange for 48111	10701	73148	Screw H4x16 ZN for 48111	10909
73118	Stainless Steel Bowl for 48111	10301	73126	Upper Flange for 48111	10702	73149	Screw H4x10 for 48111	10910
40690	Nylon Nut for 48111	10304	73127	Bearing 6201 for 48111	10703	44063	Power Cord with USA Plug for 48111	10912B
40691	Gasket D12x22x5 for 48111	10305	73128	Bearing Washer for 48111	10704	73151	Screw 4.8x16 ZN for 48111	10913
40692	Polyethylene Washer for 48111	10306	73129	Screw H4x10 ZN for 48111	10705	73153	Screw 4x10 for 48111	10917
44058	Chromed Aluminum Top (Bowl) with 4 Nuts for 48111	10400	73132	Bearing 6201 for 48111	10712	73156	Screw H M5x12 ZN for 48111	10920
44059	Chromed Aluminum Top Only (Bowl) for 48111	10401	73134	Screw H4x10 ZN for 48111	10714	AM925	Ground Symbol for 48111	10922
40695	Bowl Locking Nut for 48111	10402	73135	Assembling Threaded Rod M5 for 48111	10721	AM926	Washer AZ 8 for 48111	10924
40696	Complete Intermediate Flange for 48111	10500	73136	Nut H M5 ZN for 48111	10722	AM927	Nut H M8 ZN for 48111	10925
73119	Equipped Intermediate Flange without Brushes for 48111	10501	73137	Split Washer D5 for 48111	10723	AM928	Foot (for NSF 110V) for 48111	10933
40697	Bronze Bearing for 48111	10502	73138	Washer AZ 5 for 48111	10724	AM929	Cap (for 110V) for 48111	10934
40698	Gasket 12x22x5 for 48111	10503	73139	Washer 6x18 for 48111	10725	AP892	Complete Chromed Base NSF 110V for 48111	10950B