
Parts Breakdown


Model BS-VE-3200-S 10272

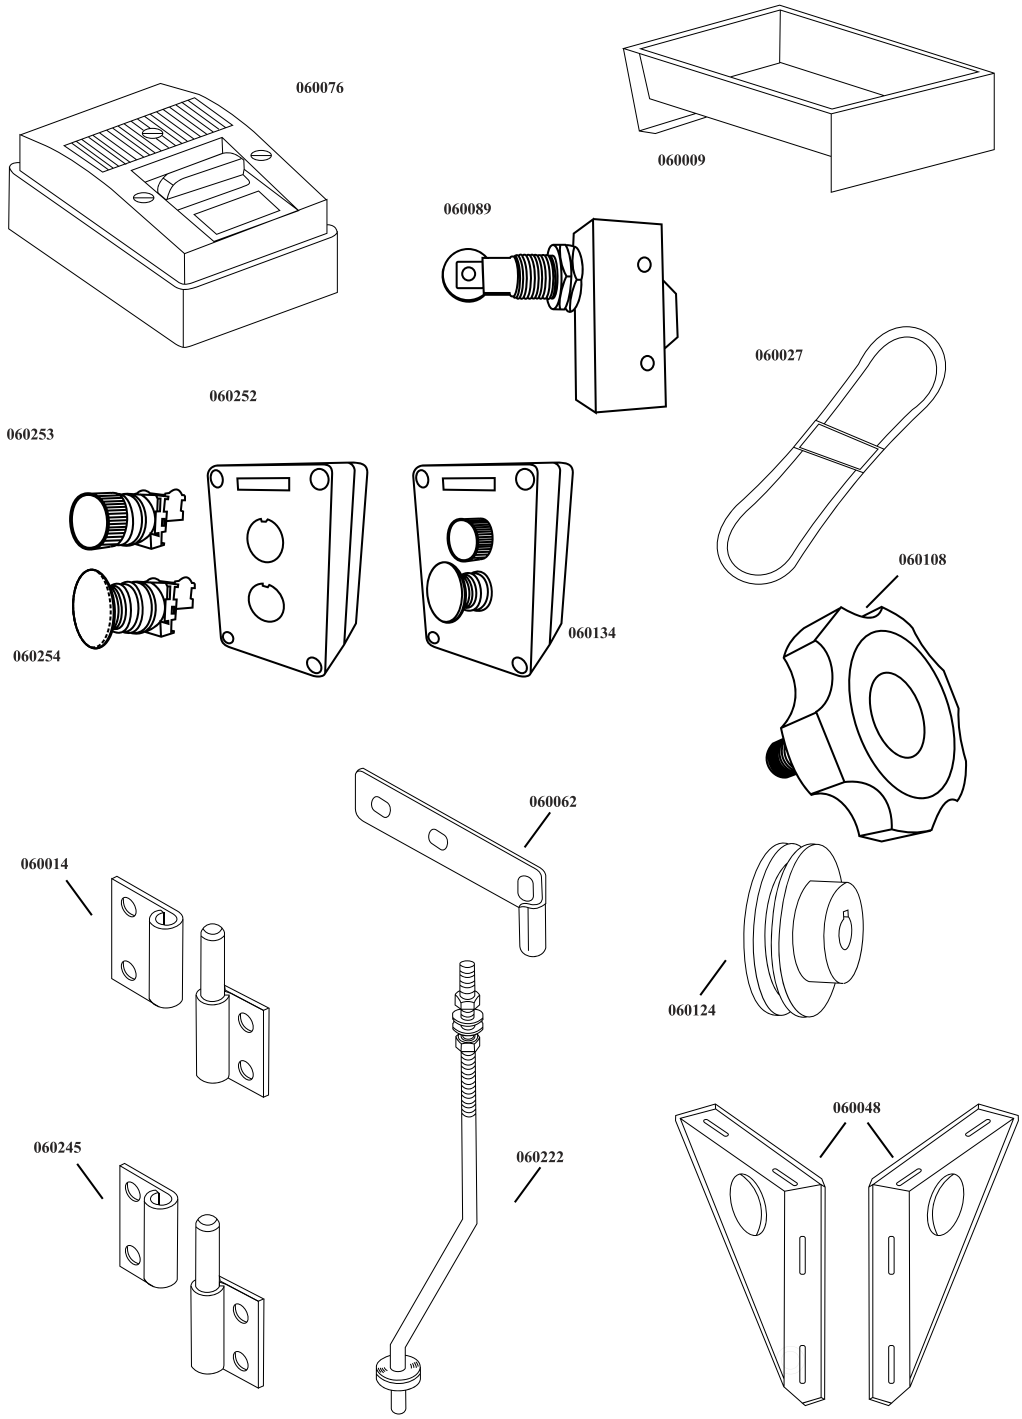


Parts Breakdown


Model BS-VE-3200-S 10272

060098

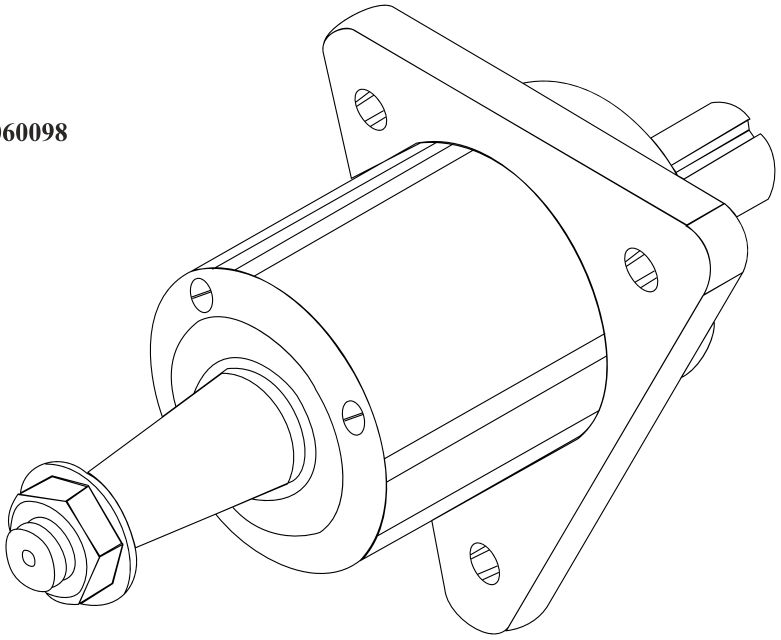

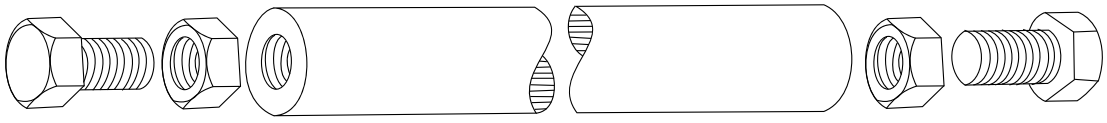


060035

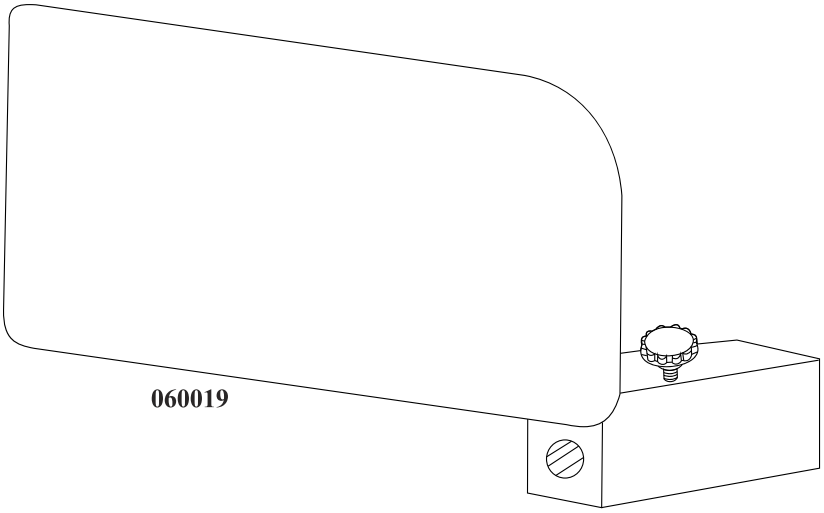

060019


Parts Breakdown

Model BS-VE-3200-S 10272

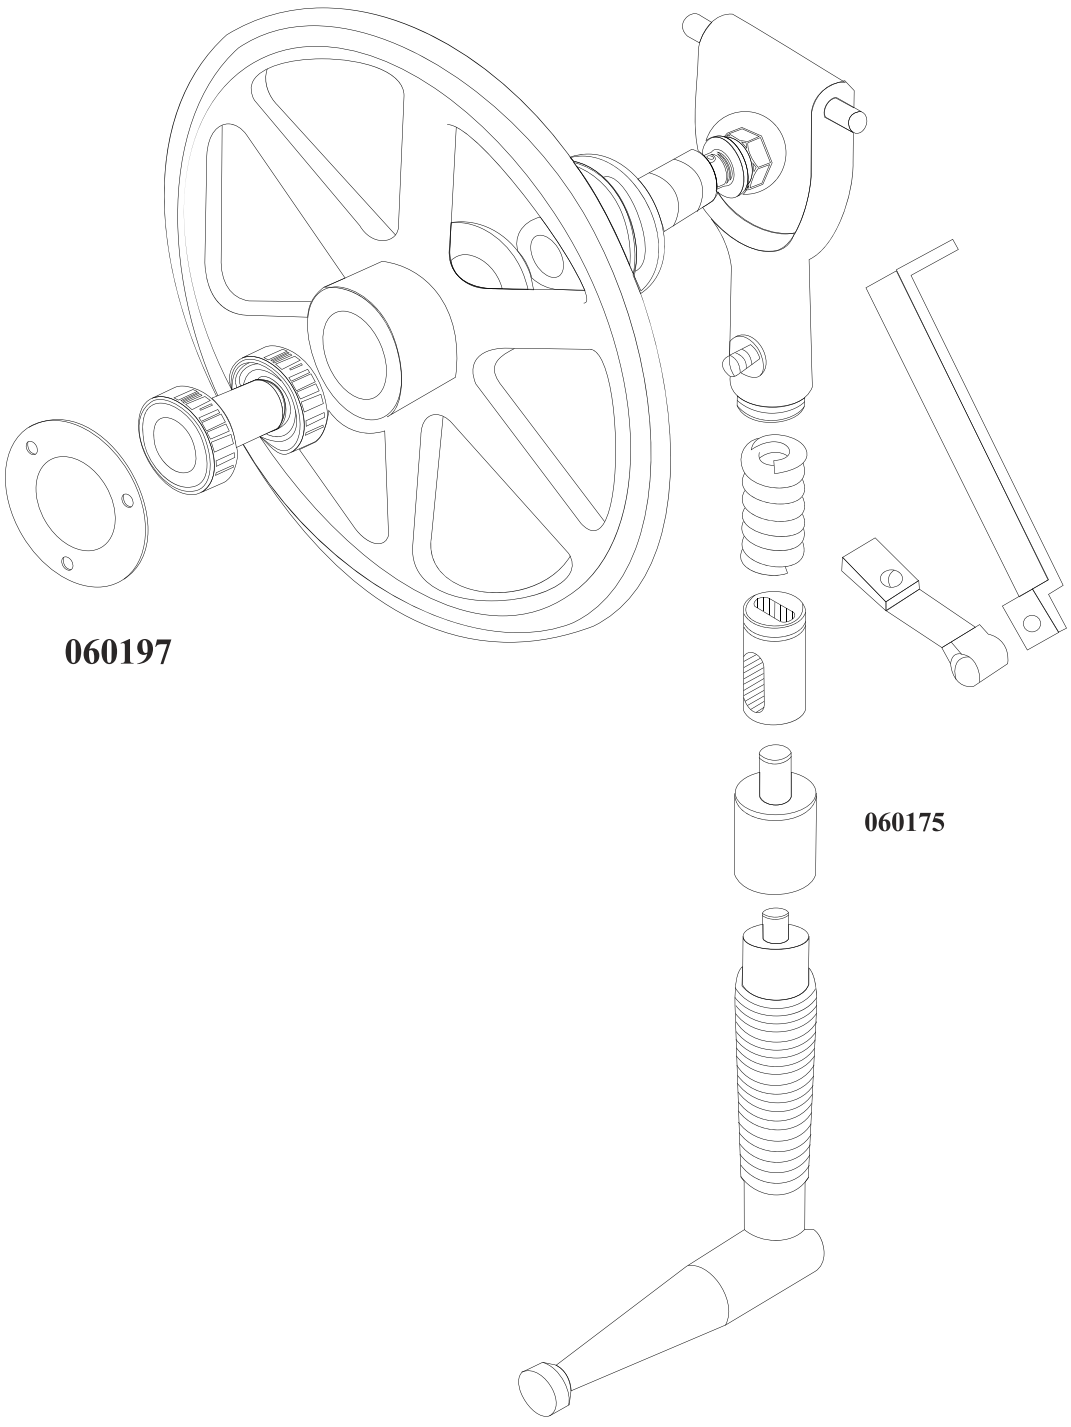


Parts Breakdown

Model BS-VE-3200-S 10272

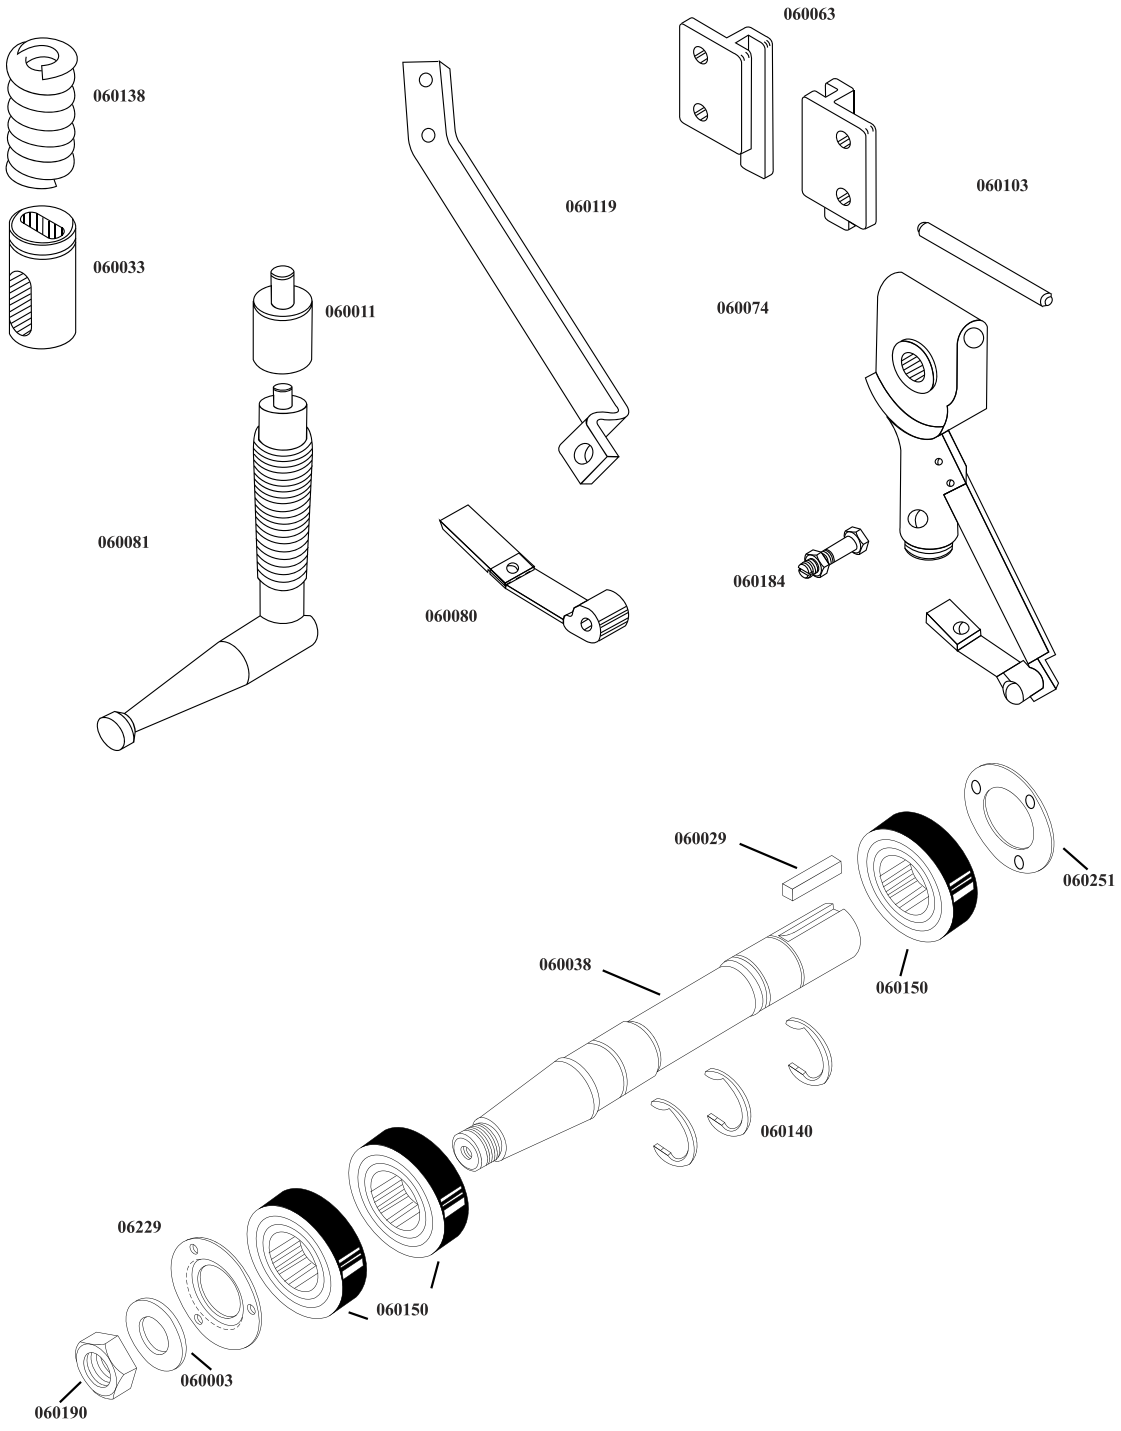


Parts Breakdown

Model BS-VE-3200-S 10272

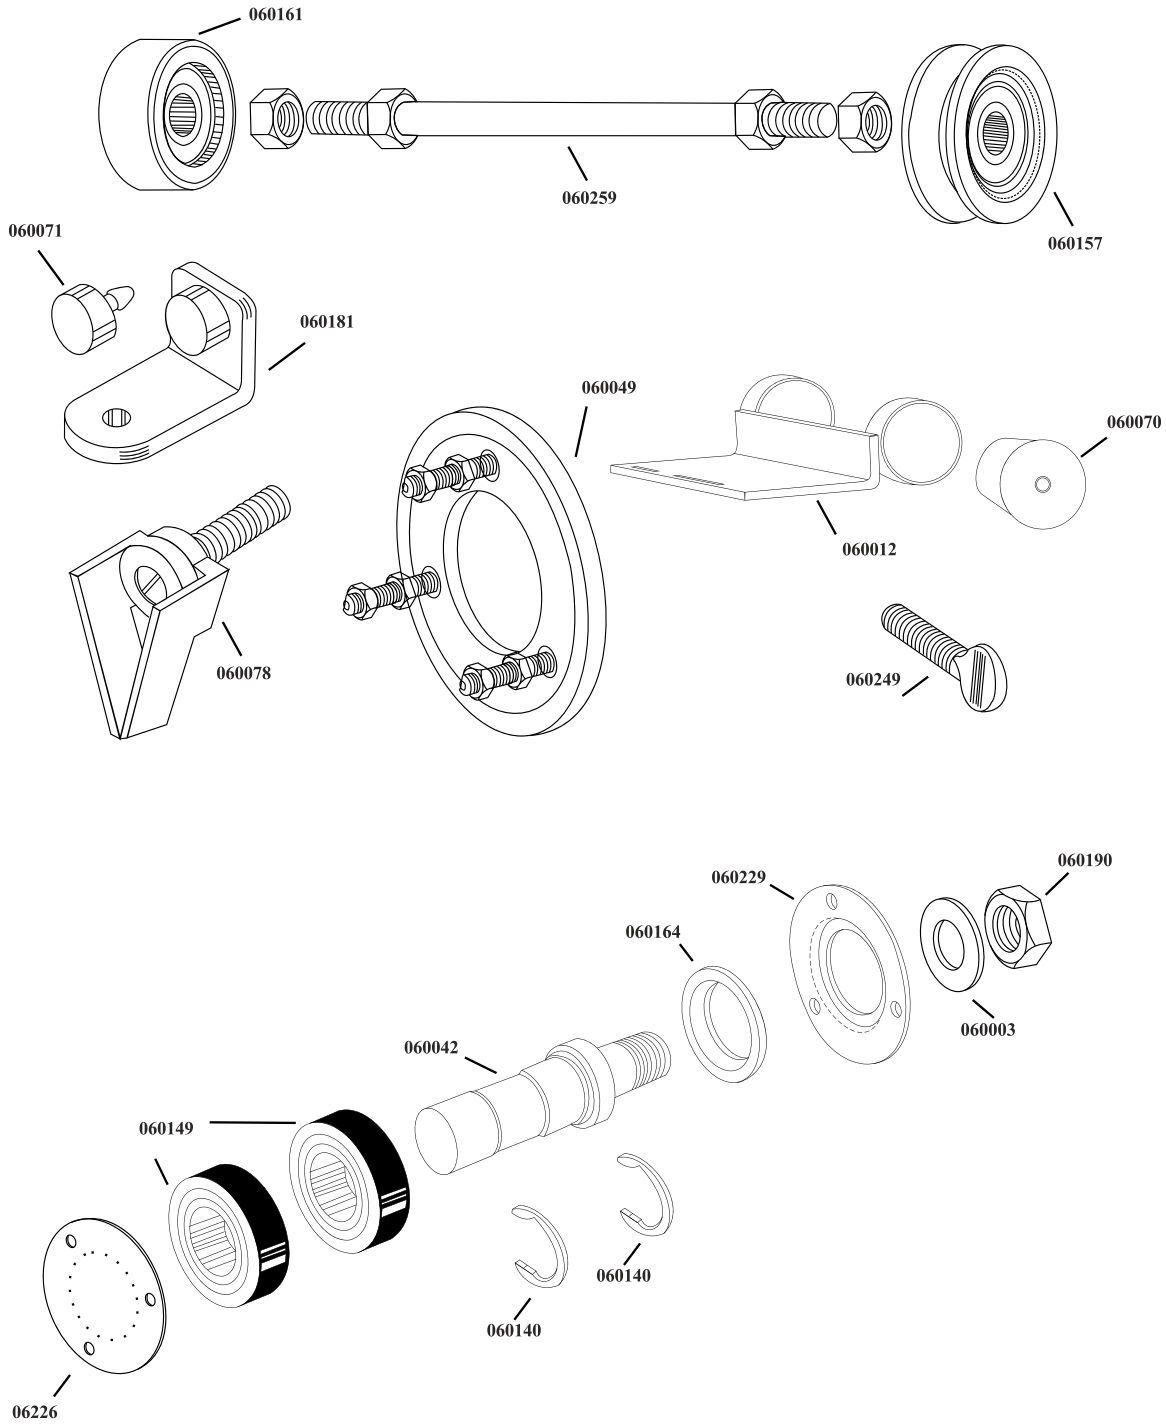


Parts Breakdown

Model BS-VE-3200-S 10272

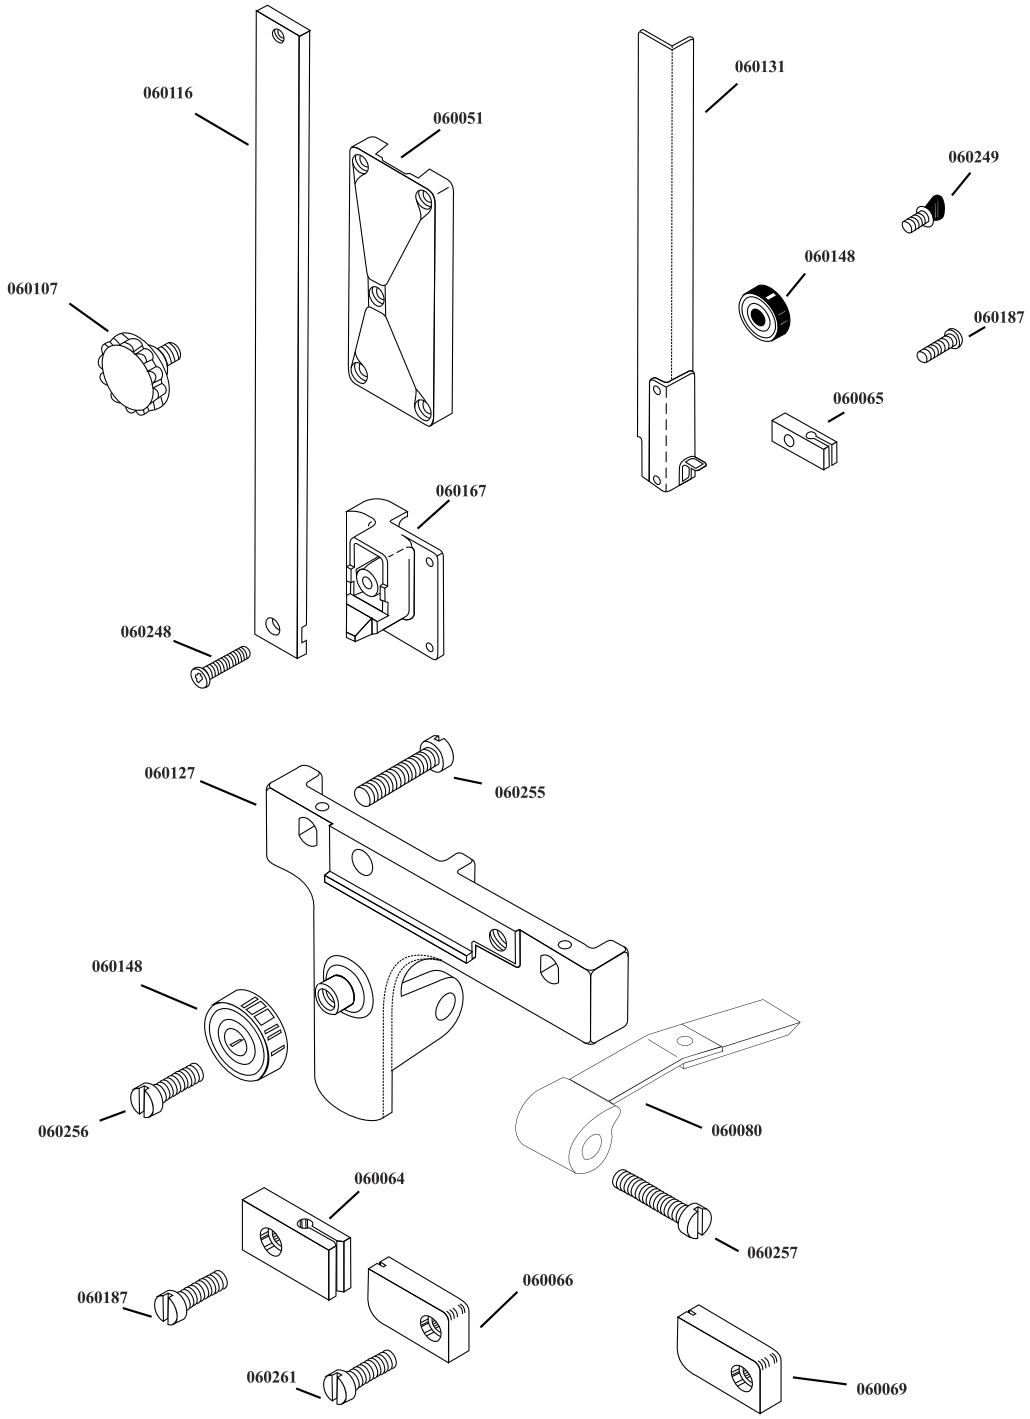


Parts Breakdown

Model BS-VE-3200-S 10272

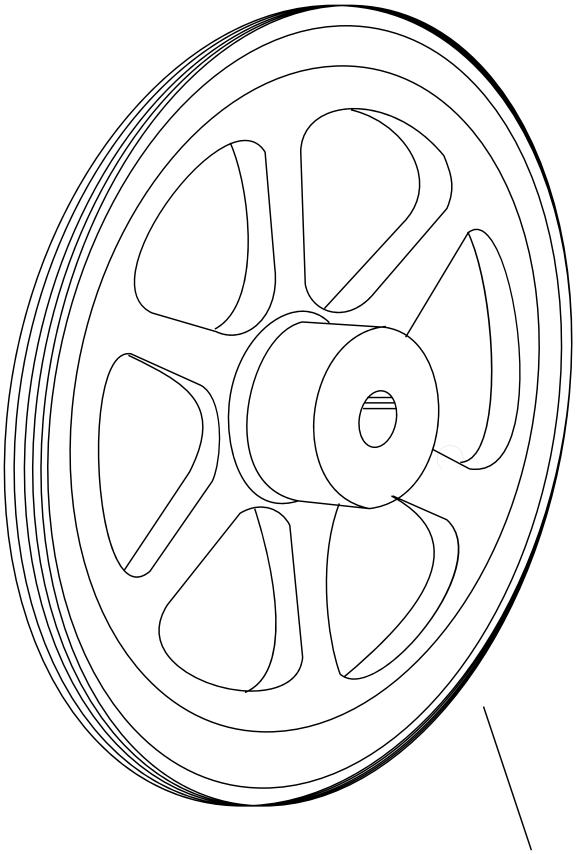

060193
060209


060202

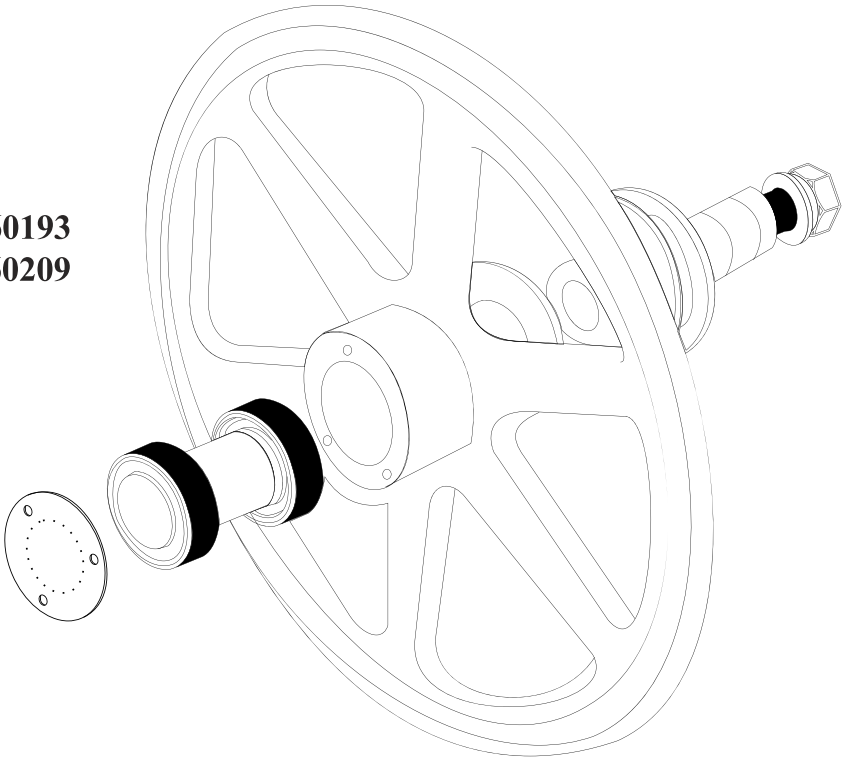


Parts Breakdown

Model BS-VE-3200-S 10272


060239

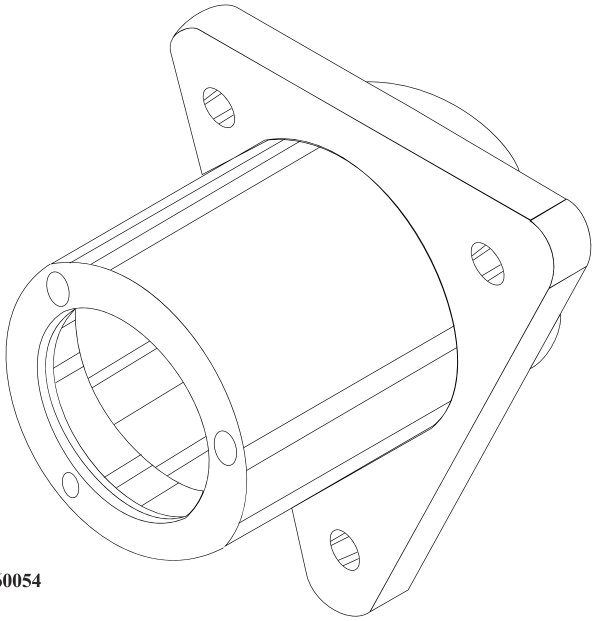

060054

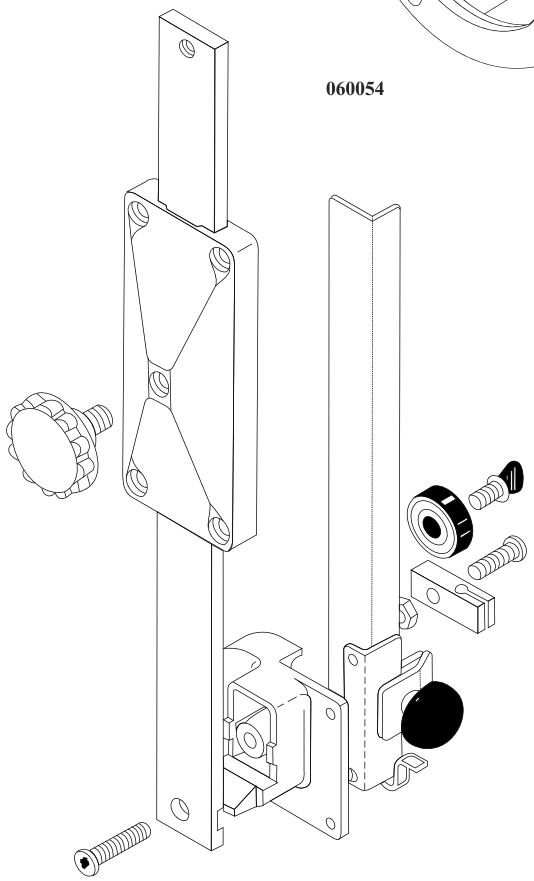

060128

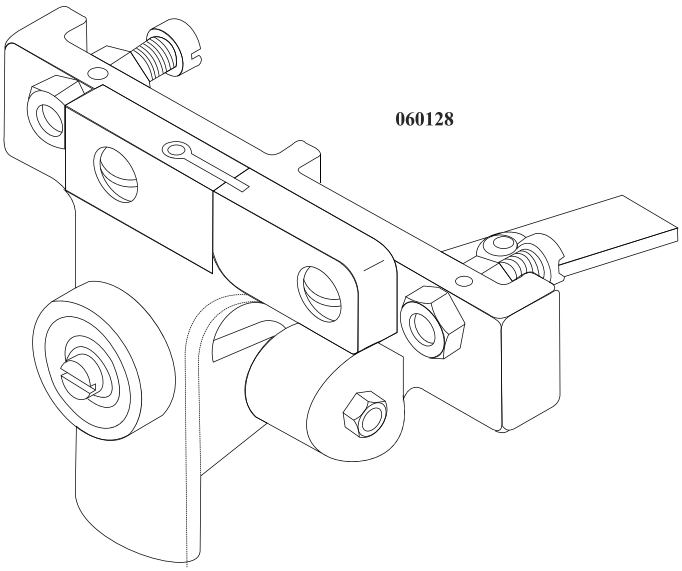

Parts Breakdown

Model BS-VE-3200-S 10272

Item No.	Description	Position
62199	Front Cover for Steering Wheel for 10272	06226
64825	Steel Cover for Steering Shaft for 10272	06229
45115	Washer for 10272	060003
AJ917	Metal Tray for 10272	060009
62185	Base with Facial Steel Roller or Iron for 10272	060011
62152	Motor Base for 10272	060012
62061	Long Door Hinge for 10272	060014
62210	Full Arm Shield for 10272	060019
23716	Belt for 10272	060027
45116	Pin for 10272	060029
62184	Spacer for 10272	060033
62209	Arm Shaft for 10272	060035
24135	Shaft for 10272	060038
24139	Shaft for 10272	060042
62205	Steel Square Brackets for 10272	060048
62065	Aluminum Flange for 10272	060049
62066	Aluminum Front for 10272	060051
62207	Complete Front Plate for 10272	060054
62170	Steel Door Hook for 10272	060062
15587	Fluted Guide Pair for 10272	060063
64593	Lower Steel Guide for 10272	060064
64592	Upper Steel Guide for 10272	060065
26128	Aluminum Guide for 10272	060066
64594	Nylon Guide for 10272	060069
62151	Motor Base Rubber for 10272	060070
AJ570	Rubber Stopper for 10272	060071

Item No.	Description	Position
24156	Scraper Bracket for 10272	060074
62201	Switch for 10272	060076
17707	Scraper for 10272	060078
17708	Scraper for 10272	060080
62186	Steel Handle for 10272	060081
44013	Micro Switch for 10272	060089
64585	Complete Aluminum Housing for 10272	060098
24154	Pin for 10272	060103
62078	Tightening Knob for 10272	060107
16869	Knob for 10272	060108
64592	Upper Steel Guide for 10272	060116
62188	Flywheel Scraper Holder for 10272	060119
62203	Motor Pulley for 10272	060124
45066	Guide for 10272	060127
23718	Guide Assembly for 10272	060128
62193	Blade Protector for 10272	060131
AL385	Complete Box + Start & Stop Button for 10272	060134
62132	Hairpin Spring for 10272	060138
17711	Clip for 10272	060140
45067	Bearing 6200 for 10272	060148
16871	Bearing for 10272	060149
16872	Bearing 6205-2RS1 for 10272	060150
64580	Trapezoidal Flywheel for 10272	060157
62194	Complete Flat Wheel for 10272	060161
40168	Seal for 10272	060164
62091	Aluminum Support for 10272	060167

Item No.	Description	Position
AJ916	Complete Strap with Iron Handle for 10272	060175
62197	Complete Car Iron Wheel for 10272	060181
24155	Bolt for 10272	060184
26129	Long Screw for Aluminum Guide for 10272	060187
44012	Lower Shaft Nut for 10272	060190
64564	Lower Flywheel for 10272	060193
62206	Complete Upper Cylindrical Flywheel for 10272	060197
62206	Complete Upper Cylindrical Flywheel for 10272	060202
24137	Pulley for 10272	060209
62204	Motor Tension Screw for 10272	060222
17717	Cover for 10272	060229
62200	Aluminum Housing for 10272	060239
62099	Door Hinge for 10272	060245
62102	Front Plate Screw for 10272	060248
64570	Tension Screw for 10272	060249
17719	Cover for 10272	060251
31436	Housing (Box) only for Switch for 10272	060252
16873	Start Switch (Green Button) for 10272	060253
16874	Stop Switch for 10272	060254
62143	Screw for Roller Port Guide for 10272	060255
45068	Screw for 10272	060256
AJ915	Screw for 10272	060257
62195	Wheel Shaft for 10272	060259
26130	Short Screw for Aluminum Guide for 10272	060261
39416	Motor 220/60/1 for 10272	