
Parts Breakdown


Model BS-VE-3200-T 18943

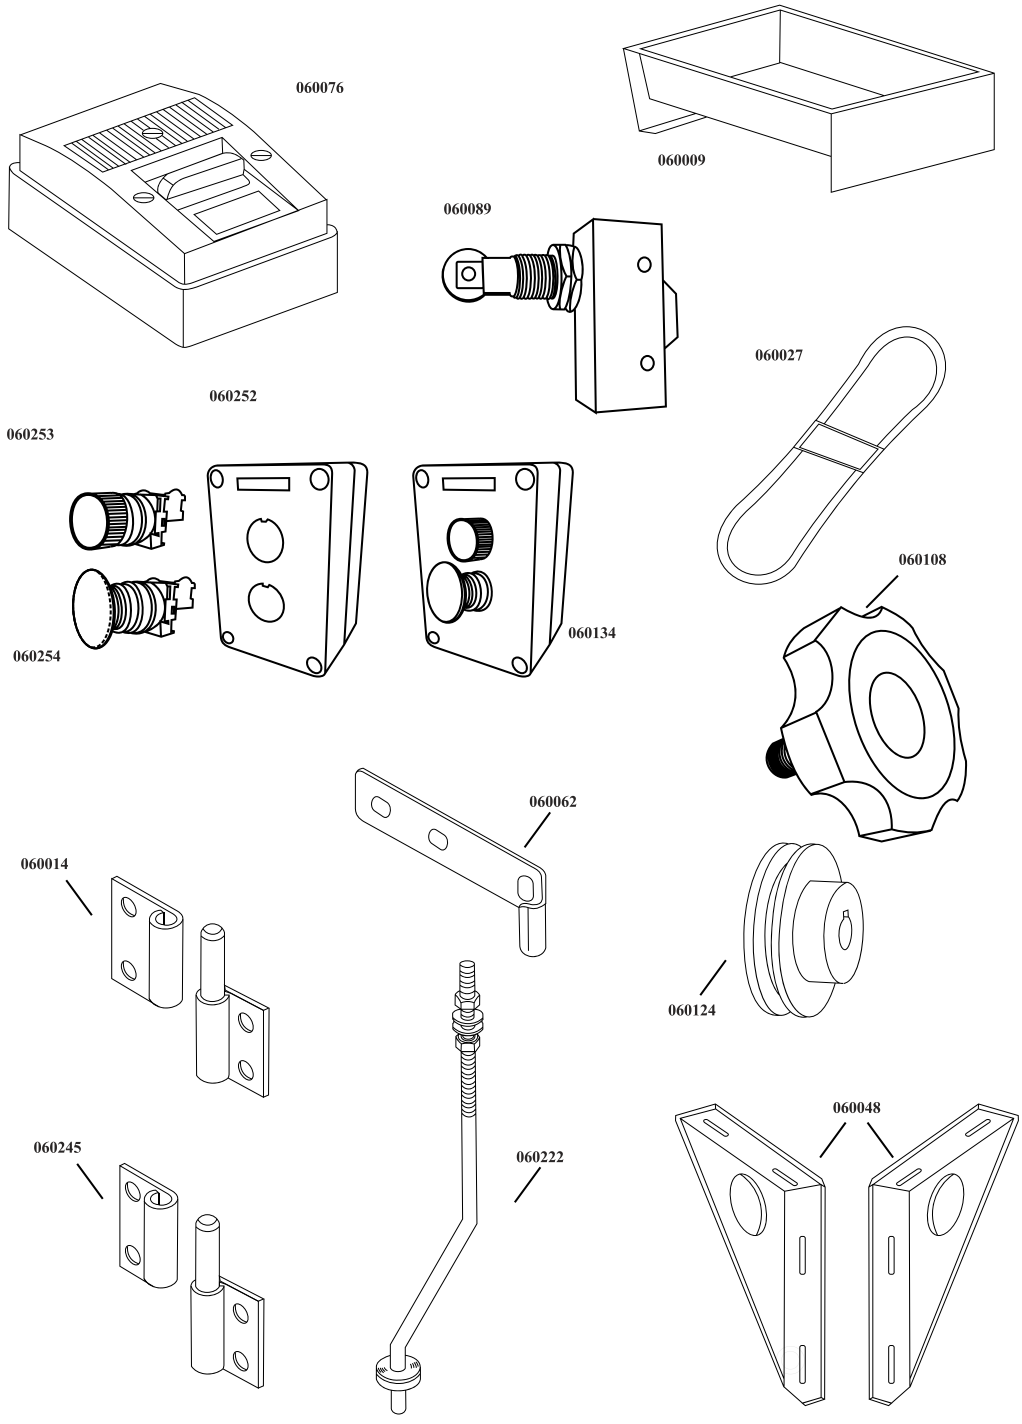


Parts Breakdown


Model BS-VE-3200-T 18943

060098

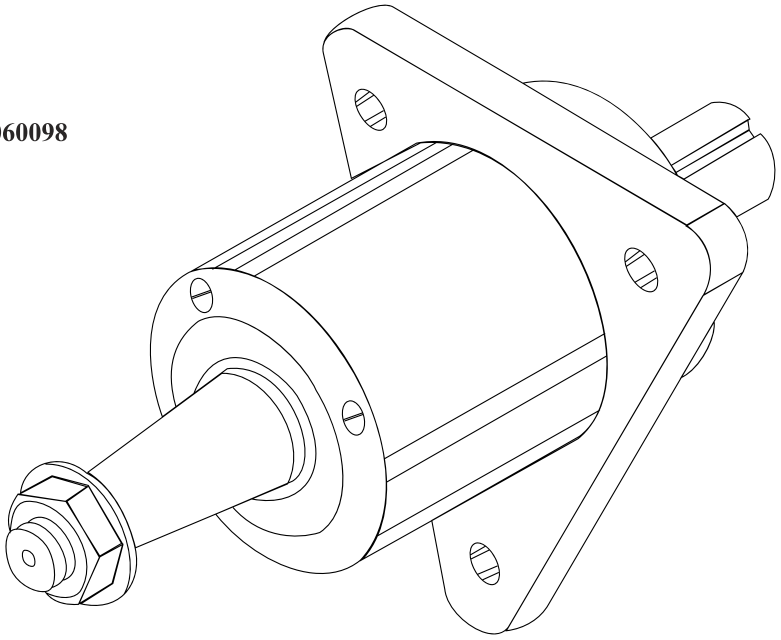

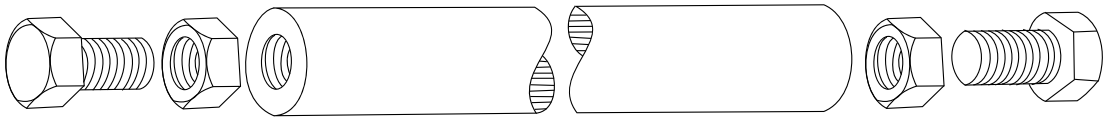


060035

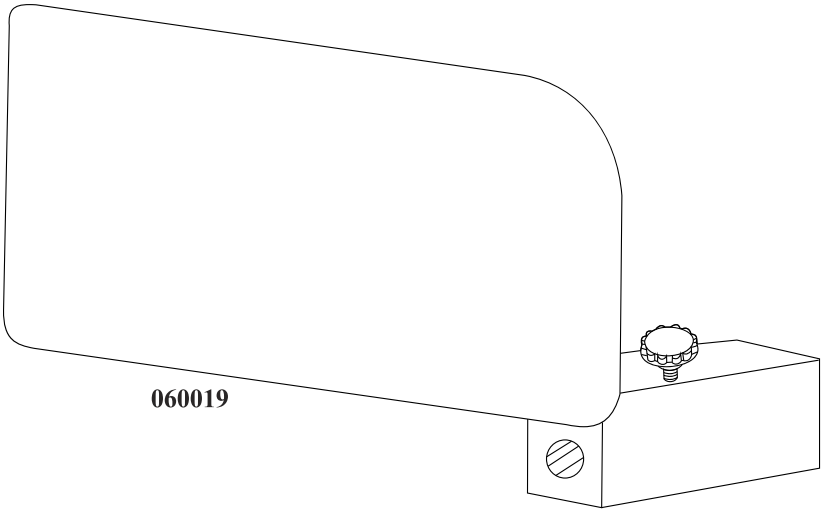

060019


Parts Breakdown

Model BS-VE-3200-T 18943

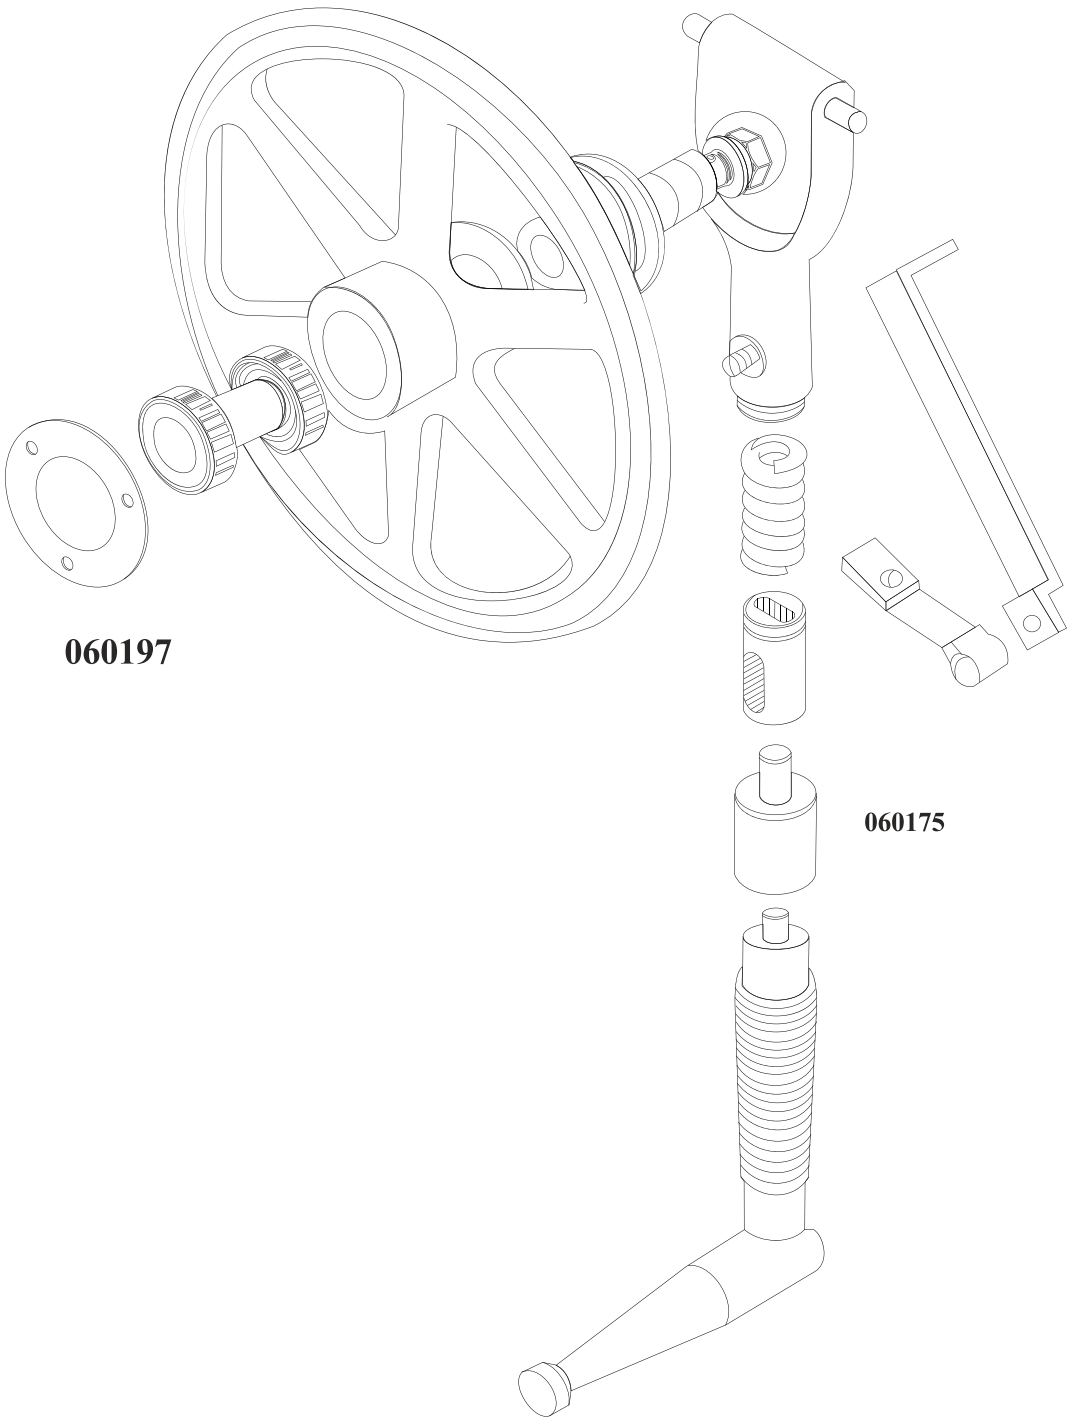


Parts Breakdown

Model BS-VE-3200-T 18943

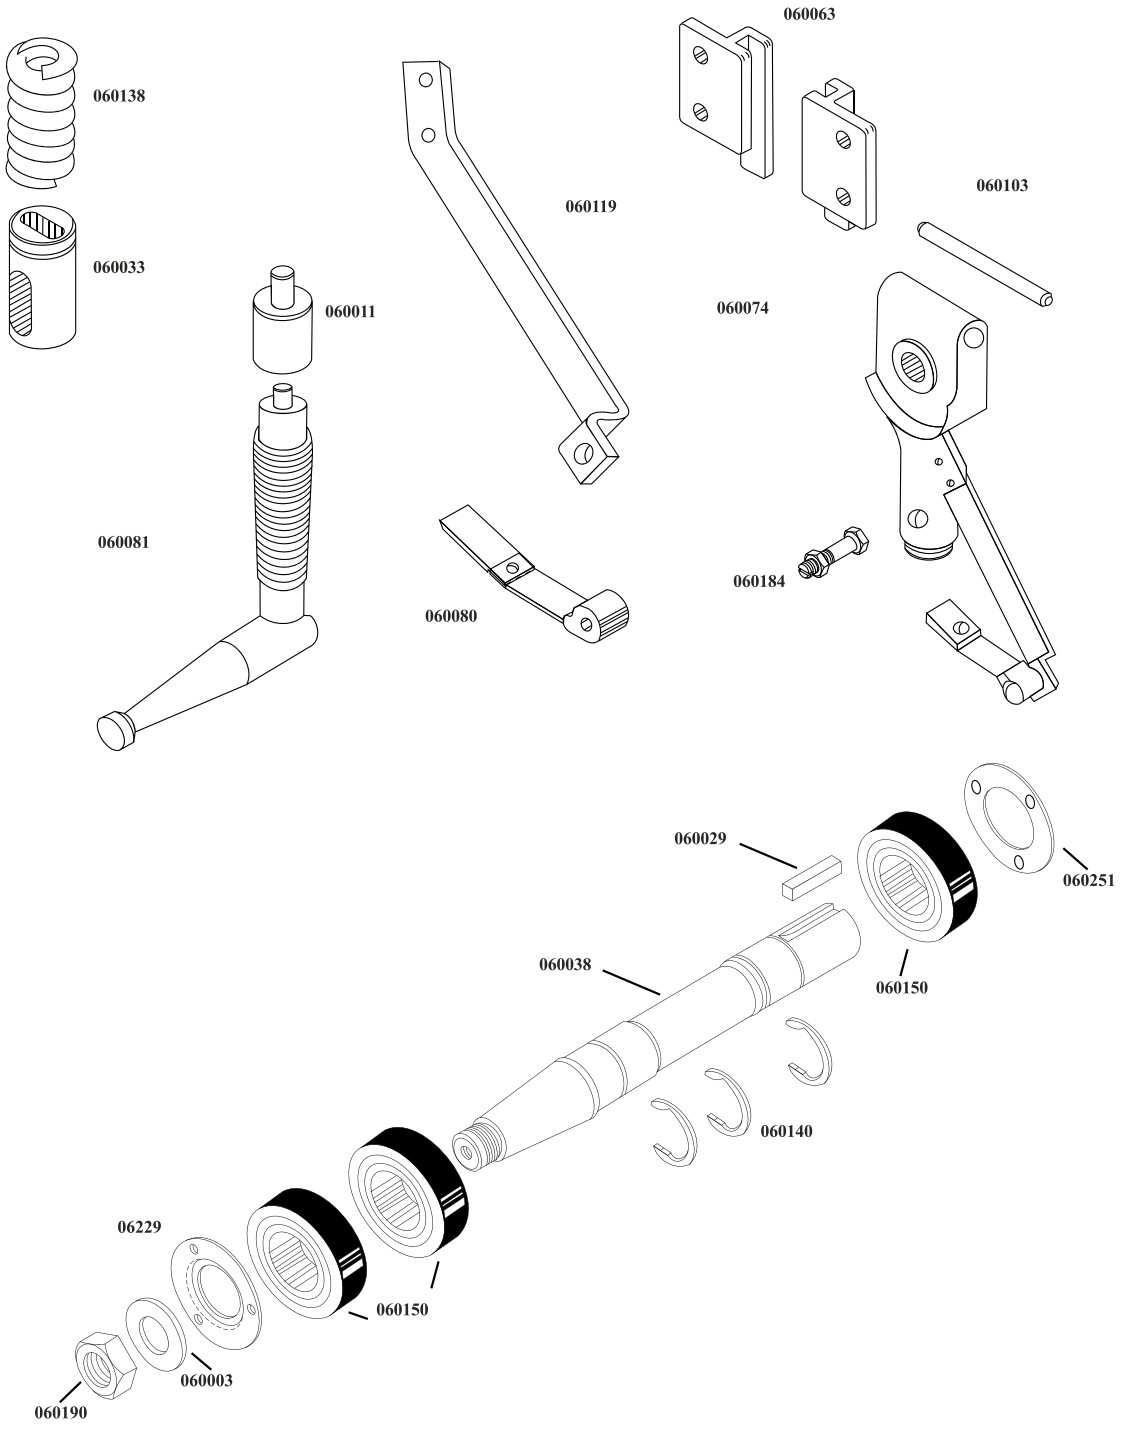


Parts Breakdown

Model BS-VE-3200-T 18943

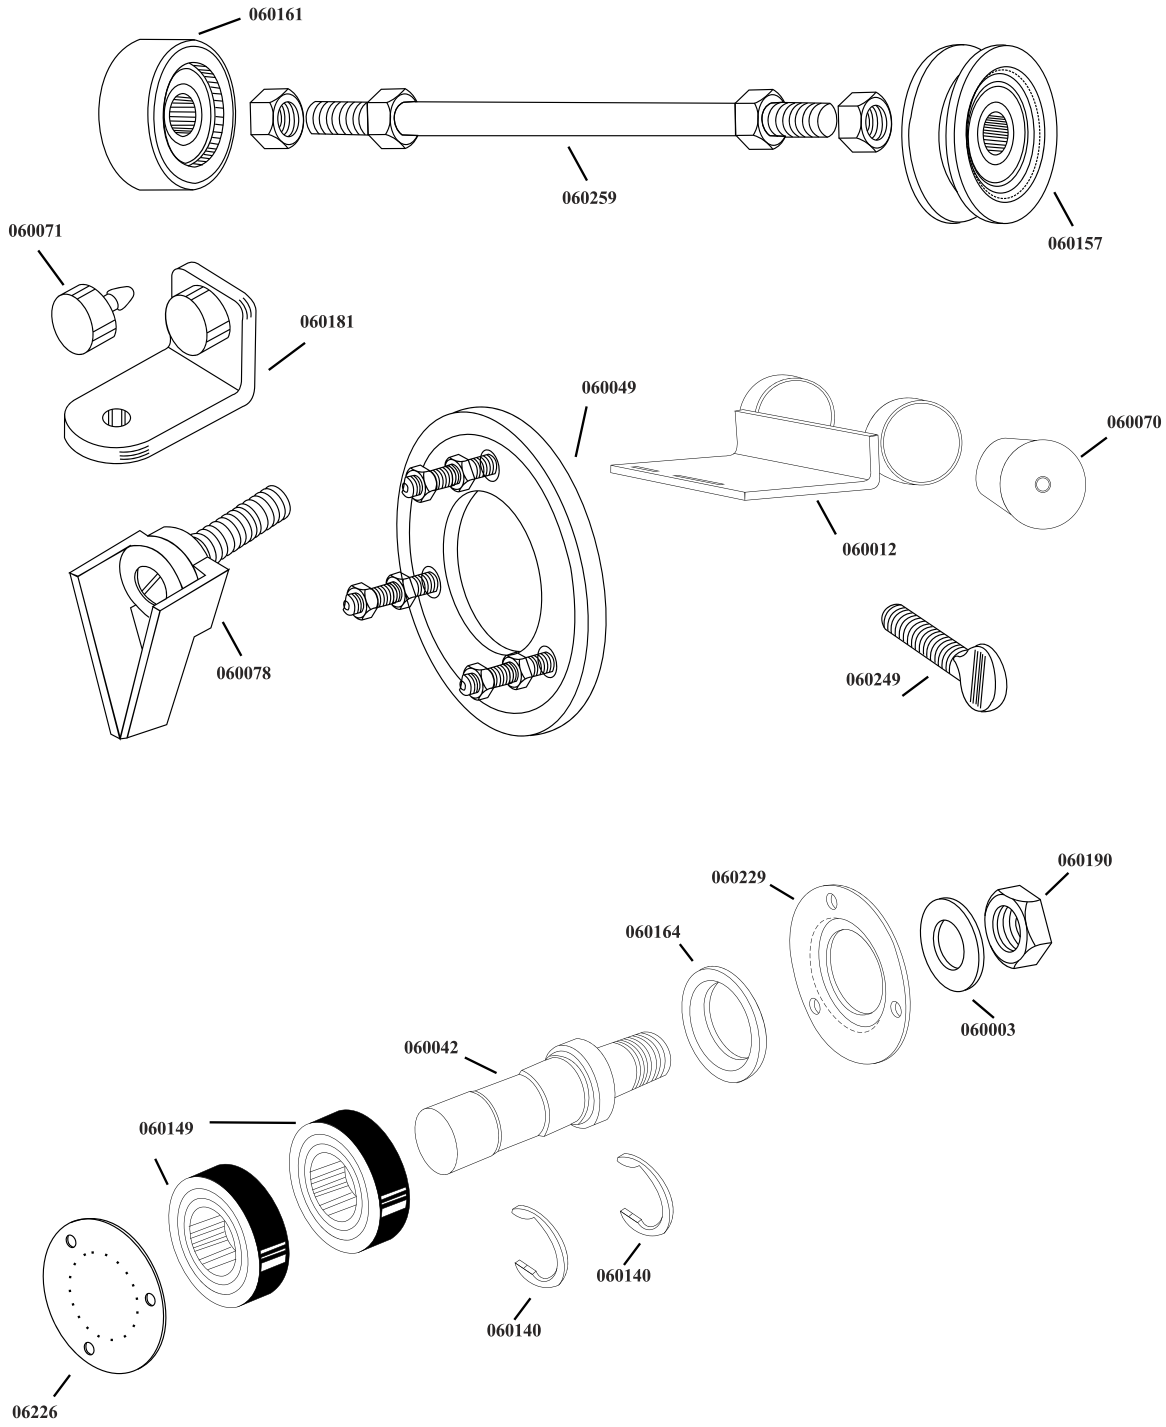


Parts Breakdown

Model BS-VE-3200-T 18943

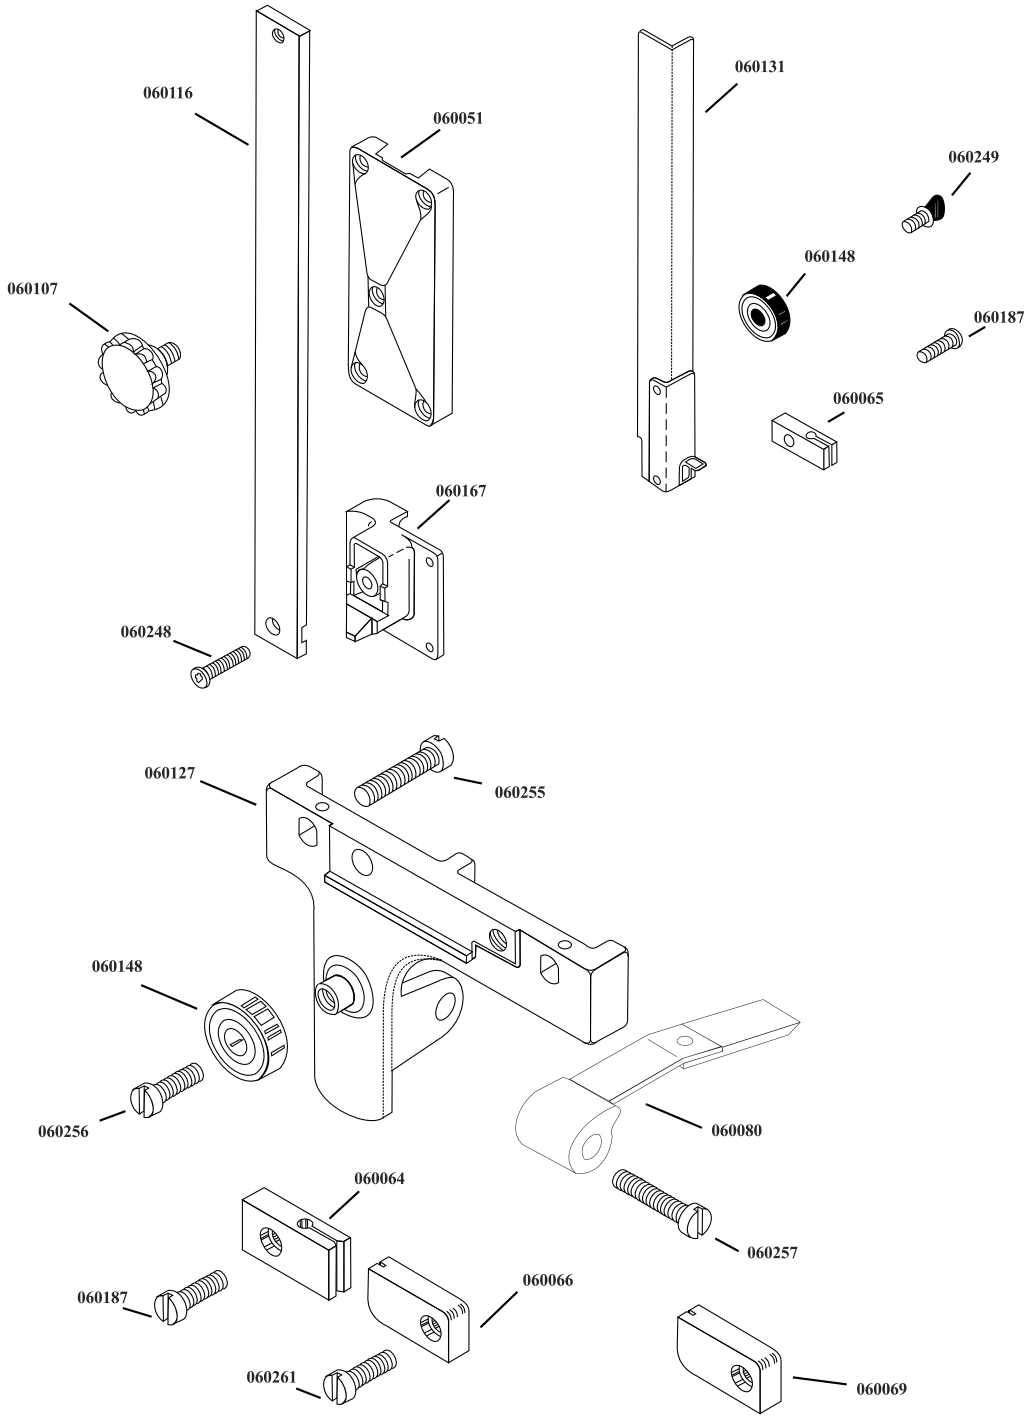


Parts Breakdown

Model BS-VE-3200-T 18943

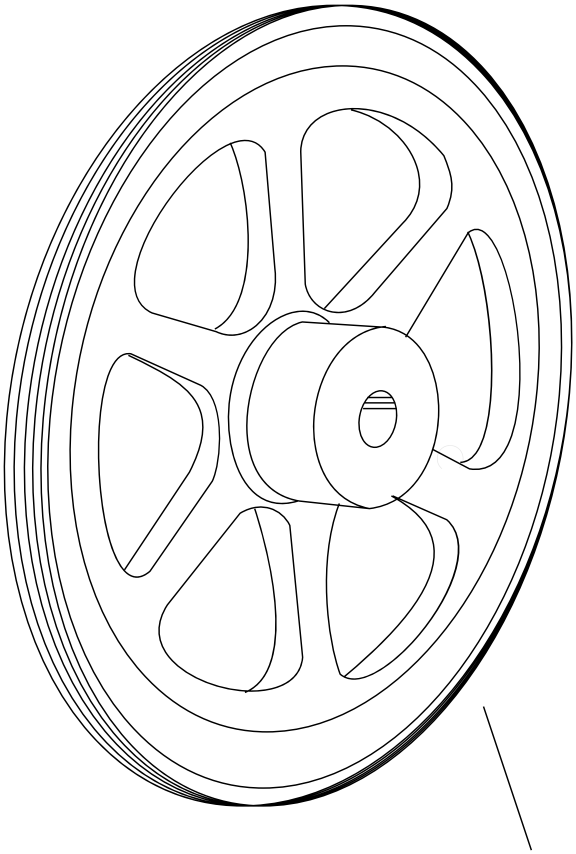


060193
060209

060202

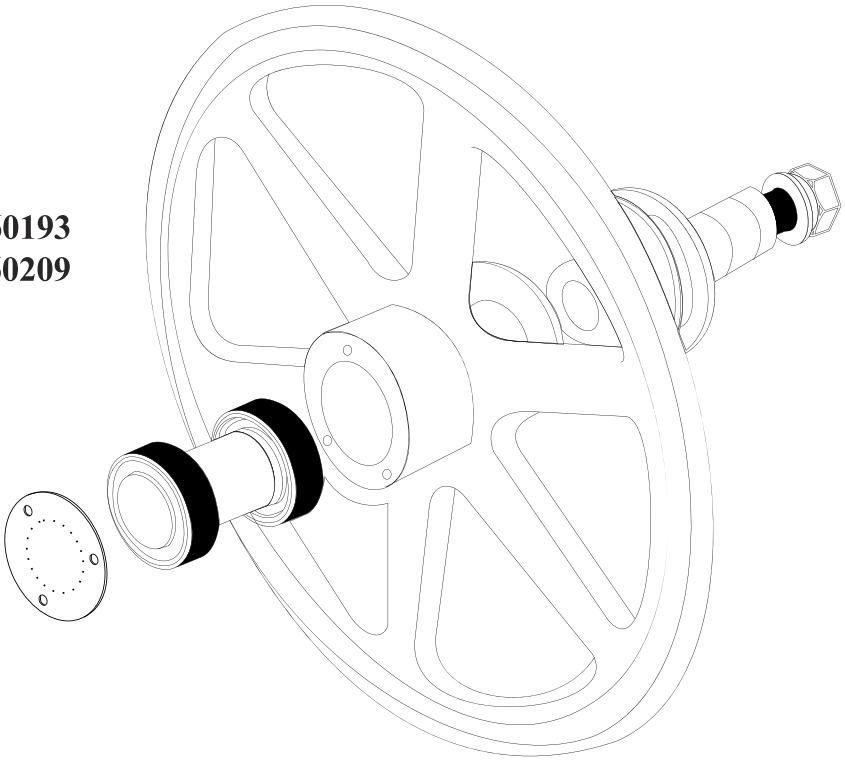

Parts Breakdown

Model BS-VE-3200-T 18943

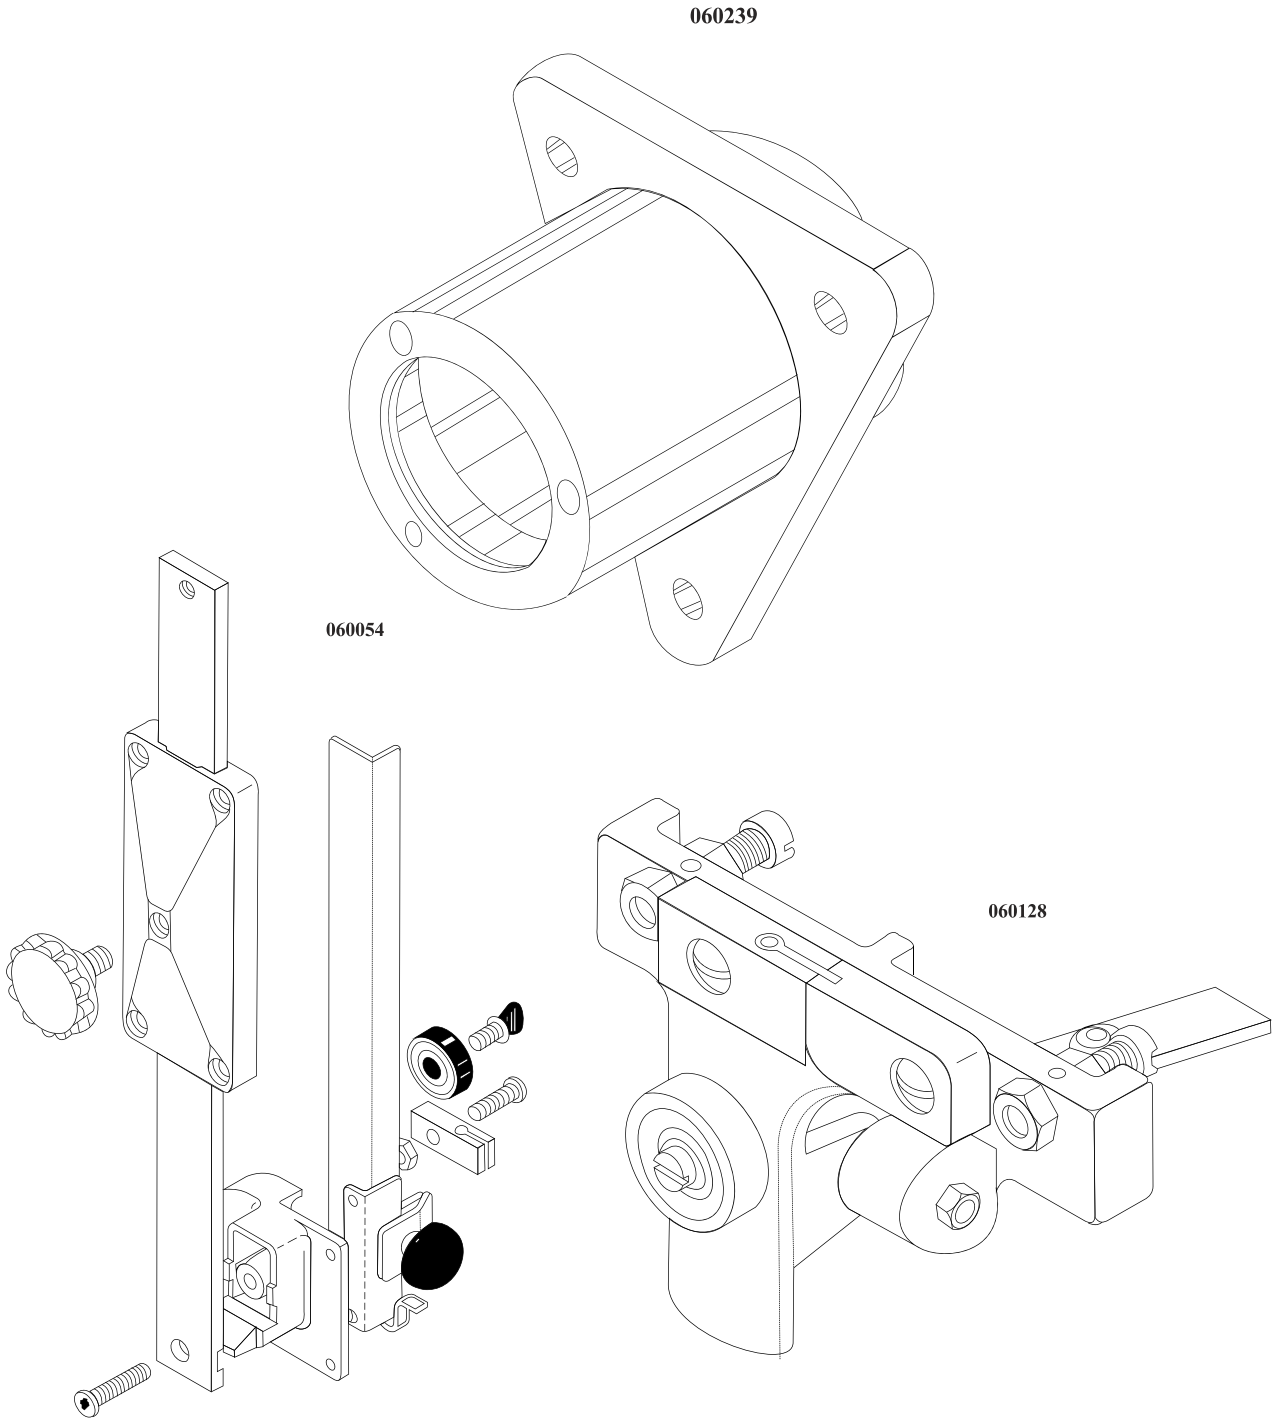

Parts Breakdown

Model BS-VE-3200-T 18943

Item No.	Description	Position
62199	Front Cover for Steering Wheel for 18943	06226
64825	Steel Cover for Steering Shaft for 18943	06229
45115	Washer for 18943	060003
AJ917	Metal Tray for 18943	060009
62185	Base with Facial Steel Roller or Iron for 18943	060011
62152	Motor Base for 18943	060012
62061	Long Door Hinge for 18943	060014
62210	Full Arm Shield for 18943	060019
23716	Belt for 18943	060027
45116	Pin for 18943	060029
62184	Spacer for 18943	060033
62209	Arm Shaft for 18943	060035
24135	Shaft for 18943	060038
24139	Shaft for 18943	060042
62205	Steel Square Brackets for 18943	060048
62065	Aluminum Flange for 18943	060049
62066	Aluminum Front for 18943	060051
62207	Complete Front Plate for 18943	060054
62170	Steel Door Hook for 18943	060062
15587	Fluted Guide Pair for 18943	060063
64593	Lower Steel Guide for 18943	060064
64592	Upper Steel Guide for 18943	060065
26128	Aluminum Guide for 18943	060066
64594	Nylon Guide for 18943	060069
62151	Motor Base Rubber for 18943	060070
AJ570	Rubber Stopper for 18943	060071

Item No.	Description	Position
24156	Scraper Bracket for 18943	060074
62201	Switch for 18943	060076
17707	Scraper for 18943	060078
17708	Scraper for 18943	060080
62186	Steel Handle for 18943	060081
44013	Micro Switch for 18943	060089
64585	Complete Aluminum Housing for 18943	060098
24154	Pin for 18943	060103
62078	Tightening Knob for 18943	060107
16869	Knob for 18943	060108
64592	Upper Steel Guide for 18943	060116
62188	Flywheel Scraper Holder for 18943	060119
62203	Motor Pulley for 18943	060124
45066	Guide for 18943	060127
23718	Guide Assembly for 18943	060128
62193	Blade Protector for 18943	060131
AL385	Complete Box + Start & Stop Button for 18943	060134
62132	Hairpin Spring for 18943	060138
17711	Clip for 18943	060140
45067	Bearing 6200 for 18943	060148
16871	Bearing for 18943	060149
16872	Bearing 6205-2RS1 for 18943	060150
64580	Trapezoidal Flywheel for 18943	060157
62194	Complete Flat Wheel for 18943	060161
40168	Seal for 18943	060164
62091	Aluminum Support for 18943	060167

Item No.	Description	Position
AJ916	Complete Strap with Iron Handle for 18943	060175
62197	Complete Car Iron Wheel for 18943	060181
24155	Bolt for 18943	060184
26129	Long Screw for Aluminum Guide for 18943	060187
44012	Lower Shaft Nut for 18943	060190
64564	Lower Flywheel for 18943	060193
62206	Complete Upper Cylindrical Flywheel for 18943	060197
62206	Complete Upper Cylindrical Flywheel for 18943	060202
24137	Pulley for 18943	060209
62204	Motor Tension Screw for 18943	060222
17717	Cover for 18943	060229
62200	Aluminum Housing for 18943	060239
62099	Door Hinge for 18943	060245
62102	Front Plate Screw for 18943	060248
64570	Tension Screw for 18943	060249
17719	Cover for 18943	060251
31436	Housing (Box) only for Switch for 18943	060252
16873	Start Switch (Green Button) for 18943	060253
16874	Stop Switch for 18943	060254
62143	Screw for Roller Port Guide for 18943	060255
45068	Screw for 18943	060256
AJ915	Screw for 18943	060257
62195	Wheel Shaft for 18943	060259
26130	Short Screw for Aluminum Guide for 18943	060261
64814	Motor 220/60/3 for 18943	