
# Parts Breakdown

## Model CE-CN-ER24 208 3 48553

## Model CE-CN-ER24 208 1 49169

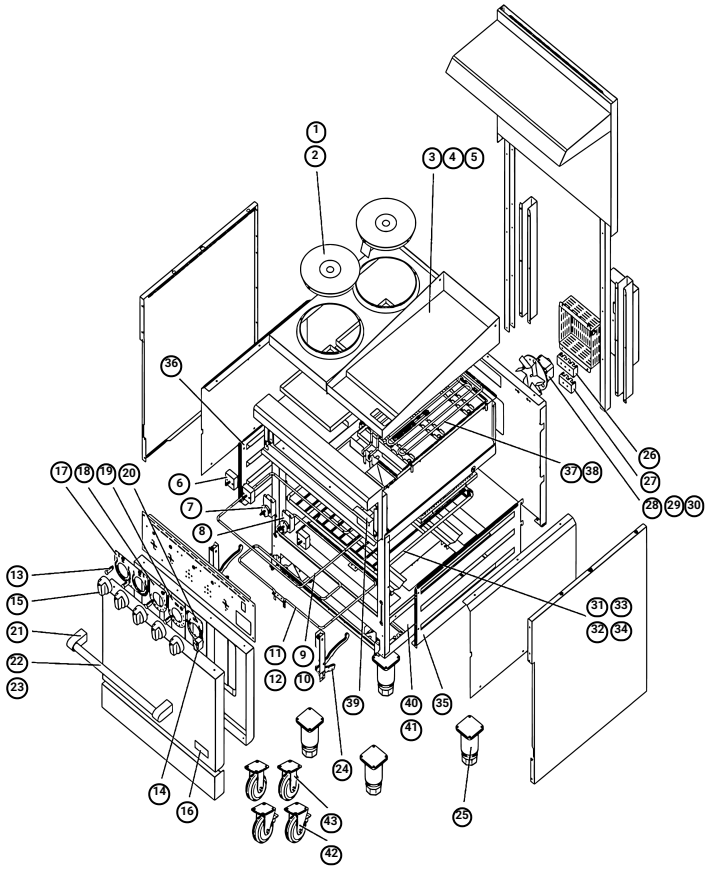


| Pos. | Part | Omcan Part No. |
|---|---|---|
| 1 | Sealed Heat Element 208V 2000W | AT485 |
| 2 | | *not a spare part* |
| 3 | | *not a spare part* |
| 4 | | *not a spare part* |
| 5 | | *not a spare part* |
| 6 | Infinite Switch | AT486 |
| 7 | | *not a spare part* |
| 8 | Oven Thermostat | AV549 |
| 9 | Oven Top Heat Element 208V 1250W | AV550 |
| 10 | | *not a spare part* |
| 11 | Oven Bottom Heat Element 208V 3750W | AV551 |
| 12 | | *not a spare part* |
| 13 | Heating Indicator | AT477 |
| 14 | | *not a spare part* |
| 15 | Knob | AT489 |

| Pos. | Part | Omcan Part No. |
|---|---|---|
| 16 | Nameplate | AW072 |
| 17 | Dial of 2 Infinite Switches | AW073 |
| 18 | | *not a spare part* |
| 19 | Dial of Oven Top | AW074 |
| 20 | Dial of Oven Bottom | AW075 |
| 21 | Oven Door Handle Base (Left & Right) | AW076 |
| 22 | Oven Door Handle Rod 24" | AW077 |
| 23 | 36" models only | — |
| 24 | Oven Door Hinge Assy (Left & Right) | AW078 |
| 25 | Adjustable Foot | 48346 |
| 26 | Terminal Block Top | AW079 |
| 27 | Terminal Block 4 Pole | AT483 |
| 28 | | *not a spare part* |
| 29 | | *not a spare part* |
| 30 | | *not a spare part* |

| Pos. | Part | Omcan Part No. |
|---|---|---|
| 31 | Oven Shelf | AW080 |
| 32 | 36" models only | — |
| 33 | | *not a spare part* |
| 34 | | *not a spare part* |
| 35 | Oven Shelf Guide Right | AW081 |
| 36 | Oven Shelf Guide Left | AW082 |
| 37 | | *not a spare part* |
| 38 | | *not a spare part* |
| 39 | | *not a spare part* |
| 40 | Oven Drop Pan 24" | AW083 |
| 41 | 36" models only | — |
| 42 | 4 Inch Caster | AI611 |
| 43 | Caster Without Brake Option | AW084 |

# Parts Breakdown

## Model CE-CN-ER24 208 3 48553

## Model CE-CN-ER24 208 1 49169

| Omcan Part No. | Description | Position |
|---|---|---|
| AT485 | Sealed Heat Element 208V 2000W for 48553, 49169 | 1 |
| AT486 | Infinite Switch for 48553, 49169 | 6 |
| AV549 | Oven Thermostat for 48553, 49169 | 8 |
| AV550 | Oven Top Heat Element 208V 1250W for 48553, 49169 | 9 |
| AV551 | Oven Bottom Heat Element 208V 3750W for 48553, 49169 | 11 |
| AT477 | Heating Indicator for 48553, 49169 | 13 |
| AT489 | Knob for 48553, 49169 | 15 |
| AW072 | Nameplate for 48553, 49169 | 16 |
| AW073 | Dial of 2 Infinite Switches for 48553, 49169 | 17 |
| AW074 | Dial of Oven Top for 48553, 49169 | 19 |
| AW075 | Dial of Oven Bottom for 48553, 49169 | 20 |
| AW076 | Oven Door Handle Base (Left & Right) for 48553, 49169 | 21 |
| AW077 | Oven Door Handle Rod 24" for 48553, 49169 | 22 |
| AW078 | Oven Door Hinge Assy (Left & Right) for 48553, 49169 | 24 |
| 48346 | Adjustable Foot for 48553, 49169 | 25 |
| AW079 | Terminal Block Top for 48553, 49169 | 26 |
| AT483 | Terminal Block 4 Pole for 48553, 49169 | 27 |
| AW080 | Oven Shelf for 48553, 49169 | 31 |
| AW081 | Oven Shelf Guide Right for 48553, 49169 | 35 |
| AW082 | Oven Shelf Guide Left for 48553, 49169 | 36 |
| AW083 | Oven Drop Pan 24" for 48553, 49169 | 40 |
| AI611 | 4 Inch Caster for 48553, 49169 | 42 |
| AW084 | Caster Without Brake Option for 48553, 49169 | 43 |