
Parts Breakdown

Model CE-CN-ER24 208 3 48553

Model CE-CN-ER24 208 1 49169

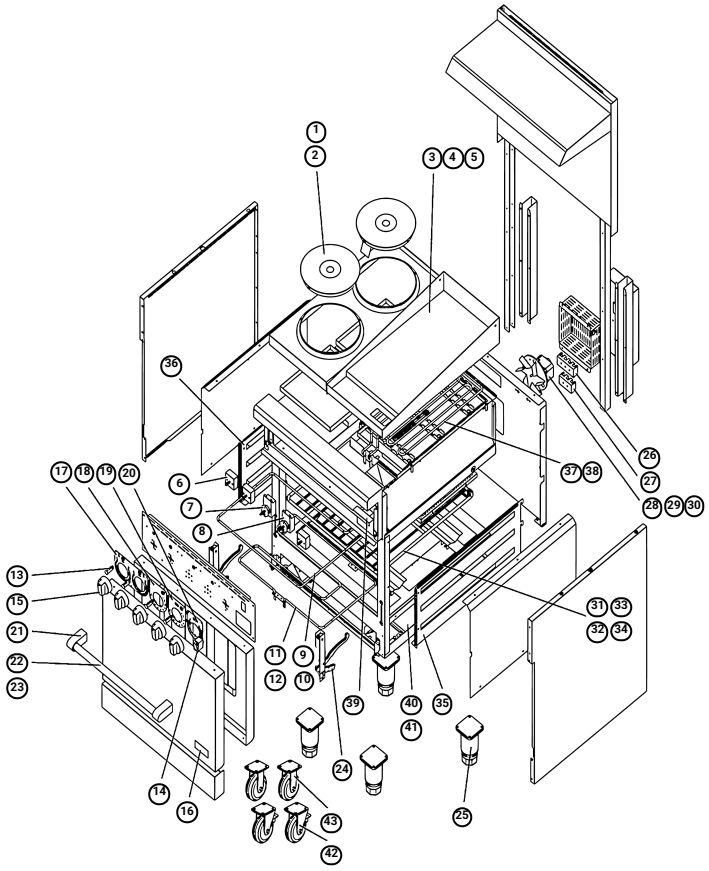

Pos.	Part	Omcan Part No.
1	Sealed Heat Element 208V 2000W	AT485
2		*not a spare part*
3		*not a spare part*
4		*not a spare part*
5		*not a spare part*
6	Infinite Switch	AT486
7		*not a spare part*
8	Oven Thermostat	AV549
9	Oven Top Heat Element 208V 1250W	AV550
10		*not a spare part*
11	Oven Bottom Heat Element 208V 3750W	AV551
12		*not a spare part*
13	Heating Indicator	AT477
14		*not a spare part*
15	Knob	AT489

Pos.	Part	Omcan Part No.
16	Nameplate	AW072
17	Dial of 2 Infinite Switches	AW073
18		*not a spare part*
19	Dial of Oven Top	AW074
20	Dial of Oven Bottom	AW075
21	Oven Door Handle Base (Left & Right)	AW076
22	Oven Door Handle Rod 24"	AW077
23	36" models only	—
24	Oven Door Hinge Assy (Left & Right)	AW078
25	Adjustable Foot	48346
26	Terminal Block Top	AW079
27	Terminal Block 4 Pole	AT483
28		*not a spare part*
29		*not a spare part*
30		*not a spare part*

Pos.	Part	Omcan Part No.
31	Oven Shelf	AW080
32	36" models only	—
33		*not a spare part*
34		*not a spare part*
35	Oven Shelf Guide Right	AW081
36	Oven Shelf Guide Left	AW082
37		*not a spare part*
38		*not a spare part*
39		*not a spare part*
40	Oven Drop Pan 24"	AW083
41	36" models only	—
42	4 Inch Caster	AI611
43	Caster Without Brake Option	AW084

Parts Breakdown

Model CE-CN-ER24 208 3 48553

Model CE-CN-ER24 208 1 49169

Omcan Part No.	Description	Position
AT485	Sealed Heat Element 208V 2000W for 48553, 49169	1
AT486	Infinite Switch for 48553, 49169	6
AV549	Oven Thermostat for 48553, 49169	8
AV550	Oven Top Heat Element 208V 1250W for 48553, 49169	9
AV551	Oven Bottom Heat Element 208V 3750W for 48553, 49169	11
AT477	Heating Indicator for 48553, 49169	13
AT489	Knob for 48553, 49169	15
AW072	Nameplate for 48553, 49169	16
AW073	Dial of 2 Infinite Switches for 48553, 49169	17
AW074	Dial of Oven Top for 48553, 49169	19
AW075	Dial of Oven Bottom for 48553, 49169	20
AW076	Oven Door Handle Base (Left & Right) for 48553, 49169	21
AW077	Oven Door Handle Rod 24" for 48553, 49169	22
AW078	Oven Door Hinge Assy (Left & Right) for 48553, 49169	24
48346	Adjustable Foot for 48553, 49169	25
AW079	Terminal Block Top for 48553, 49169	26
AT483	Terminal Block 4 Pole for 48553, 49169	27
AW080	Oven Shelf for 48553, 49169	31
AW081	Oven Shelf Guide Right for 48553, 49169	35
AW082	Oven Shelf Guide Left for 48553, 49169	36
AW083	Oven Drop Pan 24" for 48553, 49169	40
AI611	4 Inch Caster for 48553, 49169	42
AW084	Caster Without Brake Option for 48553, 49169	43