
Parts Breakdown

Model CE-CN-ER36 208 1 49170

Model CE-CN-ER36 208 3 49171

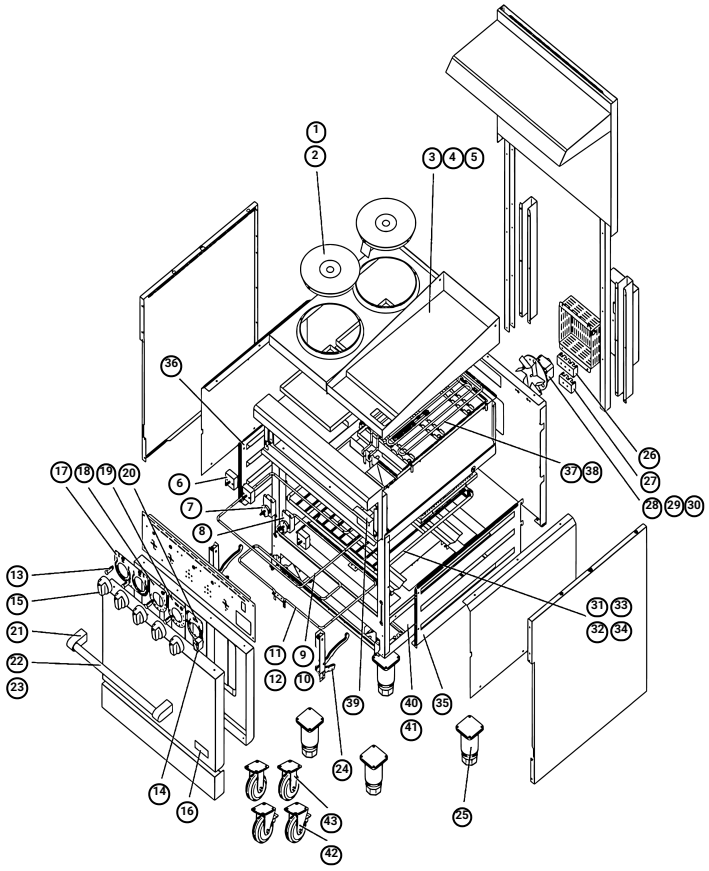

Pos.	Part	Omcan Part No.
1	Sealed Heat Element 208V 2000W	AT485
2		*not a spare part*
3		*not a spare part*
4		*not a spare part*
5		*not a spare part*
6	Infinite Switch	AT486
7		*not a spare part*
8	Oven Thermostat	AV549
9	Oven Top Heat Element 208V 1250W	AV550
10		*not a spare part*
11	Oven Bottom Heat Element 208V 3750W	AV551
12		*not a spare part*
13	Heating Indicator	AT477
14		*not a spare part*
15	Knob	AT489

Pos.	Part	Omcan Part No.
16	Nameplate	AW072
17	Dial of 2 Infinite Switches	AW073
18		*not a spare part*
19	Dial of Oven Top	AW074
20	Dial of Oven Bottom	AW075
21	Oven Door Handle Base (Left & Right)	AW076
22	24" models only	—
23	Oven Door Handle Rod 36"	AW085
24	Oven Door Hinge Assy (Left & Right)	AW078
25	Adjustable Foot	48346
26	Terminal Block Top	AW079
27	Terminal Block 4 Pole	AT483
28		*not a spare part*
29		*not a spare part*
30		*not a spare part*

Pos.	Part	Omcan Part No.
31	24" models only	—
32	Oven Shelf	AW086
33		*not a spare part*
34		*not a spare part*
35	Oven Shelf Guide Right	AW081
36	Oven Shelf Guide Left	AW082
37		*not a spare part*
38		*not a spare part*
39		*not a spare part*
40	24" models only	—
41	Oven Drop Pan 36"	AW087
42	4 Inch Caster	AI611
43	Caster Without Brake Option	AW084

Parts Breakdown

Model CE-CN-ER36 208 1 49170

Model CE-CN-ER36 208 3 49171

Omcan Part No.	Description	Position
AT485	Sealed Heat Element 208V 2000W for 49170, 49171	1
AT486	Infinite Switch for 49170, 49171	6
AV549	Oven Thermostat for 49170, 49171	8
AV550	Oven Top Heat Element 208V 1250W for 49170, 49171	9
AV551	Oven Bottom Heat Element 208V 3750W for 49170, 49171	11
AT477	Heating Indicator for 49170, 49171	13
AT489	Knob for 49170, 49171	15
AW072	Nameplate for 49170, 49171	16
AW073	Dial of 2 Infinite Switches for 49170, 49171	17
AW074	Dial of Oven Top for 49170, 49171	19
AW075	Dial of Oven Bottom for 49170, 49171	20
AW076	Oven Door Handle Base (Left & Right) for 49170, 49171	21
AW085	Oven Door Handle Rod 36" for 49170, 49171	23
AW078	Oven Door Hinge Assy (Left & Right) for 49170, 49171	24
48346	Adjustable Foot for 49170, 49171	25
AW079	Terminal Block Top for 49170, 49171	26
AT483	Terminal Block 4 Pole for 49170, 49171	27
AW086	Oven Shelf for 49170, 49171	32
AW081	Oven Shelf Guide Right for 49170, 49171	35
AW082	Oven Shelf Guide Left for 49170, 49171	36
AW087	Oven Drop Pan 36" for 49170, 49171	41
AI611	4 Inch Caster for 49170, 49171	42
AW084	Caster Without Brake Option for 49170, 49171	43