
Parts Breakdown

Model CD-CN-UH50 49208

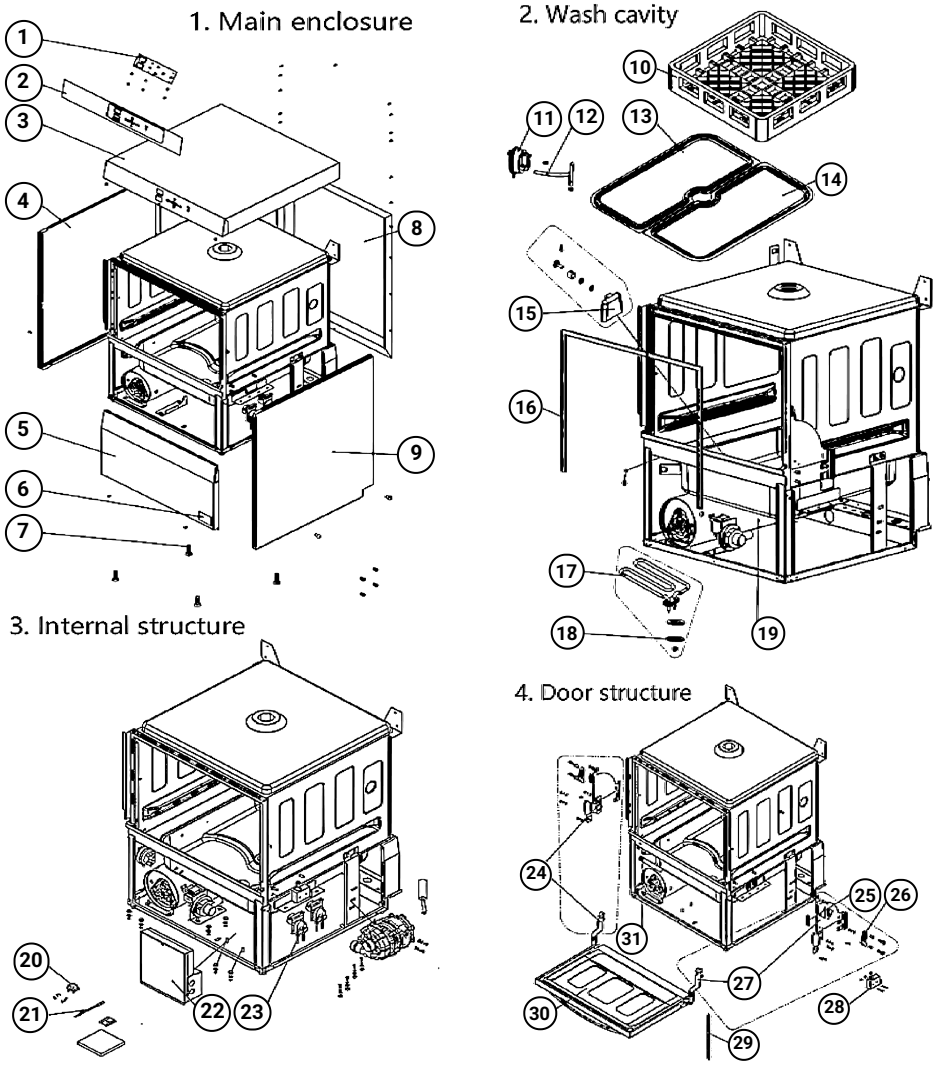


Pos.	Part	Omcan Part No.
1	Display Board	AX289
2	Mylar	AX290
3	Top Cover	AX291
4	Left Plate	AX292
5	Bottom Front Cover	AX293
6	Dataplate	AX294
7	Foot Bolt	AX295
8	Back Plate	AX296
9	Right Plate	AX297
10	Peg Dishrack	AX298
11	Pressure Switch	AX299


Pos.	Part	Omcan Part No.
12	Air Guide Pipe	AX300
13	Left Mesh Plate	AX301
14	Right Mesh Plate	AX302
15	Pressure Gauge Chamber Assembly	AX303
16	Door Seal	AX304
17	Wash Heater Assembly	AX305
18	Wash Heater Gasket	AX306
19	Rinse Tank Assembly	AX307
20	90°C Thermostat	AX308
21	Probe	AX309
22	Power Supply Box	AX310


Pos.	Part	Omcan Part No.
23	Detergent Pump (Undercounter)	AX311
24	Left Door Hinge Assembly	AX312
25	White Stopper	AX313
26	Spring Steel Strip (Left & Right)	AX314
27	Right Door Hinge Assembly	AX315
28	Door Switch	AX316
29	Door Extension Spring	AX317
30	Door Assembly	AX318
31	Black Foam Tube to Tank	AX319


Parts Breakdown


Model CD-CN-UH50 49208

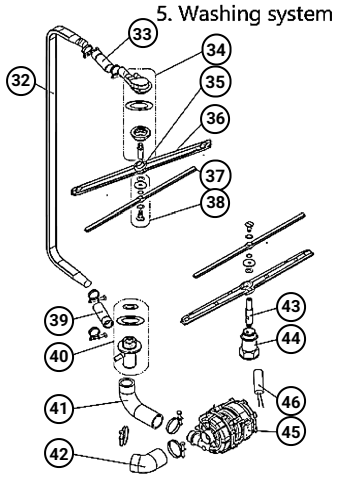

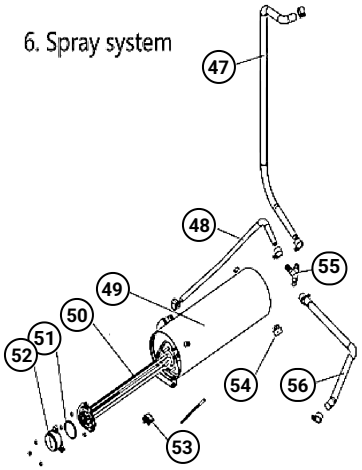

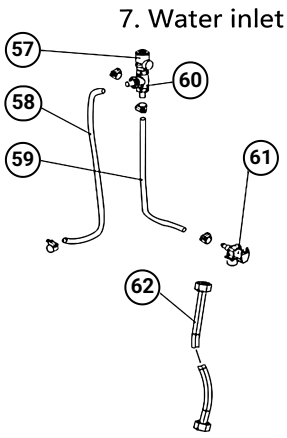

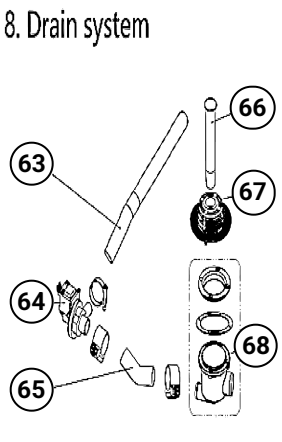

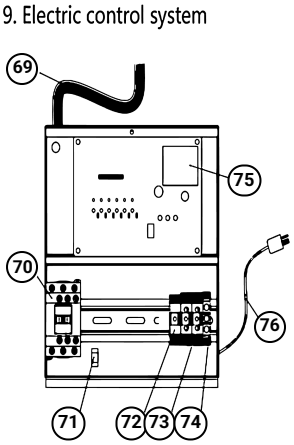

Pos.	Part	Omcan Part No.
32	Up Inlet Tube	AX320
33	Short Pipe 1	AX321
34	Wash Top Base Assembly	AX322
35	Wash Arm Sleeve	AX323
36	Wash Arm	AX324
37	Spray Arm	AX325
38	Wash Bottom Assembly	AX326
39	Short Pipe 2	AX327
40	Bottom Tee Fitting	AX328
41	Bottom Elbow	AX329
42	Elbow to Main Wash Pump	AX330
43	Bottom Wash Rod	AX331
44	Bottom Wash Base	AX332
45	Main Wash Pump	AX333
46	Capacitor	AX334

Pos.	Part	Omcan Part No.
47	Spray Inlet Pipe 1	AX335
48	Spray Inlet Pipe 2	AX336
49	Booster Heater Tank with Black Hose	AX337
50	Booster Heater Assembly	AX338
51	Booster Gasket	AX339
52	Booster Heater Cap	AX340
53	105C/110C Thermostat	AX341
54	Booster Stopper	AX342
55	Triplet	AX343
56	Spray Inlet Pipe 3	AX344
57	Vacuum Breaking Valve	AX345
58	Water Connect Pipe 1	AX346
59	Water Connect Pipe 2	AX347
60	3/4 Tee Fitting	AX348
61	Water Inlet Valve	AX349

Pos.	Part	Omcan Part No.
62	Inlet Water Hose	AX350
63	Drain Pump Outlet Pipe	AX351
64	Drain Pump	AX352
65	Drain Pump Elbow	AX353
66	Overflow Pipe	AX354
67	Filter	AX355
68	Drain Assembly	AX356
69	Ribbon Cable	AX357
70	Contactor	AX358
71	Fuse	AX359
72	Terminal Clamp	AX360
73	Terminal Block	AX361
74	Ground Terminal	AX362
75	Electronic Control Board-UH	AX363
76	Power Cord Set	AX364

Parts Breakdown


Model CD-CN-UH50 49208


Note: Position refers to the callout number on the exploded diagram. Positions marked with a letter (e.g. 15A) are variants of the numbered position and are not called out separately on the drawing.

Omcan Part No.	Description	Position	Omcan Part No.	Description	Position
AX289	Display Board for Dishwasher 49208	1	**AX327**	Short Pipe 2 for Dishwasher 49208	39
AX290	Mylar for Dishwasher 49208	2	**AX328**	Bottom Tee Fitting for Dishwasher 49208	40
AX291	Top Cover for Dishwasher 49208	3	**AX329**	Bottom Elbow for Dishwasher 49208	41
AX292	Left Plate for Dishwasher 49208	4	**AX330**	Elbow to Main Wash Pump for Dishwasher 49208	42
AX293	Bottom Front Cover for Dishwasher 49208	5	**AX331**	Bottom Wash Rod for Dishwasher 49208	43
AX294	Dataplate for Dishwasher 49208	6	**AX332**	Bottom Wash Base for Dishwasher 49208	44
AX295	Foot Bolt for Dishwasher 49208	7	**AX333**	Main Wash Pump for Dishwasher 49208	45
AX296	Back Plate for Dishwasher 49208	8	**AX334**	Capacitor for Dishwasher 49208	46
AX297	Right Plate for Dishwasher 49208	9	**AX335**	Spray Inlet Pipe 1 for Dishwasher 49208	47
AX298	Peg Dishrack for Dishwasher 49208	10	**AX336**	Spray Inlet Pipe 2 for Dishwasher 49208	48
AX299	Pressure Switch for Dishwasher 49208	11	**AX337**	Booster Heater Tank with Black Hose for Dishwasher 49208	49
AX300	Air Guide Pipe for Dishwasher 49208	12	**AX338**	Booster Heater Assembly for Dishwasher 49208	50
AX301	Left Mesh Plate for Dishwasher 49208	13	**AX339**	Booster Gasket for Dishwasher 49208	51
AX302	Right Mesh Plate for Dishwasher 49208	14	**AX340**	Booster Heater Cap for Dishwasher 49208	52
AX303	Pressure Gauge Chamber Assembly for Dishwasher 49208	15/15A	**AX341**	105C/110C Thermostat for Dishwasher 49208, 49209	53
AX304	Door Seal for Dishwasher 49208	16	**AX342**	Booster Stopper for Dishwasher 49208	54
AX305	Wash Heater Assembly for Dishwasher 49208	17	**AX343**	Triplet for Dishwasher 49208	55
AX306	Wash Heater Gasket for Dishwasher 49208	18	**AX344**	Spray Inlet Pipe 3 for Dishwasher 49208	56
AX307	Rinse Tank Assembly for Dishwasher 49208	19	**AX345**	Vacuum Breaking Valve for Dishwasher 49208	57
AX308	90°C Thermostat for Dishwasher 49208	20	**AX346**	Water Connect Pipe 1 for Dishwasher 49208	58
AX309	Probe for Dishwasher 49208	21	**AX347**	Water Connect Pipe 2 for Dishwasher 49208	59
AX310	Power Supply Box for Dishwasher 49208	22	**AX348**	3/4 Tee Fitting for Dishwasher 49208	60
AX311	Detergent Pump (Undercounter) for Dishwasher 49208	23	**AX349**	Water Inlet Valve for Dishwasher 49208, 49209	61
AX312	Left Door Hinge Assembly for Dishwasher 49208	24	**AX350**	Inlet Water Hose for Dishwasher 49208, 49209	62/62A
AX313	White Stopper for Dishwasher 49208	25	**AX351**	Drain Pump Outlet Pipe for Dishwasher 49208	63
AX314	Spring Steel Strip (Left & Right) for Dishwasher 49208	26	**AX352**	Drain Pump for Dishwasher 49208	64
AX315	Right Door Hinge Assembly for Dishwasher 49208	27	**AX353**	Drain Pump Elbow for Dishwasher 49208	65
AX316	Door Switch for Dishwasher 49208	28	**AX354**	Overflow Pipe for Dishwasher 49208	66
AX317	Door Extension Spring for Dishwasher 49208	29	**AX355**	Filter for Dishwasher 49208, 49209	67
AX318	Door Assembly for Dishwasher 49208	30	**AX356**	Drain Assembly for Dishwasher 49208, 49209	68
AX319	Black Foam Tube to Tank for Dishwasher 49208	31	**AX357**	Ribbon Cable for Dishwasher 49208	69
AX320	Up Inlet Tube for Dishwasher 49208	32	**AX358**	Contactor for Dishwasher 49208, 49209	70
AX321	Short Pipe 1 for Dishwasher 49208	33	**AX359**	Fuse for Dishwasher 49208, 49209	71
AX322	Wash Top Base Assembly for Dishwasher 49208	34	**AX360**	Terminal Clamp for Dishwasher 49208, 49209	72
AX323	Wash Arm Sleeve for Dishwasher 49208	35	**AX361**	Terminal Block for Dishwasher 49208, 49209	73
AX324	Wash Arm for Dishwasher 49208	36	**AX362**	Ground Terminal for Dishwasher 49208, 49209	74
AX325	Spray Arm for Dishwasher 49208	37	**AX363**	Electronic Control Board-UH for Dishwasher 49208	75
AX326	Wash Bottom Assembly for Dishwasher 49208	38	**AX364**	Power Cord Set for Dishwasher 49208	76

Parts Breakdown

Model CD-CN-DH60 49209

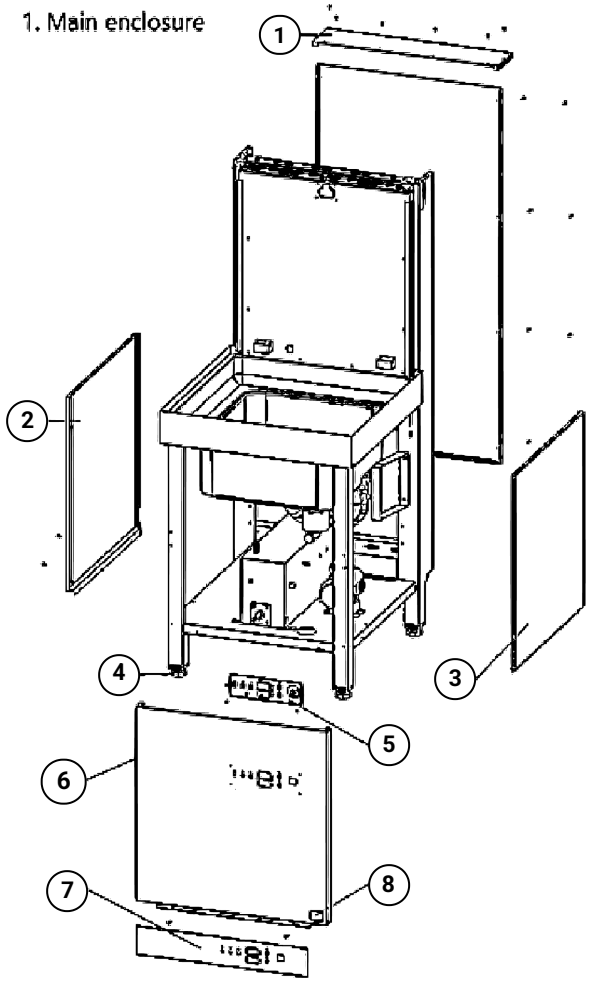

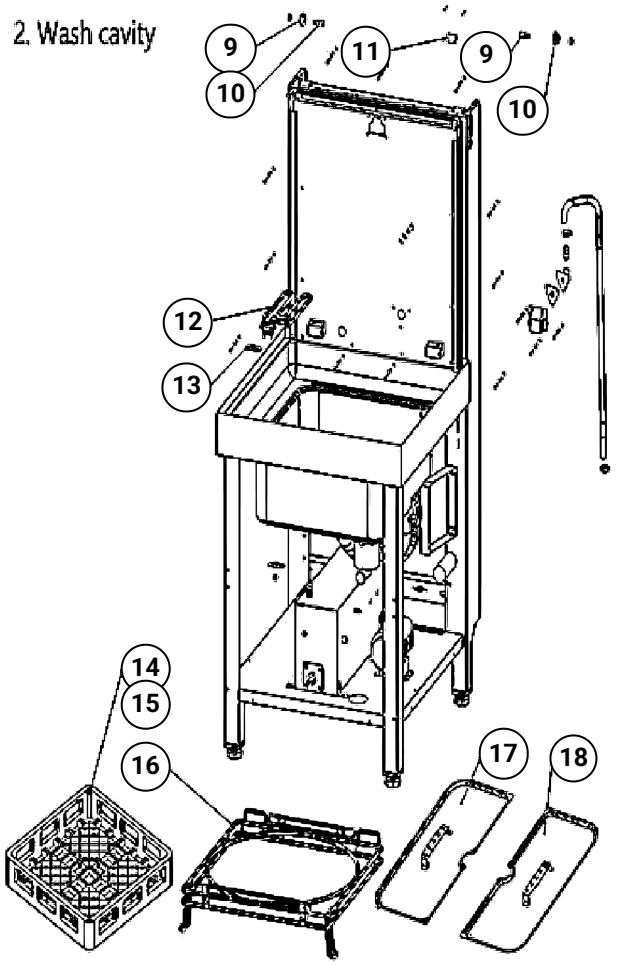


Pos.	Part	Omcan Part No.
1	Back Top Cover	AX365
2	Left Plate	AX366
3	Right Plate	AX367
4	Foot	AX368
5	Display Board	AX369
6	Front Plate	AX370

Pos.	Part	Omcan Part No.
7	Mylar	AX371
8	Dataplate	AX372
9	Guide Roller	AX373
10	Guide Roller Axis	AX374
11	Magnet Switch	AX375
12	Wash Heater	AX376

Pos.	Part	Omcan Part No.
13	Heater Gasket	AX377
14	Peg Dishrack	AX378
15	Flatware Dishrack	AX379
16	Dishrack Bracket	AX380
17	Left Mesh Plate	AX381
18	Right Mesh Plate	AX382

Parts Breakdown

Model CD-CN-DH60 49209

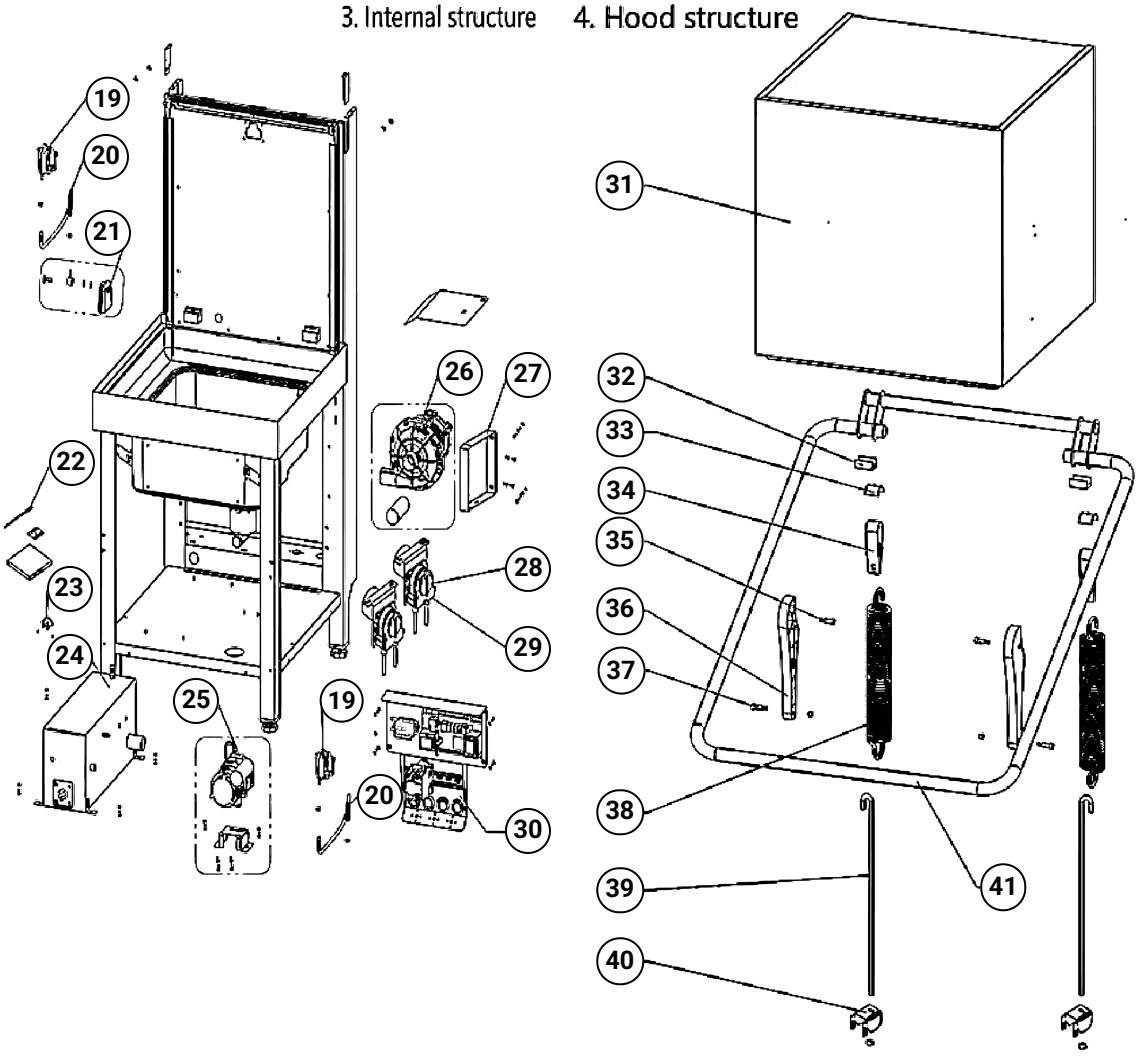


Pos.	Part	Omcan Part No.
19	Pressure Switch	AX383
20	Air Guide Pipe	AX384
21	Pressure Gauge Chamber Assembly	AX385
22	Probe	AX387
23	90C Thermostat	AX388
24	Rinse Tank Assembly	AX389
25	Rinse Pump Assembly	AX390
26	Main Wash Pump	AX391

Pos.	Part	Omcan Part No.
27	Main Wash Pump Bracket	AX392
28	Detergent Pump (Door Type)	AX393
29	Detergent Tube (Door Type)	AX394
30	Electronic Control Board-DH	AX395
31	Hood Assembly	AX396
32	Handle Fixture Block	AX397
33	Anti Wear Block	AX398
34	Pull Spring Hinging Plate	AX399

Pos.	Part	Omcan Part No.
35	Handle Screw	AX400
36	Connect Block (Left & Right)	AX401
37	Fixed Axis	AX402
38	Pull Spring	AX403
39	Draw Hook	AX404
40	Pull Spring Hinging Bracket	AX405
41	Handle Assembly	AX406

Parts Breakdown

Model CD-CN-DH60 49209

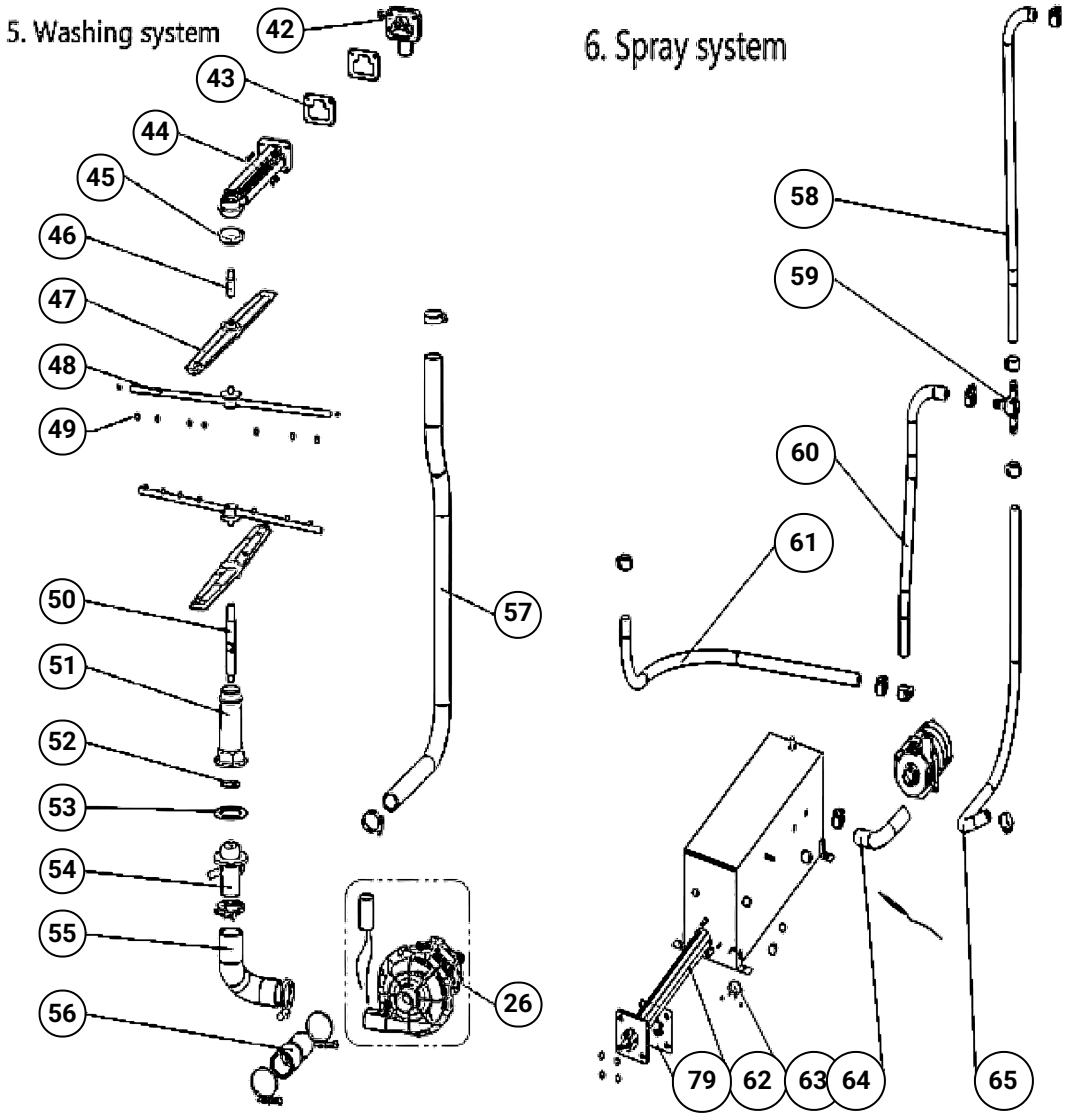


Pos.	Part	Omcan Part No.
26	Main Wash Pump	AX391
42	Top Spray Arm Back Base	AX407
43	Top Gasket	AX408
44	Top Spray Arm Base	AX409
45	Top Base Nut	AX410
46	Top Spray Arm Axis	AX411
47	Wash Arm	AX412
48	Spray Arm	AX413
49	Spray Head	AX414

Pos.	Part	Omcan Part No.
50	Spray Arm Axis	AX415
51	Bottom Spray Arm Base	AX416
52	Throttle Plate	AX417
53	Seal Gasket	AX418
54	Bottom Triplet	AX419
55	Drain Pipe	AX420
56	Inlet Pipe	AX421
57	Rubber Pipe	AX422
58	Close Top Spray Inlet Pipe	AX423

Pos.	Part	Omcan Part No.
59	Spray Triplet	AX424
60	Close Pump Inlet Pipe	AX425
61	Inlet Water Pipe	AX426
62	Spray Heater	AX427
63	105C/110C Thermostat	AX341
64	Rinse Pump Inlet Hose	AX428
65	Close Bottom Spray Arm Inlet Pipe	AX429
79	Seal Gasket	AX418

Parts Breakdown

Model CD-CN-DH60 49209

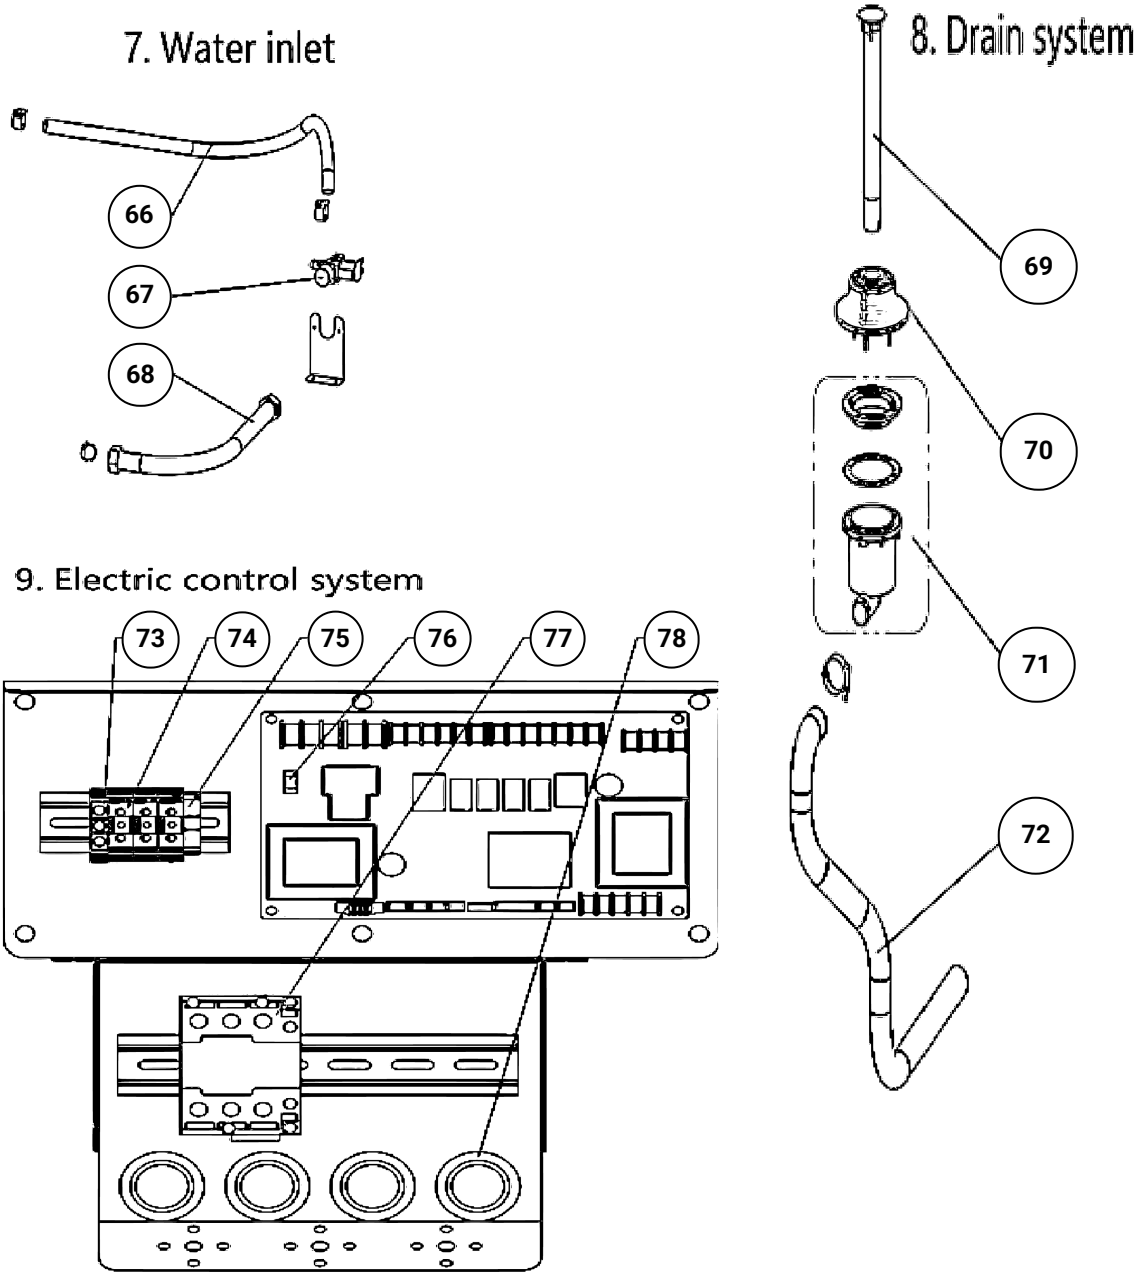

Pos.	Part	Omcan Part No.
66	Inlet Black Hose	AX430
67	Water Inlet Valve	AX349
68	Inlet Water Hose	AX350
69	Overflow Pipe	AX432
70	Filter	AX355

Pos.	Part	Omcan Part No.
71	Drain Assembly	AX356
72	Drain Corrugated Pipe	AX433
73	Ground Terminal	AX362
74	Terminal Block	AX361
75	Terminal Clamp	AX360

Pos.	Part	Omcan Part No.
76	Fuse	AX359
77	Contactor	AX358
78	Strain Relief	AX434

Parts Breakdown

Model CD-CN-DH60 49209

Note: Position refers to the callout number on the exploded diagram. Positions marked with a letter (e.g. 15A) are variants of the numbered position and are not called out separately on the drawing.

Omcan Part No.	Description	Position	Omcan Part No.	Description	Position
AX365	Back Top Cover for Dishwasher 49209	1	**AX406**	Handle Assembly for Dishwasher 49209	41
AX366	Left Plate for Dishwasher 49209	2	**AX407**	Top Spray Arm Back Base for Dishwasher 49209	42
AX367	Right Plate for Dishwasher 49209	3	**AX408**	Top Gasket for Dishwasher 49209	43
AX368	Foot for Dishwasher 49209	4	**AX409**	Top Spray Arm Base for Dishwasher 49209	44
AX369	Display Board for Dishwasher 49209	5	**AX410**	Top Base Nut for Dishwasher 49209	45
AX370	Front Plate for Dishwasher 49209	6	**AX411**	Top Spray Arm Axis for Dishwasher 49209	46
AX371	Mylar for Dishwasher 49209	7	**AX412**	Wash Arm for Dishwasher 49209	47
AX372	Dataplate for Dishwasher 49209	8	**AX413**	Spray Arm for Dishwasher 49209	48
AX373	Guide Roller for Dishwasher 49209	9	**AX414**	Spray Head for Dishwasher 49209	49
AX374	Guide Roller Axis for Dishwasher 49209	10	**AX415**	Spray Arm Axis for Dishwasher 49209	50
AX375	Magnet Switch for Dishwasher 49209	11	**AX416**	Bottom Spray Arm Base for Dishwasher 49209	51
AX376	Wash Heater for Dishwasher 49209	12	**AX417**	Throttle Plate for Dishwasher 49209	52
AX377	Heater Gasket for Dishwasher 49209	13	**AX418**	Seal Gasket for Dishwasher 49209	53
AX378	Peg Dishrack for Dishwasher 49209	14	**AX419**	Bottom Triplet for Dishwasher 49209	54
AX379	Flatware Dishrack for Dishwasher 49209	15	**AX420**	Drain Pipe for Dishwasher 49209	55
AX380	Dishrack Bracket for Dishwasher 49209	16	**AX421**	Inlet Pipe for Dishwasher 49209	56
AX381	Left Mesh Plate for Dishwasher 49209	17	**AX422**	Rubber Pipe for Dishwasher 49209	57
AX382	Right Mesh Plate for Dishwasher 49209	18	**AX423**	Close Top Spray Inlet Pipe for Dishwasher 49209	58
AX383	Pressure Switch for Dishwasher 49209	19	**AX424**	Spray Triplet for Dishwasher 49209	59
AX384	Air Guide Pipe for Dishwasher 49209	20	**AX425**	Close Pump Inlet Pipe for Dishwasher 49209	60
AX385	Pressure Gauge Chamber Assembly for Dishwasher 49209	21	**AX426**	Inlet Water Pipe for Dishwasher 49209	61
AX386	SS Pressure Gauge Chamber Assembly for Dishwasher 49209	21A	**AX427**	Spray Heater for Dishwasher 49209	62
AX387	Probe for Dishwasher 49209	22	**AX341**	105C/110C Thermostat for Dishwasher 49208, 49209	63
AX388	90C Thermostat for Dishwasher 49209	23	**AX428**	Rinse Pump Inlet Hose for Dishwasher 49209	64
AX389	Rinse Tank Assembly for Dishwasher 49209	24	**AX429**	Close Bottom Spray Arm Inlet Pipe for Dishwasher 49209	65
AX390	Rinse Pump Assembly for Dishwasher 49209	25	**AX430**	Inlet Black Hose for Dishwasher 49209	66
AX391	Main Wash Pump for Dishwasher 49209	26	**AX349**	Water Inlet Valve for Dishwasher 49208, 49209	67
AX392	Main Wash Pump Bracket for Dishwasher 49209	27	**AX350**	Inlet Water Hose for Dishwasher 49208, 49209	68
AX393	Detergent Pump (Door Type) for Dishwasher 49209	28	**AX431**	SS Inlet Water Hose for Dishwasher 49209	68A
AX394	Detergent Tube (Door Type) for Dishwasher 49209	29	**AX432**	Overflow Pipe for Dishwasher 49209	69
AX395	Electronic Control Board-DH for Dishwasher 49209	30	**AX355**	Filter for Dishwasher 49208, 49209	70
AX396	Hood Assembly for Dishwasher 49209	31	**AX356**	Drain Assembly for Dishwasher 49208, 49209	71
AX397	Handle Fixture Block for Dishwasher 49209	32	**AX433**	Drain Corrugated Pipe for Dishwasher 49209	72
AX398	Anti Wear Block for Dishwasher 49209	33	**AX362**	Ground Terminal for Dishwasher 49208, 49209	73
AX399	Pull Spring Hinging Plate for Dishwasher 49209	34	**AX361**	Terminal Block for Dishwasher 49208, 49209	74
AX400	Handle Screw for Dishwasher 49209	35	**AX360**	Terminal Clamp for Dishwasher 49208, 49209	75
AX401	Connect Block (Left & Right) for Dishwasher 49209	36	**AX359**	Fuse for Dishwasher 49208, 49209	76
AX402	Fixed Axis for Dishwasher 49209	37	**AX358**	Contactor for Dishwasher 49208, 49209	77
AX403	Pull Spring for Dishwasher 49209	38	**AX434**	Strain Relief for Dishwasher 49209	78
AX404	Draw Hook for Dishwasher 49209	39	**AX418**	Seal Gasket for Dishwasher 49209	79
AX405	Pull Spring Hinging Bracket for Dishwasher 49209	40			