Dough Sheeter

Instruction Manual



ITEM	MODEL	ELECTRICAL
44135	BE-CN-2083-FSS	220V / 60Hz / 1Ph

Revised - 11/13/2026 · 44135-EN Rev. B

STOP
DO NOT RETURN THIS PRODUCT TO THE STORE
For questions or assistance with this product call OMCAN Toll Free: 1 800 465 0234 Customer Service or visit the Support section of www.omcan.com

44135
Scan for product page

QPS APPROVED
cQPSus

NEMA 6-15P

Made in China

Table of Contents

Model BE-CN-2083-FSS

Section	Page
General Information	3 - 4
Safety and Warranty	5 - 6
Technical Specifications	7
Technical Drawings	8
Installation	9
Operation	10
Maintenance	11 - 13
Troubleshooting	14
Parts Breakdown	15 - 21
Electrical Schematics	22
Notes	23
Warranty Registration	24

General Information

Record your product information here. Omcan tracks the service history of your equipment by its serial number — have it ready when you call.

Model Number	BE-CN-2083-FSS
Serial Number	
Item Number	44135
Date of Purchase	
Dealer	
Installed By	

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.

Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

Omcan Fabrication et distribution Compagnie Limitée et Food Machinery d'Amérique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, saine d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité appropriés. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de vous assurer que tous les éléments commandés sont dans la boîte et qu'il n'y a aucun dommage dissimulé à la machine. Si le colis a subi de mauvaises manipulations, des chocs ou des dommages (visibles ou cachés), notez-le sur le bon de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiés en port dû ou par un tiers transporteur.

General Information

Avant d'utiliser tout équipement, lisez toujours et familiarisez-vous avec toutes les opérations et les consignes de sécurité.

Omcan voudrait vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Conservez également la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricación Y Distribución Inc. Y Maquinaria De Alimentos De América, Inc. dba Omcan y Omcan Inc. no son responsables de ningún daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podrá ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, que haya sido entrenado en el correcto funcionamiento de esta máquina, y esté usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras está en funcionamiento.

REVISE EL PAQUETE A SU LLEGADA

Tras la recepción de un envío de Omcan, inspeccione si hay daños externos. Si no hay daños evidentes en el empaque exterior, abra el cartón para asegurarse de que todos los artículos solicitados estén dentro de la caja y de que no haya daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visibles u ocultos) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con el transportista. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningún recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre lea y familiarícese con todas las instrucciones de funcionamiento y seguridad.

A Omcan le gustaría darle las gracias por la compra de esta máquina. Es de suma importancia guardar estas instrucciones para futuras consultas. Además, guarde la caja original y el embalaje para el envío del equipo si se requiere servicio técnico o la devolución de la máquina.

Safety and Warranty

This manual uses the following signal words:

Warning: a hazard that could result in death or serious injury.
Caution: a hazard that could result in minor or moderate injury.
Note: information important to the correct use or care of the unit.

INTENDED USE

This reversible dough sheeter rolls dough to an even, adjustable thickness for bread, pastry, pizza, cakes and similar products in commercial foodservice operations. Use the unit only as described in this manual.

BEFORE OPERATING

- Check that every safety device works before each use: both safety guards, the safety guard microswitches and the Emergency Stop button.
- If you find a defect or malfunction, stop using the unit and have it repaired before further use.
- Read and follow the warning signs on the unit.

GENERAL SAFETY

- **Warning:** keep hands, hair, clothing and tools away from the rollers, conveyors and all moving parts. **NEVER** put your hands into or near the safety guards while the unit is running.
- **Warning:** always use the unit with both safety guards lowered.
- **NEVER** let foreign objects enter the unit while it is running.
- **NEVER** climb onto the unit.
- Clean up water, oil or other liquids on or around the unit immediately to prevent slips and injury.
- If a problem occurs during operation, press the Emergency Stop button.

ELECTRICAL SAFETY

- The power supply must match the nameplate: 220V / 60Hz / 1Ph, from a grounded outlet for the NEMA 6-15P plug.
- **Warning:** the power cord must be grounded. **NEVER** remove the ground prong or use an adapter.
- **Warning:** switch the unit off and unplug it before cleaning, servicing or moving it.
- **Warning: NEVER** clean the unit with a water jet or pressure washer.
- Electrical and mechanical repairs must be done by an authorized, qualified technician.

PACKAGING DISPOSAL

The packaging (cardboard, polyethylene and other materials) can be disposed of as normal solid waste. Recycle the materials separately where local rules allow. **DO NOT** discard packaging materials in the environment.

Safety and Warranty

RESIDENTIAL USERS: vendor assumes no liability for parts or labor coverage for component failure or other damages resulting from installation in non-commercial or residential applications. The right is reserved to deny shipment for residential usage; if this occurs, you will be notified as soon as possible.

1 YEAR PARTS AND LABOUR WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule an Omcan authorized service technician to repair the equipment locally.

3-YEAR EXTENDED WARRANTY

A 3-year extended warranty is available for this product. It must be purchased at the time of sale or within 30 days of purchase. Contact your Omcan dealer for pricing.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see https://omcan.com/disclaimer for complete info.

WARNING:

The packaging components are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!

Technical Specifications


Item Number	44135
Model	BE-CN-2083-FSS
Electrical	220V / 60Hz / 1Ph
Power	0.75 HP (0.55 kW)
Roller Size (Dia. x W)	3.5" x 20.5" (88 x 520 mm)
Roller Gap Adjustment	0.04" – 1.38" (1 – 35 mm)
Conveyor Belt (L x W)	85" x 19.7" (2160 x 500 mm)
Conveyor Width	22.4" (570 mm)
Conveyor Belt Speed	59 – 105 ft/min (18 – 32 m/min)
Roller Speed	124 rpm
Maximum Dough Capacity	11 lb (5 kg)
Working Position Dimensions (D x W x H)	31.7" x 107.5" x 41.7" (805 x 2730 x 1060 mm)
Resting Position Dimensions (W x H)	26" x 63" (660 x 1600 mm)
Net Weight	419 lb (190 kg)

Note: the manufacturer reserves the right to make changes to the unit without notice.

Important: any changes and/or additions of accessories must be explicitly approved and implemented by the manufacturer.

Technical Drawings

Model BE-CN-2083-FSS 44135

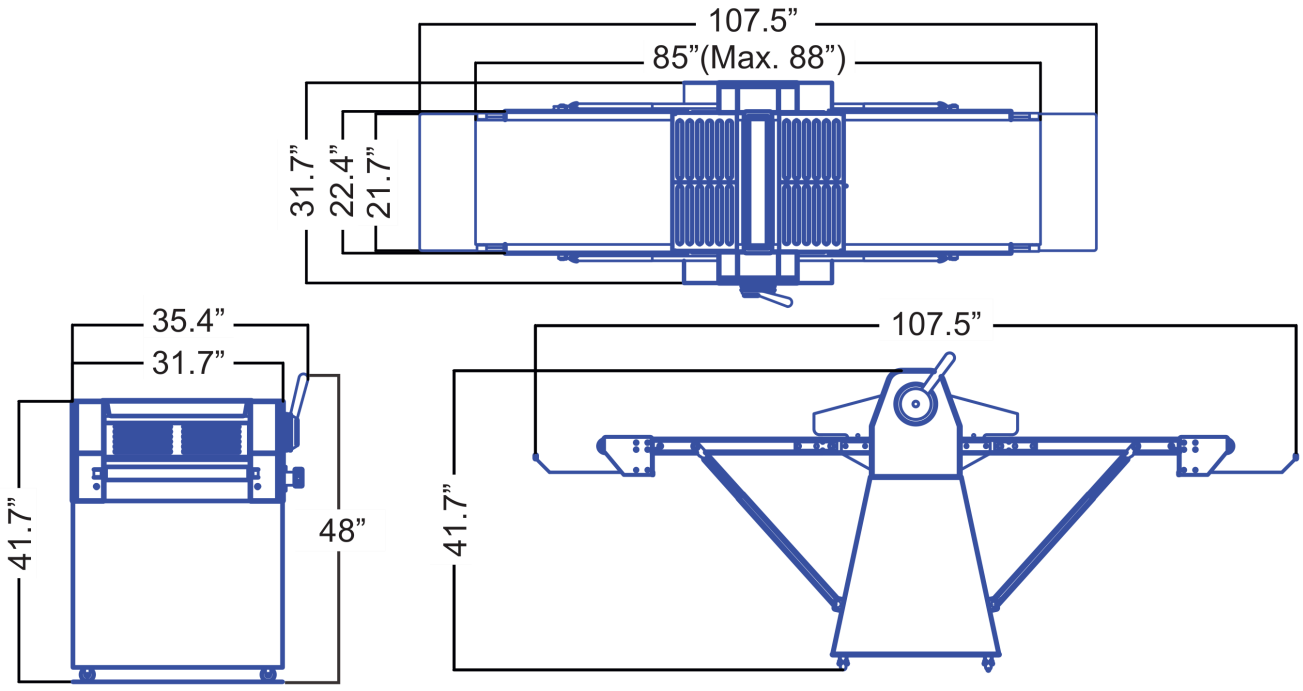

Top, front and side views (dimensions in inches)

Installation

BEFORE YOU BEGIN

Confirm each point below before putting the unit into service:

- ☐ The power supply matches the nameplate (220V / 60Hz / 1Ph), with a grounded outlet for the NEMA 6-15P plug. No extension cord is used.
- ☐ The location is dry, with a stable temperature, and there is room to lower both conveyor tables fully.
- ☐ The unit stands on a flat, level floor with the caster brakes locked.
- ☐ Both safety guards, the safety guard microswitches and the Emergency Stop button are in place and undamaged.

INSTALLATION

1. Place the unit on a flat, dry, level floor in a room with a stable temperature. Press down the brake pedals on the casters to lock the unit in place.
2. Connect the power supply as shown on the plate on the electrical box. The circuit breaker for the supply should be mounted on the wall, 5.6 ft (1.7 m) above the floor.
3. Pull the conveyor tables straight, lower both tables, then lower both safety guards.
4. Check the direction of travel. Press the left foot pedal: the conveyors move left. Press the right foot pedal: the conveyors move right.
5. **Warning:** if the conveyors move opposite to the direction selected, stop, unplug the unit and have a qualified electrician correct the wiring. **DO NOT** use the unit until the direction is correct.
6. The power cord must be grounded.

Operation

Warning: make sure the safety guards are lowered whenever the unit is running. **NEVER** put your hands into or near the safety guards.

OPERATING THE UNIT

1. Check that the supply matches the nameplate (220V / 60Hz / 1Ph) and that the unit is plugged in.
2. Set the thickness handle to the farthest left position (largest roller gap) before the first pass.
3. Lower both conveyor tables and both safety guards, then switch the unit on.
4. Place the dough on the conveyor. Press the left foot pedal: the conveyors move left. Press the right foot pedal: the conveyors move right.
5. Reduce the roller gap with the thickness handle between passes until the dough reaches the thickness you need.
6. If a problem occurs, press the Emergency Stop button.

AFTER USE

1. Switch the unit off, then raise the safety guards.
2. Unplug the unit before cleaning.

Maintenance

Warning: switch the unit off and unplug it before any cleaning or maintenance.

DAILY CLEANING

At the end of each working day, switch the unit off, unplug it and clean it as follows:

1. Fold up the conveyor tables, then remove the leftover dough and debris from the conveyor belts and conveyor rollers.
2. Remove all leftover dough from the upper and lower rollers and scrapers. Make sure nothing is left on the rollers or scrapers.

Part	What to Use	Never Use
Rollers	Damp cloth	Knives or other hard objects
Scrapers	Damp cloth	Knives or other hard objects
Conveyor belts	Plastic scraper; damp cloth	Stainless steel or other metal blades
Whole unit	Damp cloth	Water jets or pressure washers

SERVICE PROCEDURES (QUALIFIED TECHNICIANS ONLY)

Note: the procedures below must be performed by an authorized, qualified technician.

Replacing the gears: switch the power off and unplug the unit, then raise the safety guards. Remove the side plate of the lower body with a screwdriver and disconnect the three wires at the connection box. Set the thickness handle to "0". Open the cover with an M5 Allen key, take out the gear housing and replace the gears. Reassemble in reverse order and set the thickness handle to "0".

Replacing the drive roller and bearing: switch the power off, unplug the unit and raise the safety guards. Open the cover with an Allen key. Loosen the bearing nuts and use a Phillips screwdriver to move the bearing off the roller joint. Replace the roller and bearing, then reassemble in reverse order.

Replacing the conveyor belts:

1. Remove the roller as described above.
2. Use the M8 wrench to release the belts on the roller and remove the product tray.
3. Use the M24 wrench to loosen the roller nuts.
4. Use the M16 wrench to loosen the belts at the support and separate the table.
5. Use the M10 wrench to release the belts from the table holder and separate them.
6. Remove the table and belts, fit the new belts, then reassemble in reverse order.
7. Check the belt tension: with the unit running, press lightly on the belts. They must not slip on the roller.

MAINTENANCE SCHEDULE

The tasks below are prescribed in this manual. Check off each task in the MAINTENANCE LOG as it is completed.

Task	Daily	Periodically
Check the safety guards, safety guard microswitches and Emergency Stop button before use.	✓	
Clean the conveyor belts, rollers and scrapers (unit unplugged).	✓	

Maintenance

Task	Daily	Periodically
Check conveyor belt tension and tracking; adjust the belt nuts if needed.		✓
Check the drive chain tension (qualified technician).		✓

MAINTENANCE LOG


Model: BE-CN-2083-FSS Serial Number: _____		
Date	**Task Performed**	**By**

Troubleshooting

Problem	Check / Remedy
The unit does not work.	Is the power supply on? Is the power switch on? Are both safety guards lowered? Raise and lower each safety guard and listen for the click of its microswitch. No click: have the microswitch checked by a qualified technician.
The electrical box vibrates continuously.	Is a belt loose? Is a wire loose or badly connected? Is there a foreign object inside the electrical box?
The unit runs in one direction only.	Has the circuit breaker tripped? Is the wiring of the direction control or a microswitch faulty? Is the motor wiring incorrect? Is the supply voltage correct (220V / 60Hz / 1Ph)?
One conveyor moves while the other has stopped.	Is the gear worn? Is the conveyor belt too loose?
The thickness handle does not stay in position and drops.	The drive chain inside the rear of the body is too loose (symptom: the unit runs smoothly to the right but not to the left). Set the handle to 15–20, open the cover with a screwdriver and adjust the motor plate with a wrench to tighten the chain. Check that the handle now moves smoothly. Qualified technician only.
The conveyor belt drifts to one side.	Adjust the belt nuts so the belt runs straight. Example: if the belt drifts to the rear, loosen the front nut. Make sure the belt runs at the same speed as the roller, with no gap between roller and belt.
Noise from the rollers.	Is a bearing worn? If the noise comes from the pressing roller, scraper and conveyor, something is stuck on the drive roller. Lift the table to clean the drive roller (see the Parts Breakdown for the roller positions).
The conveyor belt is too tight.	Humidity can shrink the belts. Loosen the belt nuts during regular checks. An over-tight belt can overload the motor, damage the roller bearings and shafts, and damage the drive gear.
If these checks do not resolve the issue, stop using the unit and contact Omcan Customer Service at 1-800-465-0234.	

Note: electrical and mechanical repairs must be done by an authorized, qualified technician.


Model BE-CN-2083-FSS 44135

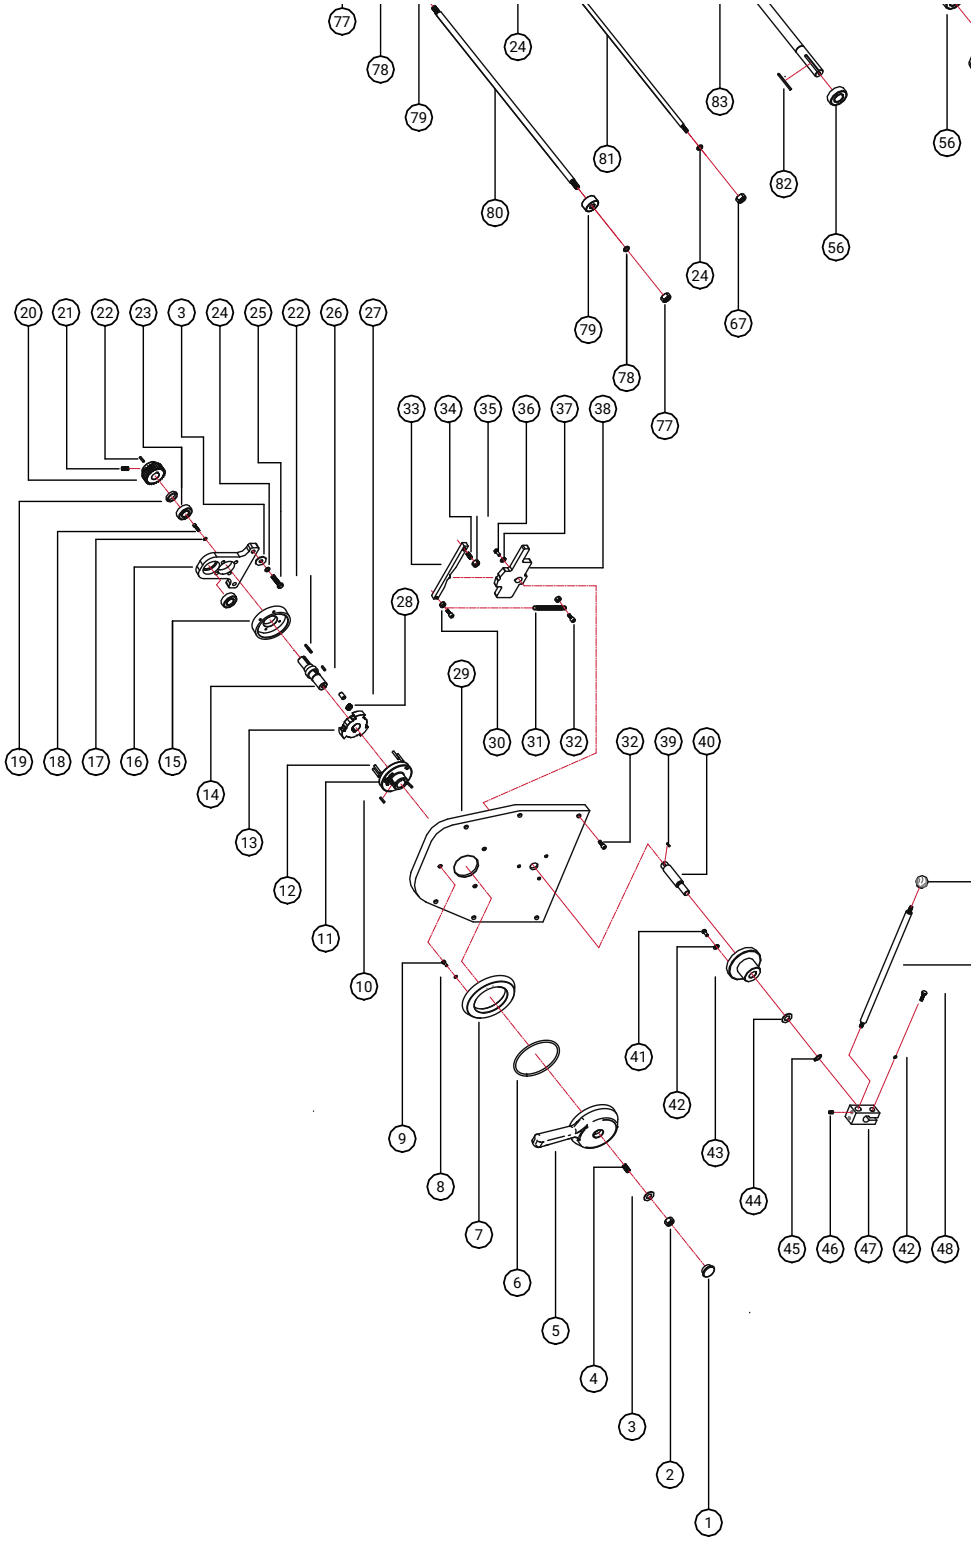

Exploded view, part 1 of 4. Numbers refer to the Position column of the parts table.


Parts Breakdown

Model BE-CN-2083-FSS 44135

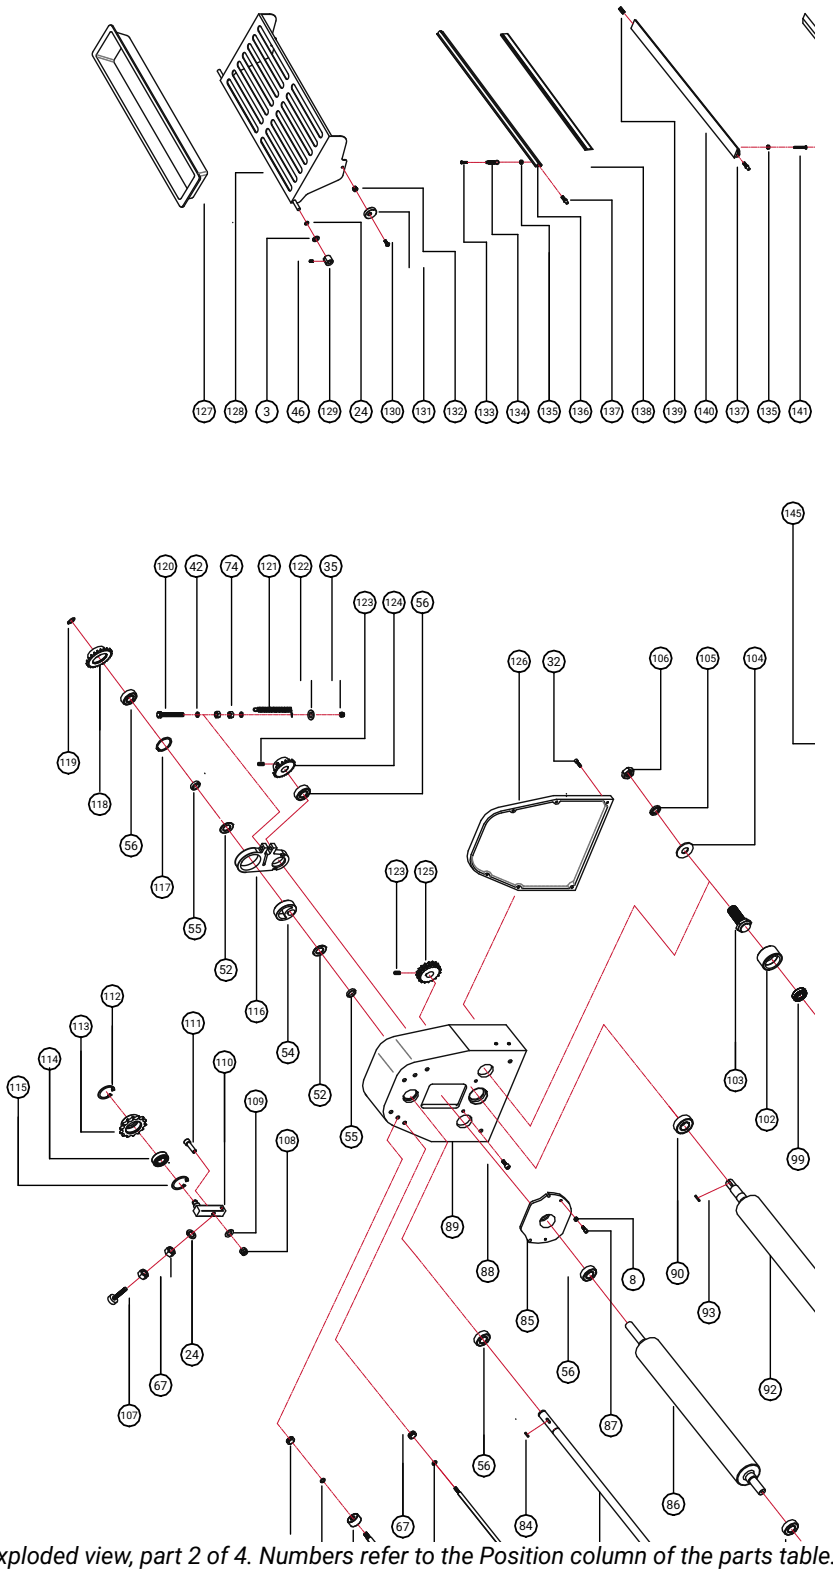

Exploded view, part 2 of 4. Numbers refer to the Position column of the parts table.


Model BE-CN-2083-FSS 44135

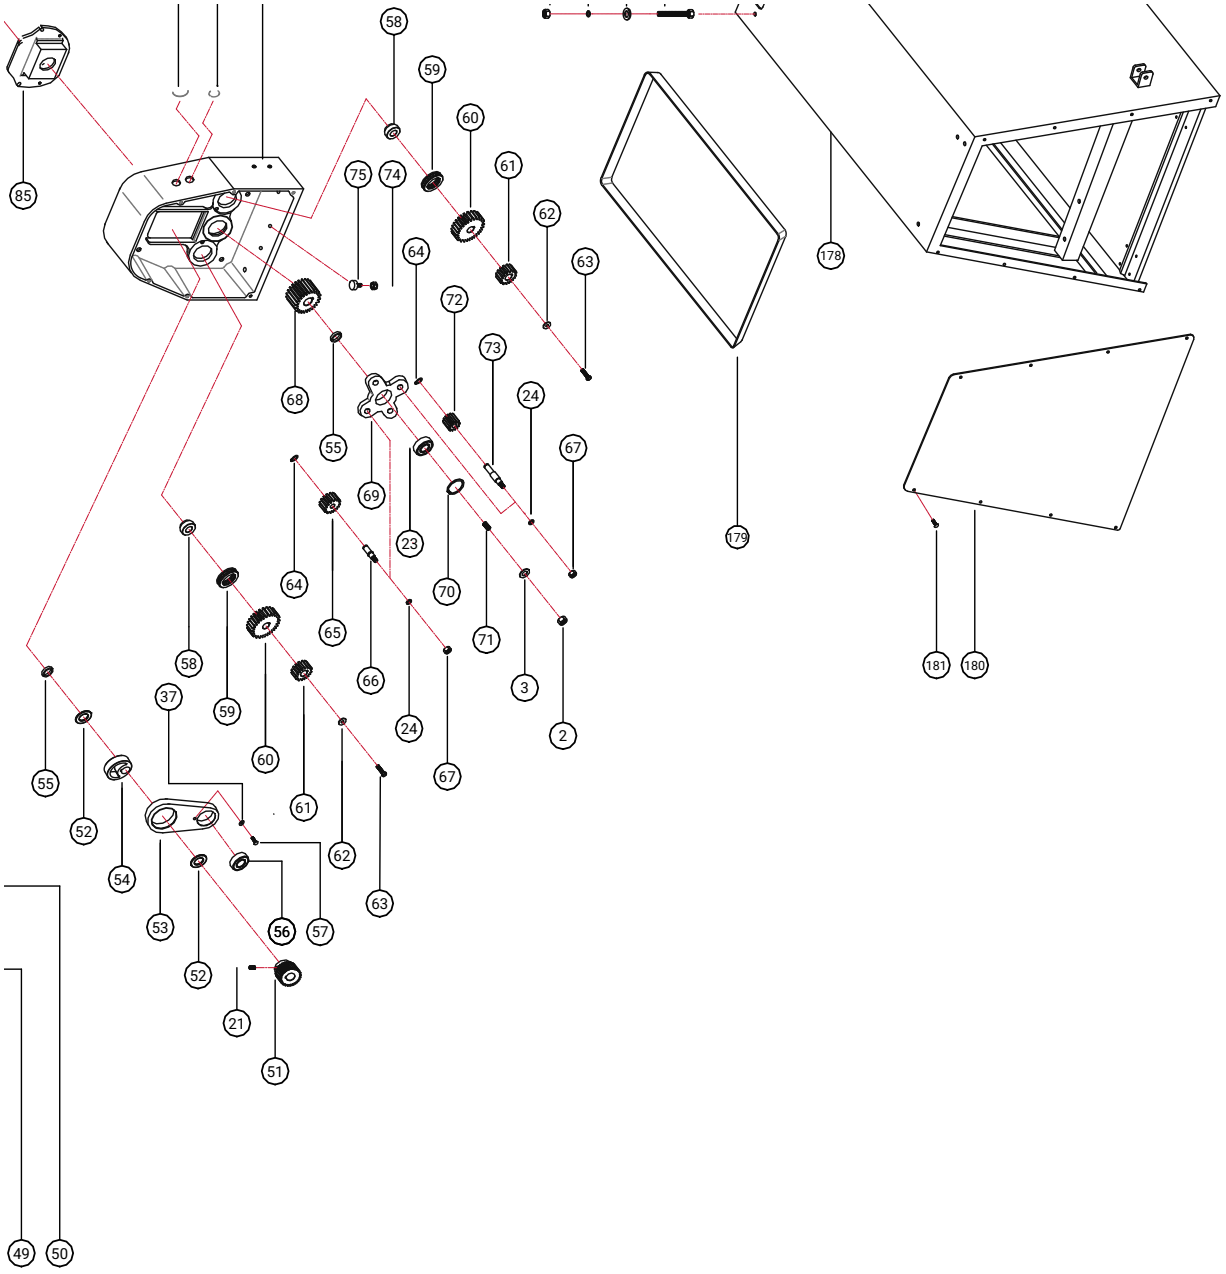

Exploded view, part 3 of 4. Numbers refer to the Position column of the parts table.

Parts Breakdown

Model BE-CN-2083-FSS 44135

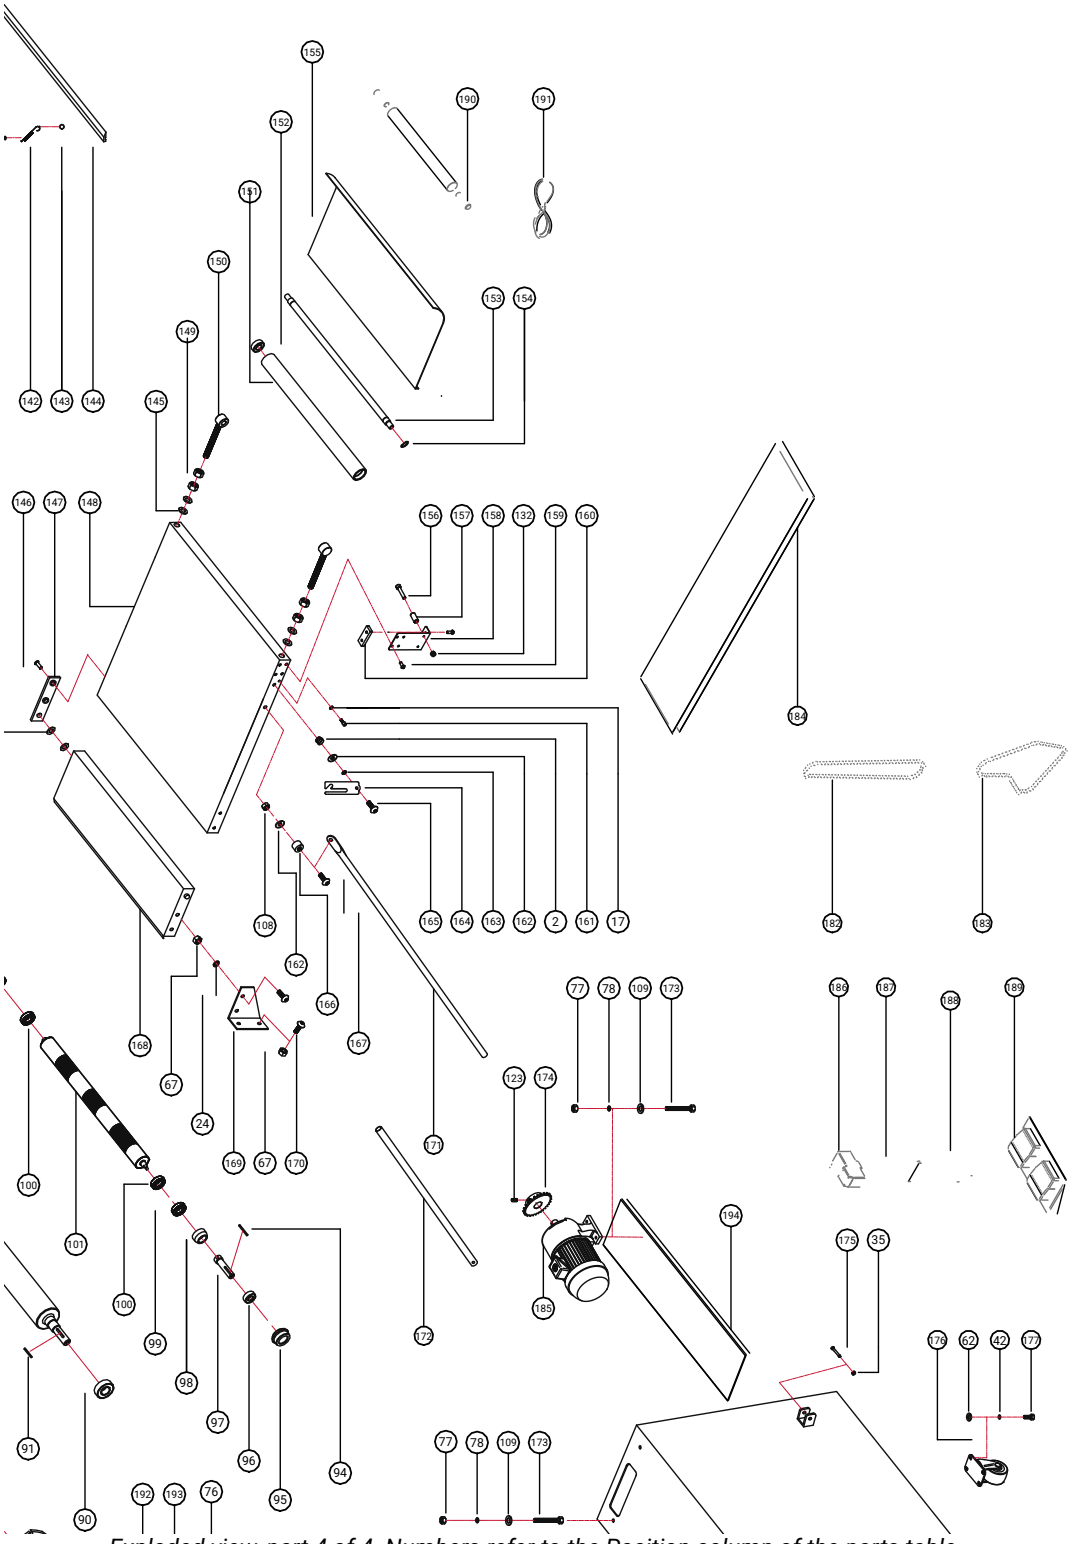

Exploded view, part 4 of 4. Numbers refer to the Position column of the parts table.

Parts Breakdown

Model BE-CN-2083-FSS 44135

Omcan Part No.	Description	Position
AD231	Buckle Head HP-25 for 44135	1
66707	Cap Nut M10 for 44135	2
AY394	Flat Washer Ø10 for 44135	3
66790	Bolt M10x35L for 44135	4
AY395	Handle for 44135	5
AD230	Seal Ring for 44135	6
AD229	Dial Disc for 44135	7
AD232	Lock Washer Ø5 for 44135	8
AY396	Bolt M5x16L for 44135	9
AD227	Flat Key 6x6x18 for 44135	10
AD228	Brake Rotating Disc for 44135	11
AD234	Split Pin 5x30L for 44135	12
AD225	Brake Device for 44135	13
AD238	Fixed Shaft for 44135	14
AD237	Brake Fixing Disc for 44135	15
AD218	Brake Fixing Seat for 44135	16
AD255	Lock Washer Ø6 for 44135	17
66770	Bolt M6x15L for 44135	18
AD217	Washer 3 mm for 44135	19
AD219	Gear for 44135	20
AD215	Bolt M8x12L for 44135	21
AD221	Flat Key 6x6x30L for 44135	22
66742	Bearing 6005 for 44135	23
AD207	Lock Washer Ø10 for 44135	24
AD239	Bolt M10x30L for 44135	25
AD222	Flat Key 6x6x12 for 44135	26
AD236	Cylinder Pin for 44135	27
AD224	Spring Ø0.9x9x14 for 44135	28
66714	Cover for 44135	29
AY397	Nut M6 for 44135	30
AD262	Draw Spring Ø1.4x11x88 for 44135	31
AD235	Bolt M6x20L for 44135	32
AD264	Cam Bar for 44135	33
AD265	Bolt M8x35L for 44135	34
AY398	Cap Nut M8 for 44135	35
AD235	Bolt M6x20L for 44135	36
66732	Flat Washer Ø6 for 44135	37
66728	Adjusting Block for 44135	38
66717	Flat Key 5x5x12 for 44135	39
66700	Shaft for 44135	40
AD215	Bolt M8x12L for 44135	41
66788	Lock Washer Ø8 for 44135	42
66701	Fixing Seat for 44135	43
AY399	Flat Washer Ø30x1.5t for 44135	44
66704	Circlip for Shaft S16 for 44135	45
AD267	Bolt M6x6L for 44135	46
66706	Left and Right Adjusting Seat for 44135	47
AD240	Bolt M8x30L for 44135	48
66709	Adjusting Rod for 44135	49
66710	Ball Knob for 44135	50
AD216	Gear for 44135	51
AY400	Flat Washer Ø25x3t for 44135	52
66731	Roller Adjusting Block for 44135	53
66730	Eccentric Block for 44135	54
66729	Washer 6 mm for 44135	55
66689	Bearing 6205 ZZ for 44135	56
66735	Bolt M6x12L for 44135	57
66746	Spacer for 44135	58
66747	Bearing 51108 for 44135	59
66748	Gear for 44135	60
66749	Gear for 44135	61
66750	Flat Washer Ø8x22x2t for 44135	62

Parts Breakdown

Omcan Part No.	Description	Position
66751	Bolt M8x18L for 44135	63
AD261	Circlip for Shaft S13 for 44135	64
66737	Gear for 44135	65
66738	Upper Plastic Gear Shaft for 44135	66
66795	Nut M10 for 44135	67
66752	Gear for 44135	68
66739	Adjusting Block for 44135	69
66743	Circlip for Hole R47 for 44135	70
AD239	Bolt M10x30L for 44135	71
66753	Gear for 44135	72
66754	Lower Plastic Gear Shaft for 44135	73
66835	Nut M8 for 44135	74
AD272	Rubber Head Screw M8x37 for 44135	75
66783	Machine Wall for 44135	76
66761	Nut M12 for 44135	77
66760	Lock Washer Ø12 for 44135	78
66759	Rubber Sleeve for 44135	79
66758	Fixing Rod for 44135	80
AY401	Fixing Rod for 44135	81
AD221	Flat Key 6x6x30 for 44135	82
66763	Shaft for 44135	83
AD227	Flat Key 6x6x18 for 44135	84
66765	Roller Adjusting Block for 44135	85
66771	Upper Roller for 44135	86
AD233	Bolt M5x15L for 44135	87
AD263	Bolt M10x20L for 44135	88
66769	Machine Wall for 44135	89
66772	Bearing 6206 ZZ for 44135	90
AD223	Flat Key 6x6x35 for 44135	91
66774	Lower Roller for 44135	92
AD252	Flat Key 6x6x25 for 44135	93
AD199	Flat Key 5x5x30 for 44135	94
66785	Bearing Sleeve for 44135	95
66784	Bearing 6004 for 44135	96
44797	Shaft for 44135	97
44800	Conveyor Roller for 44135	98–102
66777	Bolt for 44135	103
AY402	Flat Washer Ø20x40x2t for 44135	104
AY403	Lock Washer Ø20 for 44135	105
AY404	Nut M20x15H for 44135	106
AD206	Rubber Head Screw M10x78x30 for 44135	107
66801	Cap Nut M12 for 44135	108
AD244	Flat Washer Ø12 for 44135	109
AD208	Fixing Shaft for 44135	110
AD283	Bolt M12x40L for 44135	111
AD212	Circlip for Shaft S15 for 44135	112
AD211	Chain Wheel for 44135	113
AD210	Bearing 6202 for 44135	114
AD209	Circlip for Hole Ø35 for 44135	115
AD245	Roller Adjusting Block for 44135	116
AD246	Circlip for Hole R52 for 44135	117
AD247	Chain Wheel for 44135	118
AD248	Circlip for Shaft S25 for 44135	119
AD249	Bolt M8x80 for 44135	120
AD250	Draw Spring 1.6x16x64 for 44135	121
AD198	Flat Washer Ø8x16 for 44135	122
66734	Bolt M8x8L for 44135	123
66808	Chain Wheel 18T for 44135	124
AD251	Chain Wheel for 44135	125
66810	Cover for 44135	126
66814	Flour Tray for 44135	127
66815	Safety Guard for 44135	128
66816	Microswitch Sleeve for 44135	129
66696	Bolt M6x18L for 44135	130
66817	Rubber Wheel for 44135	131
66818	Cap Nut M6 for 44135	132


Parts Breakdown

Omcan Part No.	Description	Position
AY405	Draw Spring Ø1.5x10x20L for 44135	134
AD256	Nut M5 for 44135	135
66820	Upper Scraper Holder for 44135	136
66821	Dowel Pin for 44135	137
66822	Upper Scraper for 44135	138
AD276	Spring Ø1.0x10.4x22 for 44135	139
66823	Lower Scraper Holder for 44135	140
AY407	Bolt M5x50 for 44135	141
66786	Draw Spring Ø1.5x13x80 for 44135	142
AY408	Draw Spring Buckle Ø28 for 44135	143
66824	Lower Scraper for 44135	144
66703	Flat Washer Ø16x30x1.5t for 44135	145
66799	Bolt M8x15L for 44135	146
66800	Link Block for 44135	147
66826	Big Supporting Plate for 44135	148
66805	Nut M16 for 44135	149
66806	Fixing Rod for 44135	150
66828	Smooth Roller for 44135	151–154
66830	Tray Bar for 44135	155
AD254	Screw M6x30L for 44135	156
AD295	Rubber Wheel Ø10x6.2x21L for 44135	157
AD291	Backup Plate for Tray Bar for 44135	158
66735	Screw M6x12L for 44135	159
AD290	Aluminum Pad Block for Tray Bar 75x30x10 for 44135	160
66735	Bolt M6x12L for 44135	161
AY410	Flat Washer Ø10x30x3t for 44135	162
AY411	Flat Washer Ø10x20 for 44135	163
AD297	Fixing Seat for Rolling Pin for 44135	164
AD274	Screw M10x25 for 44135	165
66793	Aluminum Gasket for 44135	166
66708	Screw M10x40 for 44135	167
66796	Small Supporting Plate for 44135	168
66797	Left and Right Fixing Plate for 44135	169
AD263	Screw M10x20 for 44135	170
66802	Movable Rod for 44135	171
66803	Fixing Rod for 44135	172
AD283	Bolt M12x40L for 44135	173
66809	Chain Wheel 20T for 44135	174
AY412	Bolt M8x44L for 44135	175
AD286	Swivel Caster with Brake 3" for 44135	176
AD265	Bolt M8x35 for 44135	177
66755	Base for 44135	178
66831	Flour Plate for 44135	179
66756	Cover for 44135	180
66735	Bolt M6x12L for 44135	181
AD293	Drive Chain 08A, 68 Links for 44135	182
AD294	Drive Chain 08A, 62 Links for 44135	183
AD279	Conveyor Belt 2160x500 mm for 44135	184
AD271	Motor for 44135	185
AD298	Microswitch XZ-15GW22-B for 44135	186
AD299	AC Contactor SP11 for 44135	187
41545	Overload Relay 7–11 A for 44135	188
AD300	Foot Pedal XF-201 for 44135	189
AD065	Rolling Pin for 44135	190
AY413	Power Cord for 44135	191
61424	Emergency Stop Switch XB2-01ZS for 44135	192
66840	On/Off Switch XB2-10X21 for 44135	193
AD287	Motor Mounting Plate for 44135	194

Note: Position refers to the callout number on the exploded view. Where several positions share one part, the same Omcan part number is listed at each position.

Electrical Schematics

Model BE-CN-2083-FSS 44135

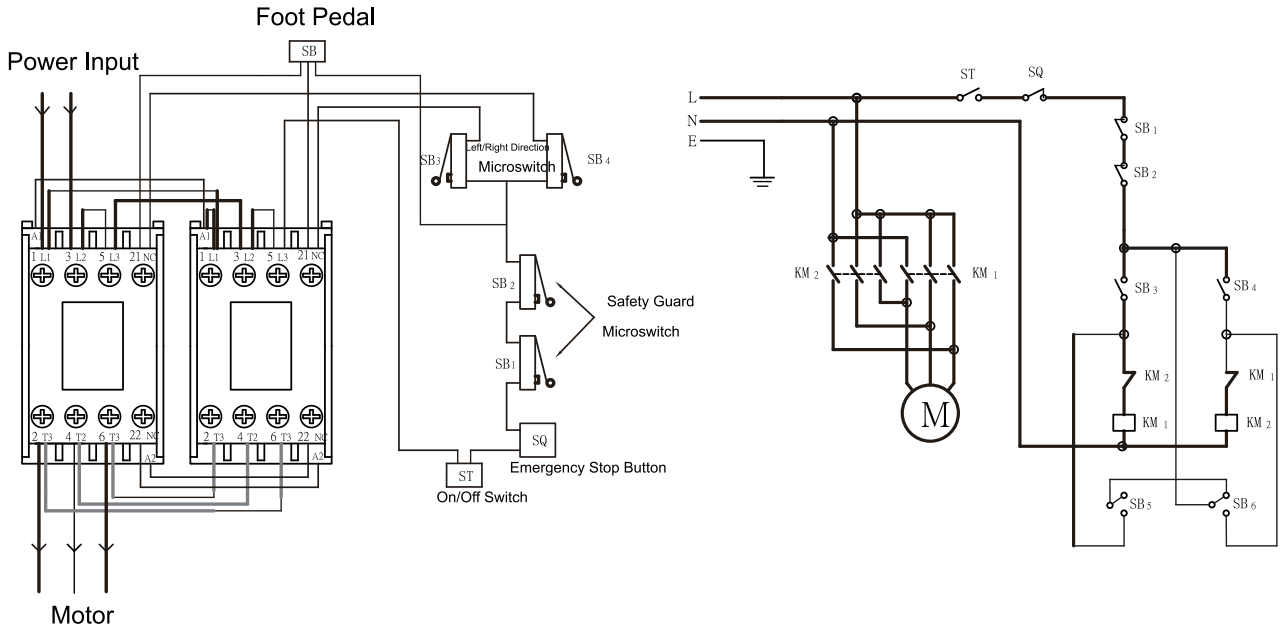

Wiring diagram

Code	Component	Code	Component
E	Ground Wire	**SQ**	Emergency Stop Button
L / N	Power Input	**SB1 / SB2**	Safety Guard Microswitch
M	Motor	**SB3 / SB4**	Left/Right Direction
KM1 / KM2	AC Contactor	**SB5 / SB6**	Foot Pedal
ST	On/Off Switch		

Notes

Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis envoyez-la à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan. Para registrar su garantía para este producto, complete la información a continuación, corte la tarjeta en la perforación y luego envíela a la dirección indicada a continuación. También puede registrarse en línea en:

https://omcan.com/warranty-registration/

For mailing in Canada · Pour envoi postal au Canada · Por correo en Canadá

OMCAN
PRODUCT WARRANTY REGISTRATION
3115 Pepper Mill Court,
Mississauga, Ontario
Canada, L5L 4X5

For mailing in the US · Pour envoi postal aux États-Unis · Por correo en los EE.UU.

OMCAN
PRODUCT WARRANTY REGISTRATION
4450 Witmer Industrial Estates, Unit 4,
Niagara Falls, New York
USA, 14305

or email to: service@omcan.com

✂ ----------

Purchaser's Information

Name: _____

Address: _____

City: _____

Province or State: _____

Postal or Zip: _____

Country: _____

Dealer from which Purchased: _____

Dealer City: _____

Dealer Province or State: _____

Invoice: _____

Company Name: _____

Telephone: _____

Email Address: _____

Type of Company:

☐ Restaurant ☐ Bakery ☐ Deli ☐ Butcher
☐ Supermarket ☐ Caterer
☐ Institution *(specify)* _____
☐ Other *(specify)* _____

Model Name: _____

Model Number: _____

Serial Number: _____

Machine Description: _____

Date of Purchase (MM/DD/YYYY): _____

Date of Installation (MM/DD/YYYY): _____

Would you like to extend the warranty? ☐ Yes ☐ No

Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan

Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 6,500 globally sourced products.

Depuis 1951 Omcan a grandi pour devenir un des "leaders" de la distribution des équipements et matériel pour l'industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd'hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l'entreprise. Nous nous efforçons d'offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 6500 produits provenant du monde entier.

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros para la industria de servicios de alimentos en América del Norte. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar relaciones nuevas y existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, trabajamos continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 6,500 productos con origen a nivel mundial.