Glass Door Merchandiser Freezers and Refrigerators

Models FR-CN-0040-BK / FR-CN-0040-WH / RE-CN-0052-SL-BK / RE-CN-0052-SL-WH

Instruction Manual



50132 50133 52052 53052

ITEM	MODEL	ELECTRICAL
50132 · 50133 · 52052 · 53052	FR-CN-0040-BK FR-CN-0040-WH RE-CN-0052-SL-BK RE-CN-0052-SL-WH	115V / 60Hz / 1Ph

Revised - 11/02/2026 · 50132-53052-EN Rev. B

STOP
DO NOT RETURN THIS PRODUCT TO THE STORE
For questions or assistance with this product call OMCAN Toll Free: 1 800 465 0234 Customer Service or visit the Support section of www.omcan.com

50132 50133 52052 53052
Scan for product page

cETLus ETL Sanitation NEMA 5-15P

Made in China

Table of Contents

Model FR-CN-0040-BK / Model FR-CN-0040-WH / Model RE-CN-0052-SL-BK / Model RE-CN-0052-SL-WH

Section	Page
General Information	3 - 4
Safety and Warranty	5 - 6
Technical Specifications	7
Installation	8
Operation and Loading	9
Maintenance	10 - 11
Troubleshooting	12
Controller Instructions	13
Parts Breakdown	14 - 19
Electrical Schematics	20 - 21
Notes	22
Warranty Registration	23

General Information

Record your product information here. Omcan tracks the service history of your equipment by its serial number — have it ready when you call.

Model Number (circle one)	FR-CN-0040-BK / FR-CN-0040-WH / RE-CN-0052-SL-BK / RE-CN-0052-SL-WH
Serial Number	
Item Number (circle one)	50132 / 50133 / 52052 / 53052
Date of Purchase	
Dealer	
Installed By	

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.

Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

Omcan Fabrication et distribution Compagnie Limitée et Food Machinery d'Amérique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, saine d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité appropriés. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de vous assurer que tous les éléments commandés sont dans la boîte et qu'il n'y a aucun dommage dissimulé à la machine. Si le colis a subi de mauvaises manipulations, des chocs ou des dommages (visibles ou cachés), notez-le sur le bon de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiés en port dû ou par un tiers transporteur.

General Information

Avant d'utiliser tout équipement, lisez toujours et familiarisez-vous avec toutes les opérations et les consignes de sécurité.

Omcan voudrait vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Conservez également la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricación Y Distribución Inc. Y Maquinaria De Alimentos De América, Inc. dba Omcan y Omcan Inc. no son responsables de ningún daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podrá ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, que haya sido entrenado en el correcto funcionamiento de esta máquina, y esté usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras está en funcionamiento.

REVISE EL PAQUETE A SU LLEGADA

Tras la recepción de un envío de Omcan, inspeccione si hay daños externos. Si no hay daños evidentes en el empaque exterior, abra el cartón para asegurarse de que todos los artículos solicitados estén dentro de la caja y de que no haya daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visibles u ocultos) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con el transportista. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningún recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre lea y familiarícese con todas las instrucciones de funcionamiento y seguridad.

A Omcan le gustaría darle las gracias por la compra de esta máquina. Es de suma importancia guardar estas instrucciones para futuras consultas. Además, guarde la caja original y el embalaje para el envío del equipo si se requiere servicio técnico o la devolución de la máquina.

Safety and Warranty

This manual uses the following signal words:

Danger: an imminent hazard that will result in death or serious injury.
Warning: a hazard that could result in death or serious injury.
Caution: a hazard that could result in minor or moderate injury.
Note: information important to the correct use or care of the unit.

INTENDED USE

These glass door merchandisers are intended for the storage and display of packaged products only: frozen products in the FR-CN-0040 freezers (50132 / 50133) and refrigerated products in the RE-CN-0052-SL refrigerators (52052 / 53052), in commercial foodservice and retail operations. Use the unit only as described in this manual.

IMPORTANT SAFEGUARDS

- To minimize shock and fire hazards, **DO NOT** overload the electrical outlet.
- To minimize electric shock and malfunction, **NEVER** spray the unit with water.
- To minimize fire hazards, **DO NOT** use flammable spray products near the unit.
- **Warning:** after unplugging the unit, wait at least 6 minutes before plugging it back in. Restarting the unit sooner can cause compressor failure.

R290 FLAMMABLE REFRIGERANT WARNINGS

- **Danger: risk of fire or explosion. Flammable refrigerant used. DO NOT** use mechanical devices to defrost the unit. **DO NOT** puncture the refrigerant tubing.
- **Danger: risk of fire or explosion.** Flammable refrigerant used. To be repaired only by trained service personnel. **DO NOT** puncture the refrigerant tubing.
- **Caution: risk of fire or explosion.** Flammable refrigerant used. Consult repair manual / owner's guide before attempting to service this product. All safety precautions must be followed.
- **Caution: risk of fire or explosion.** Dispose of the unit properly in accordance with federal or local regulations. Flammable refrigerant used.
- **Caution: risk of fire or explosion due to puncture of the refrigerant tubing.** Follow the handling instructions carefully. Flammable refrigerant used.
- **Caution:** keep all ventilation openings in the appliance enclosure, or in the structure for building-in, clear of obstruction.
- **Caution:** servicing must be done by factory-authorized service personnel, to minimize the risk of possible ignition due to incorrect parts or improper service.

CLEANING PRECAUTIONS

- **ALWAYS** unplug the power cord before cleaning.
- **NEVER** unplug or plug in the power cord with wet hands.
- **DO NOT** use abrasive cleaners, solvents or polishing agents on plastic parts. They can crack or discolor the plastic.

WHEN THE UNIT IS NOT IN USE

- Unplug the power cord.

Safety and Warranty

- Wipe the interior with a dry cloth, and leave the door slightly open to prevent moisture and odor build-up.

RESIDENTIAL USERS: vendor assumes no liability for parts or labor coverage for component failure or other damages resulting from installation in non-commercial or residential applications. The right is reserved to deny shipment for residential usage; if this occurs, you will be notified as soon as possible.

2 YEARS PARTS AND LABOUR, 5 YEARS COMPRESSOR WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule an Omcan authorized service technician to repair the equipment locally.

3-YEAR EXTENDED WARRANTY

A 3-year extended warranty is available for this product. It must be purchased at the time of sale or within 30 days of purchase. Contact your Omcan dealer for pricing.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see https://omcan.com/disclaimer for complete info.

WARNING:

The packaging components are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!

Technical Specifications

Item Number	50132	50133	52052	53052
Model	**FR-CN-0040-BK**	**FR-CN-0040-WH**	**RE-CN-0052-SL-BK**	**RE-CN-0052-SL-WH**
Type	Freezer	Freezer	Refrigerator	Refrigerator
Color	Black	White	Black	White
Capacity	31.5 cu.ft. (892 L)	31.5 cu.ft. (892 L)	52.3 cu.ft. (1481 L)	52.3 cu.ft. (1481 L)
Doors	2 Swing Glass Doors	2 Swing Glass Doors	3 Sliding Glass Doors	3 Sliding Glass Doors
Number of Shelves	8	8	12 (8 side, 4 middle)	12 (8 side, 4 middle)
Shelf Dimensions (W x D)	17.3" x 22" (440 x 560 mm)	17.3" x 22" (440 x 560 mm)	Side 23.2" x 21.5" (590 x 545 mm) Middle 25.8" x 21.5" (655 x 545 mm)	Side 23.2" x 21.5" (590 x 545 mm) Middle 25.8" x 21.5" (655 x 545 mm)
Shelf Capacity	88 lb (40 kg)	88 lb (40 kg)	88 lb (40 kg)	88 lb (40 kg)
Shelf Material	Plastic-coated wire	Plastic-coated wire	Plastic-coated wire	Plastic-coated wire
Exterior Material	Painted steel	Painted steel	Painted steel	Painted steel
Number of Casters	4 (2 with brake)	4 (2 with brake)	6 (3 with brake)	6 (3 with brake)
Temperature Range	-7.6 – 0 °F (-22 – -18 °C)	-7.6 – 0 °F (-22 – -18 °C)	33 – 40 °F (0.6 – 4.4 °C)	33 – 40 °F (0.6 – 4.4 °C)
Temperature Control	Digital	Digital	Digital	Digital
Defrost	Automatic, electric	Automatic, electric	Automatic, off-cycle	Automatic, off-cycle
Cooling System	Fan-forced	Fan-forced	Fan-forced	Fan-forced
Insulation	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane
Refrigerant	R290, 4.6 oz (130 g)	R290, 4.6 oz (130 g)	R290, 3.88 oz (110 g)	R290, 3.88 oz (110 g)
Power Input	950 W	950 W	768 W	768 W
Plug	NEMA 5-15P	NEMA 5-15P	NEMA 5-15P	NEMA 5-15P
Climate Class	4, 5	4, 5	—	—
Maximum Ambient Temperature	104°F (40°C), 40% RH	104°F (40°C), 40% RH	—	—
Energy Compliance	—	—	U.S. DOE (10 CFR 431.66)	U.S. DOE (10 CFR 431.66)
Rated Current	8.6 A	8.6 A	7.7 A	7.7 A
Electrical	115V / 60Hz / 1Ph	115V / 60Hz / 1Ph	115V / 60Hz / 1Ph	115V / 60Hz / 1Ph
Interior Dimensions (WDH)	35" x 25.6" x 61.1" (889 x 650 x 1553 mm)	35" x 25.6" x 61.1" (889 x 650 x 1553 mm)	73.7" x 22.7" x 59.7" (1872 x 577 x 1517 mm)	73.7" x 22.7" x 59.7" (1872 x 577 x 1517 mm)
Net Dimensions (WDH)	39.6" x 31.2" x 83.7" (1005 x 793 x 2125 mm)	39.6" x 31.2" x 83.7" (1005 x 793 x 2125 mm)	78.3" x 29.9" x 84.8" (1988 x 760 x 2155 mm)	78.3" x 29.9" x 84.8" (1988 x 760 x 2155 mm)
Net Weight	304.2 lb (138 kg)	304.2 lb (138 kg)	615.1 lb (279 kg)	615.1 lb (279 kg)

Note: the manufacturer reserves the right to make changes to the machine without notice.

Installation

Important — please read before installation.

- The refrigeration system operates most efficiently when installed in an area with cool, dry air circulation.
- Keep at least 6 inches of clearance on both sides and at the back of the cabinet.
- Select a location away from heat- and moisture-generating equipment such as stoves and ovens.
- Avoid direct sunlight.
- Make sure the floor where the unit will be installed is strong and level enough to support the total weight of the unit and its contents.
- To minimize shock and fire hazards, make sure the unit is properly grounded. For your safety and protection, all units are equipped with a three-prong grounding plug on the service cord.
- All units are designed for indoor use. Outdoor use may cause significant damage to the unit.

BEFORE YOU BEGIN

Confirm each point below before putting the unit into service:

- ☐ The power supply is 115V / 60Hz, single phase, matching the rating plate, on a grounded outlet (NEMA 5-15P plug supplied).
- ☐ The floor is strong and level enough for the loaded weight of the unit.
- ☐ There is at least 6 inches of clearance on both sides and at the back of the cabinet.
- ☐ The location is indoors, well ventilated, away from heat and moisture sources, and out of direct sunlight.
- ☐ The unit is not sharing its outlet with any other appliance and the outlet is not overloaded.

AMBIENT TEMPERATURE (FREEZERS 50132 / 50133)

The freezers are rated climate classes **4 and 5**: they are designed to operate in ambient conditions up to 86°F (30°C) at 55% relative humidity (class 4) and up to 104°F (40°C) at 40% relative humidity (class 5). **Do not operate the unit where the ambient temperature exceeds 104°F (40°C).** Higher room temperatures make the compressor overwork, raise energy use and shorten the life of the unit.

Operation and Loading

LOADING THE UNIT

- **DO NOT** block the air duct at the back or the fan on the ceiling of the unit with contents. Blocking the airflow reduces performance.
- For the best performance, keep at least 4 inches of clearance between the contents and the air duct.
- Set the shelves that come with the unit to fit your needs.
- **DO NOT** leave the door open for long periods of time. For the most efficient operation, close the door immediately after use.

TEMPERATURE CONTROLLER

- The controller is located at the right front corner of the ceiling, or on the front bottom panel.
- To adjust the temperature, refer to the Controller Instructions section of this manual.

ICE ACCUMULATION (FREEZERS 50132 / 50133)

- Try to reduce the amount of time the freezer doors remain open to prevent ice accumulation.
- Keep door seals clean to prevent air leakage.
- If ice builds up, start a manual defrost (see Controller Instructions). If ice remains, switch the unit off, unplug it, move the contents to another freezer and let the ice melt with the doors open. **NEVER** use mechanical devices, scrapers or sharp tools to remove ice.

Maintenance

- **ALWAYS** unplug the power cord before cleaning or maintenance.
- **DO NOT** use abrasive cleaners, solvents or polishing agents on plastic parts.
- **NEVER** spray the unit with water.
- When shutting the unit down or storing it, unplug the power cord, wipe the interior with a dry cloth, and leave the door slightly open to prevent moisture and odor build-up.

Part	What to Use	Never Use
Plastic parts		Abrasive cleaners, solvents or polishing agents
Interior (before storage / shutdown)	Dry cloth	
Condenser	Clean when heavy dust has collected (power disconnected)	
Exterior		Spraying with water

Maintenance

MAINTENANCE SCHEDULE

The tasks below are prescribed in this manual. Check off each task in the MAINTENANCE LOG as it is completed.

Task	Daily	Weekly	Monthly
Check that contents are not blocking the air duct or the ceiling fan.	✓		
Check door seals; keep them clean to prevent air leakage (freezers: if ice builds up, run a manual defrost).		✓	
Check the condenser; clean it if heavy dust has collected (power disconnected).			✓

MAINTENANCE LOG

Model (circle one): FR-CN-0040-BK / FR-CN-0040-WH / RE-CN-0052-SL-BK / RE-CN-0052-SL-WH
Serial Number: _____

Date	Task Performed	By

50132-53052-EN · Rev. B · 11/02/2026

Troubleshooting

If the unit develops a problem, work through the checks below before calling for service.

Problem	Solution
Compressor will not start.	Check that the power cord is plugged in.
	Check for a blown fuse.
Poor performance.	Move the unit out of direct sunlight, and avoid installing heating devices near the unit.
	Install the unit in a well ventilated place with a minimum of 6" clearance at the back.
	Check the condenser, and clean it if heavy dust has collected.
	Check whether contents are blocking the air duct.
	Make sure the door is completely closed.
	The refrigerant charge may be low. Call for service.
No interior light.	Turn the light switch off and on again.
	Make sure the light is correctly inserted into its socket.
	Check the light, and replace it if blown.
The unit is noisy.	Make sure the unit is installed on a level surface.
	Maintain the minimum clearance of 6" from the wall.
	Check for loose parts or mounting.
	Make sure the tubing is free from any contact, to avoid tubing rattle.
Condensation on the cabinet and/or floor.	Reduce the relative humidity in the area where the unit is installed.
	The door or head-section gasket is not sealing properly. Repair or replace the gasket as necessary.
If these checks do not resolve the issue, stop using the unit and contact Omcan Customer Service at 1-800-465-0234 or service@omcan.com.	

CONTROLLER ALARM CODES (FREEZERS 50132 / 50133)

When an alarm occurs, the controller shows its code and the alarm LED lights (the LED stays off for dF). Press SET to silence the buzzer. The codes below are for the freezer controller. If the refrigerator (52052 / 53052) controller shows a code, note it and contact Omcan Customer Service.

CODE	DESCRIPTION	BUZZER / ALARM RELAY
E0	Cabinet (control) probe error	Active
E1	Defrost probe error	Not active
LO	Low temperature alarm	Active
HI	High temperature alarm	Active
EE	Unit parameter error	Not active
EF	Operating parameter error	Not active
Ed	Defrost ended by timeout	Not active
dF	Defrost running (not a fault)	Not active
If an alarm persists, stop using the unit and contact Omcan Customer Service at 1-800-465-0234.		

DIGITAL CONTROLLER

The freezers (50132 / 50133) have a CAREL EASY digital controller (Omcan part 26483). The refrigerators (52052 / 53052) have a CAREL digital controller (Omcan part 27185) that is operated with the same buttons and steps. Both have a 3-digit LED display. During normal operation the display shows the cabinet temperature. The status LEDs show which functions are active, and the three buttons (UP, DOWN and SET) operate the controller.

LED	ON	OFF	Blinking
Compressor	Compressor on	Compressor off	Start requested
Fan	Fan on	Fan off	Start requested
Defrost	Defrost on	Defrost off	Defrost requested
Alarm	Alarm active	No alarm	–

Button	Function
UP	Press for more than 3 seconds to switch the controller ON or OFF.
DOWN	Press for more than 3 seconds to start or stop a manual defrost.
SET	Press for 1 second to display and set the set point. Press briefly to silence the audible alarm (buzzer).
UP + DOWN	Press together for more than 3 seconds to start or stop a continuous cycle.

SETTING THE SET POINT (DESIRED TEMPERATURE)

1. Press SET for 1 second. After a few moments the set value flashes.
2. Increase or decrease the value with UP or DOWN.
3. Press SET to confirm the new value.

Set the set point within the temperature range of the model: -7.6 to 0°F (-22 to -18°C) for the freezers (50132 / 50133), 33 to 40°F (0.6 to 4.4°C) for the refrigerators (52052 / 53052).

SWITCHING THE CONTROLLER ON / OFF

Press UP for more than 3 seconds. When the controller is OFF, temperature control and defrost are disabled and the display alternates "OFF" with the cabinet temperature.

Note: switching the controller OFF does not disconnect the unit from the power supply. Unplug the unit before cleaning or servicing.

MANUAL DEFROST

Press DOWN for more than 3 seconds. The defrost starts only if the temperature conditions allow it.

CONTINUOUS CYCLE

Press UP and DOWN together for more than 3 seconds.


The parameter menu is password-protected and reserved for qualified service personnel. **DO NOT** change parameters.

Caution: setting the controller to its coldest setting may cause the evaporator coil to freeze and ice up. This will eventually result in a warmer cabinet temperature.

Parts Breakdown

Model FR-CN-0040-BK 50132

Model FR-CN-0040-WH 50133

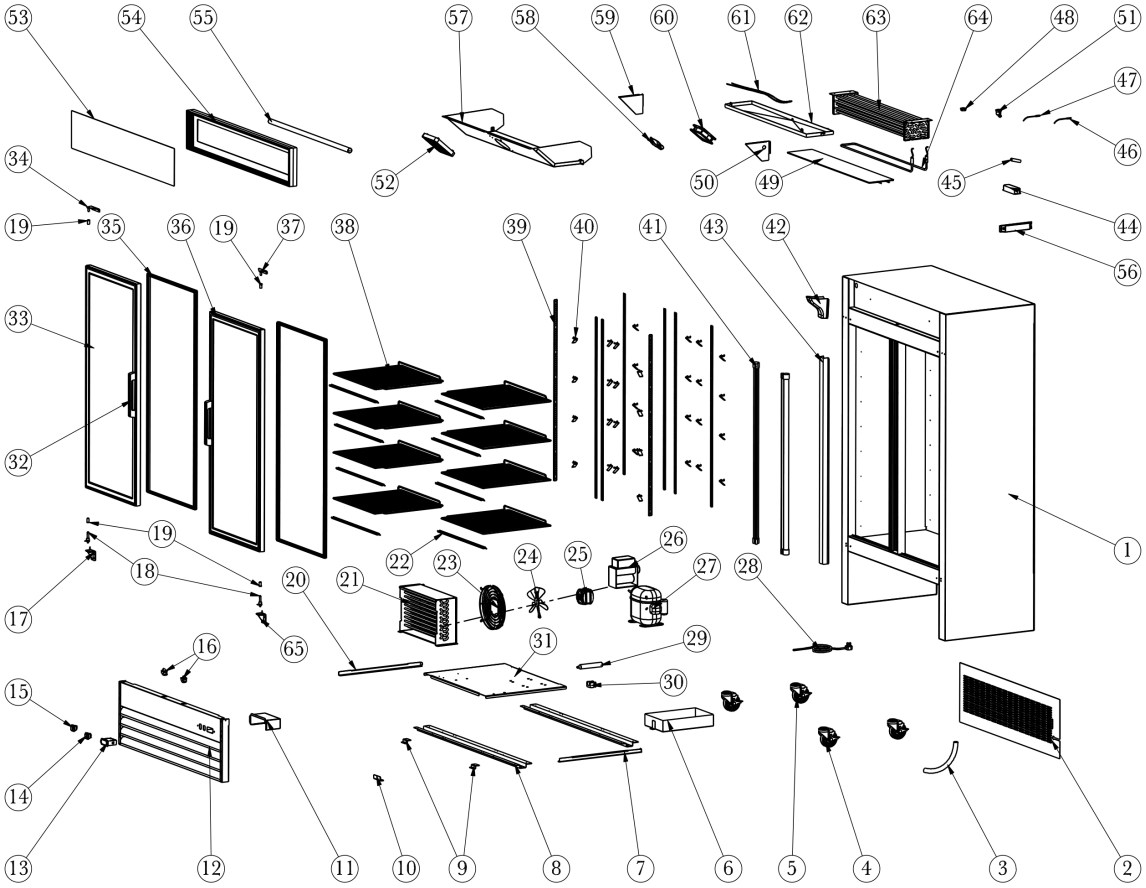

Parts Breakdown

Model FR-CN-0040-BK 50132

Model FR-CN-0040-WH 50133

Item No.	Description	Position	Item No.	Description	Position
AT420	Back Grill for 50132, 50133	2	AA808	Left Upper Hinge for 50132, 50133	34
AA216	Drain Pipe for 50132, 50133	3	AH696	Gasket for 50132, 50133	35
26247	Caster without Brake for 50132, 50133	4	AX741	Right Glass Door for 50132, 50133	36
26246	Caster with Brake for 50132, 50133	5	AA857	Upper Right Hinge for 50132, 50133	37
AA874	Outer Drain Pan for 50132, 50133	6	AX742	Shelf for 50132, 50133	38
AE894	Right Track for Installation Board for 50132, 50133	7	AA809	K Strip for 50132, 50133	39
AT419	Caster Installation Board for 50132, 50133	8	26884	K Clip for 50132, 50133	40
AA304	Installation Board Block for 50132, 50133	9	AA722	Cabinet LED Light for 50132, 50133	41
AB974	Installation Board Handle for 50132, 50133	10	AU284	Drain Hose Block for 50132, 50133	42
AI385	Controller Waterproof Box for 50132, 50133	11	AX743	Air Pipe Protection Board for 50132, 50133	43
AX735	Front Grille for 50132, 50133	12	AG563	Power Supply for LED Light for 50132, 50133	44
26483	Digital Temperature Controller for 50132, 50133	13	AA969	Drain Hose for Inner Drain Pan for 50132, 50133	45
AA362	Light Switch for 50132, 50133	14	AI382	Temperature Sensor for 50132, 50133	46
43982	Power Switch for 50132, 50133	15	AU665	Temperature Sensor for Evaporator for 50132, 50133	47
AB977	Door Switch for 50132, 50133	16	AT250	Drain Nozzle Nut for 50132, 50133	48
AX736	Left Bottom Hinge for 50132, 50133	17	AX744	Drain Pan Heater for 50132, 50133	49
AA810	Bottom Hinge Axis for 50132, 50133	18	AX733	Fan Right Bracket for 50132, 50133	50
AA715	Axis Cover for 50132, 50133	19	AF036	Drain Nozzle for 50132, 50133	51
AE892	Left Track for Installation Board for 50132, 50133	20	AH713	Fan Blade Guide Ring for 50132, 50133	52
AX737	Condenser for 50132, 50133	21	AT423	Light Box Plate for 50132, 50133	53
AA854	Shelf Tag for 50132, 50133	22	AT424	Light Box Frame for 50132, 50133	54
AL996	Condenser Fan Motor Cover for 50132, 50133	23	AT425	LED Inside Light Box for 50132, 50133	55
AA764	Condenser Fan Blade for 50132, 50133	24	AH710	Power Switch LED Light for 50132, 50133	56
AX738	Condenser Fan Motor for 50132, 50133	25	AB992	Evaporator Cover for 50132, 50133	57

Parts Breakdown


Item No.	Description	Position	Item No.	Description	Position
	Compressor Accessories for 50132, 50133 (no Omcan part number yet)	26	AA764	Evaporator Fan Blade for 50132, 50133	58
AX739	Compressor for 50132, 50133	27	AX734	Fan Left Bracket for 50132, 50133	59
AA927	Power Cord for 50132, 50133	28	AX745	Evaporator Fan Motor for 50132, 50133	60
AB594	Filter for 50132, 50133	29	AA939	Drain Hose Heater for 50132, 50133	61
AB595	Filter Fixer for 50132, 50133	30	AX746	Evaporator Drain Pan for 50132, 50133	62
AE893	Compressor Installation Board for 50132, 50133	31	AJ157	Evaporator for 50132, 50133	63
AA695	Glass Door Handle for 50132, 50133	32	AX747	Defrost Heater for 50132, 50133	64
AX740	Left Glass Door for 50132, 50133	33	AX748	Bottom Right Hinge for 50132, 50133	65

Note: position 1 (cabinet) is not a spare part. Parts not listed here are not sold separately; contact Omcan Customer Service with the model and serial number from the rating plate. Position 26 (compressor accessories) has no Omcan part number yet; quote the position and the serial number when ordering.

Parts Breakdown

Model RE-CN-0052-SL-BK 52052

Model RE-CN-0052-SL-WH 53052

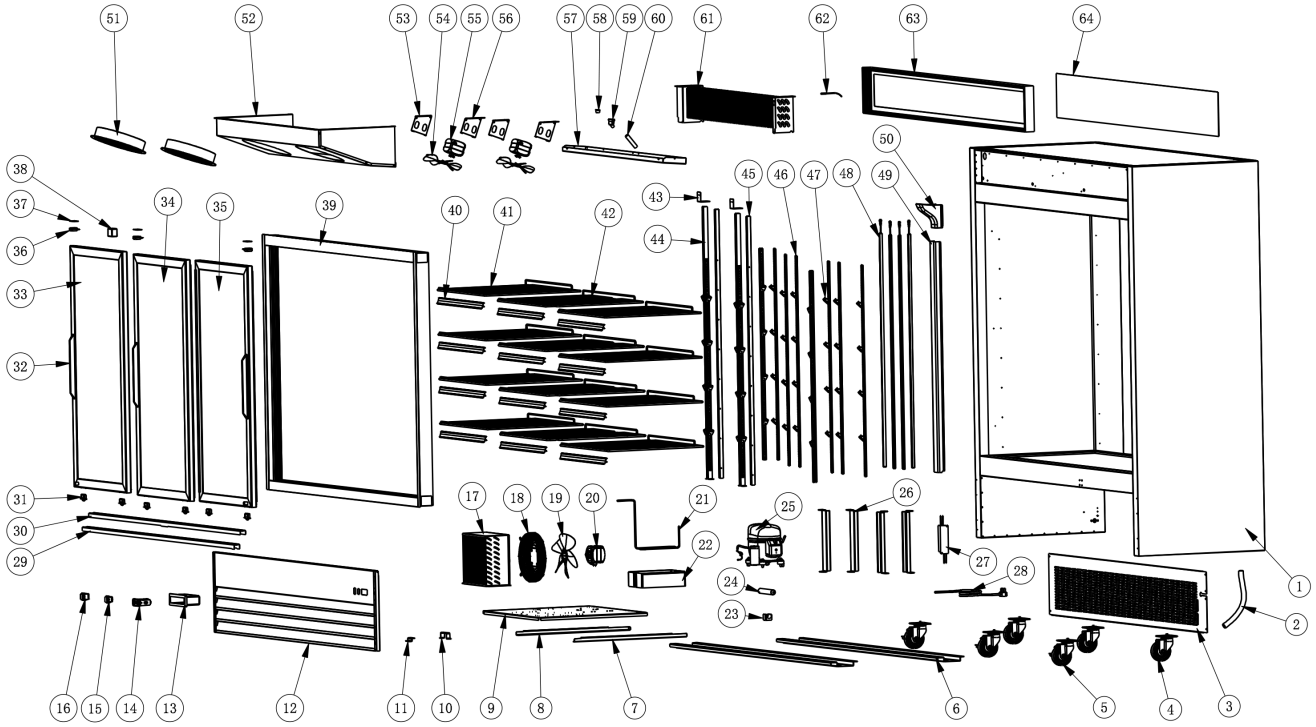

Parts Breakdown

Model RE-CN-0052-SL-BK 52052

Model RE-CN-0052-SL-WH 53052

Item No.	Description	Position	Item No.	Description	Position
AU263	Drain Pipe Assembly for 52052, 53052	2	AX759	Right Glass Door for 52052, 53052	34
AU317	Back Grill for 52052, 53052	3	AX760	Middle Glass Door for 52052, 53052	35
26247	Caster without Brake for 52052, 53052	4	AX761	Telescopic Pull Cable Box for 52052, 53052	36
26246	Caster with Brake for 52052, 53052	5	AX762	Telescopic Pull Cable Box Fixing Plate for 52052, 53052	37
AX749	Foot Support Plate for 52052, 53052	6	AA797	Rubber Stopper for 52052, 53052	38
AX750	Mounting Plate Right Guide Rail for 52052, 53052	7	AX763	Door Guide Rail Assembly for 52052, 53052	39
AX751	Mounting Plate Left Guide Rail for 52052, 53052	8	AA777	Shelf Trim Strip for 52052, 53052	40
AU322	Unit Mounting Plate for 52052, 53052	9	AX764	Shelf, Left / Right for 52052, 53052	41
AU271	Mounting Plate Handle for 52052, 53052	10	AX765	Shelf, Middle for 52052, 53052	42
AU270	Mounting Plate Limit Block for 52052, 53052	11	AX766	Center Post Corner Connector for 52052, 53052	43
AX752	Front Grill for 52052, 53052	12	AX767	Interior Light Bracket for 52052, 53052	44
AI385	Controller Waterproof Box for 52052, 53052	13	AX768	Center Post Back Panel for 52052, 53052	45
27185	Digital Temperature Controller for 52052, 53052	14	AN127	K-Shaped Strip for 52052, 53052	46
AA362	Light Switch for 52052, 53052	15	AU282	K-Shaped Clip for 52052, 53052	47
43982	Power Switch for 52052, 53052	16	AG461	LED Light for 52052, 53052	48
AH690	Condenser for 52052, 53052	17	AU283	Suction Pipe Pressure Plate for 52052, 53052	49
AU320	Fan Grill for 52052, 53052	18	AU284	Drain Hose Block for 52052, 53052	50
AX753	Fan Blade for 52052, 53052	19	AH713	Fan Blade Guide Ring for 52052, 53052	51
AA813	Motor for 52052, 53052	20	AU329	Fan Cover for 52052, 53052	52
AU321	High Pressure Pipe for 52052, 53052	21	AX734	Left Fan Bracket for 52052, 53052	53
AB970	Plastic Water Pan for 52052, 53052	22	AX769	Fan Blade for 52052, 53052	54
AI969	Tube Clip with Lock (Size 25) for 52052, 53052	23	26675	Motor for 52052, 53052	55
AI968	Drier Filter for 52052, 53052	24	AX733	Right Fan Bracket for 52052, 53052	56
AX754	Compressor for 52052, 53052	25	AH703	Internal Water Pan for 52052, 53052	57
AU308	Support Plate for 52052, 53052	26	AT250	Drain Nozzle Compression Nut for 52052, 53052	58

Parts Breakdown


Item No.	Description	Position	Item No.	Description	Position
AS696	Power Supply for 52052, 53052	27	AF036	Drain Nozzle for 52052, 53052	59
AX755	Power Cord for 52052, 53052	28	AA969	Internal Water Pan Drain Hose for 52052, 53052	60
AX756	Outer Glass Door Guide Rail for 52052, 53052	29	AU330	Evaporator for 52052, 53052	61
AX757	Inner Glass Door Guide Rail for 52052, 53052	30	AX770	Temperature Sensor for 52052, 53052	62
AA802	Door Roller for 52052, 53052	31	AX771	Light Box Frame for 52052, 53052	63
62363	Door Handle for 52052, 53052	32	AA837	Light Box Plate for 52052, 53052	64
AX758	Left Glass Door for 52052, 53052	33			

Note: position 1 (cabinet) is not a spare part. Parts not listed here are not sold separately; contact Omcan Customer Service with the model and serial number from the rating plate.

Electrical Schematics

Model FR-CN-0040-BK 50132


Model FR-CN-0040-WH 50133

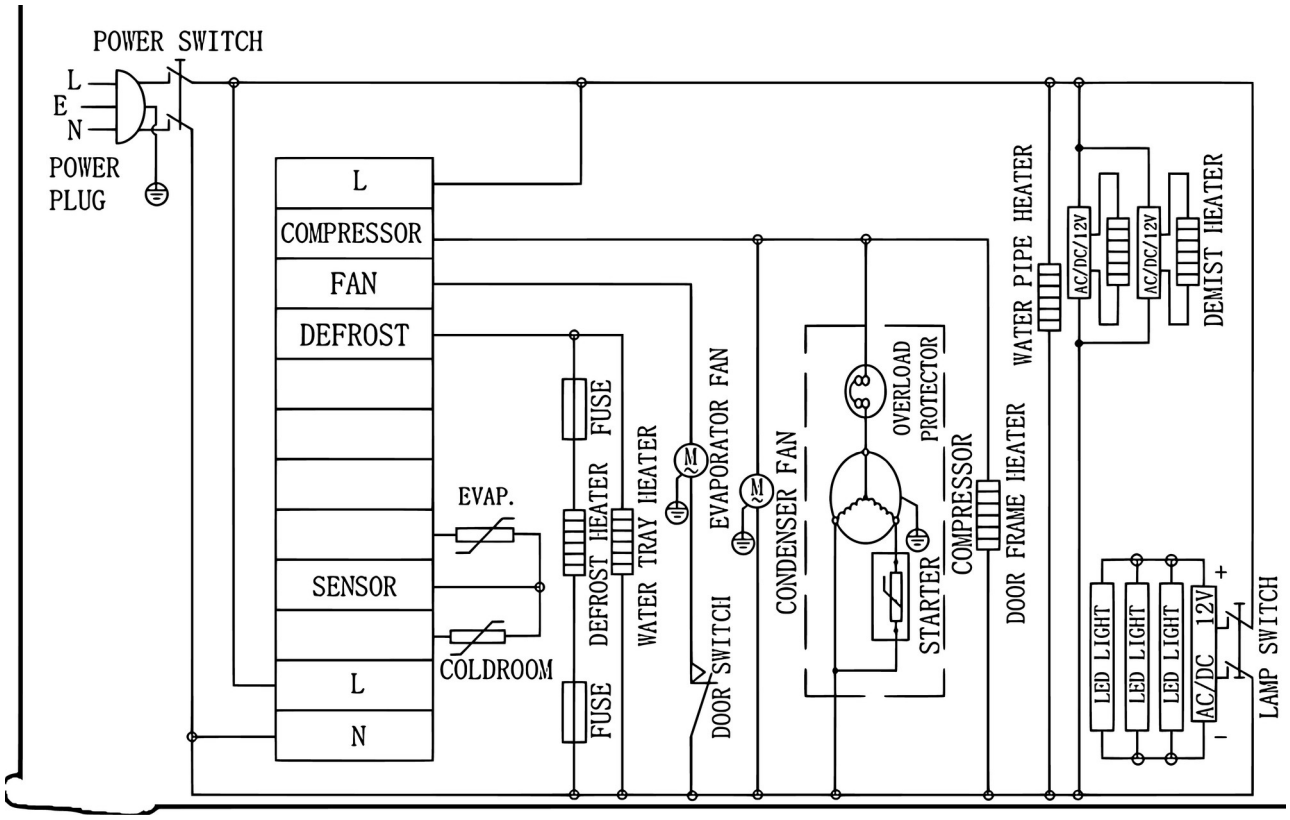

Electrical Schematics

Model RE-CN-0052-SL-BK 52052

Model RE-CN-0052-SL-WH 53052

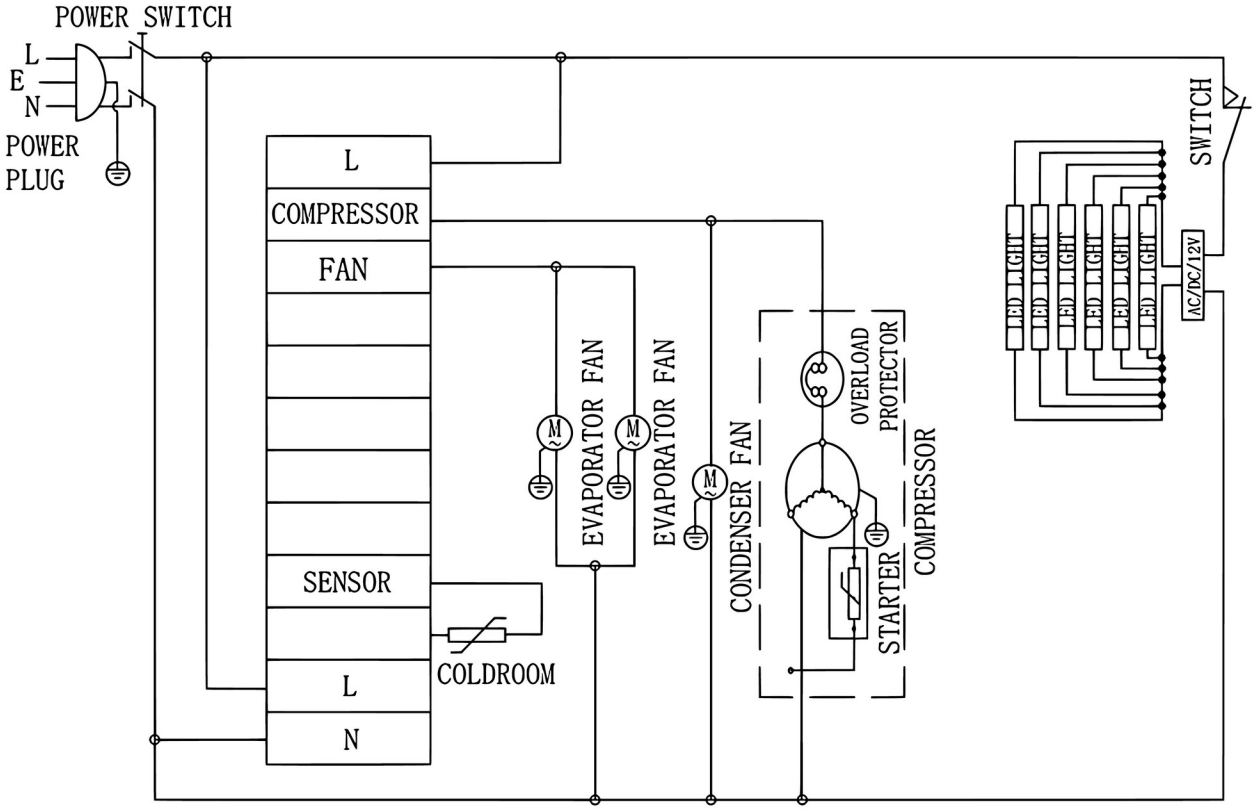

Notes

50132-53052-EN · Rev. B · 11/02/2026

Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis envoyez-la à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan. Para registrar su garantía para este producto, complete la información a continuación, corte la tarjeta en la perforación y luego envíela a la dirección indicada a continuación. También puede registrarse en línea en:

https://omcan.com/warranty-registration/

For mailing in Canada · Pour envoi postal au Canada · Por correo en Canadá

OMCAN
PRODUCT WARRANTY REGISTRATION
3115 Pepper Mill Court,
Mississauga, Ontario
Canada, L5L 4X5

For mailing in the US · Pour envoi postal aux États-Unis · Por correo en los EE.UU.

OMCAN
PRODUCT WARRANTY REGISTRATION
4450 Witmer Industrial Estates, Unit 4,
Niagara Falls, New York
USA, 14305

or email to: service@omcan.com

✂ ----------

Purchaser's Information

Name: _____

Address: _____

City: _____

Province or State: _____

Postal or Zip: _____

Country: _____

Dealer from which Purchased: _____

Dealer City: _____

Dealer Province or State: _____

Invoice: _____

Company Name: _____

Telephone: _____

Email Address: _____

Type of Company:

☐ Restaurant ☐ Bakery ☐ Deli ☐ Butcher
☐ Supermarket ☐ Caterer
☐ Institution *(specify)* _____
☐ Other *(specify)* _____

Model Name: _____

Model Number: _____

Serial Number: _____

Machine Description: _____

Date of Purchase (MM/DD/YYYY): _____

Date of Installation (MM/DD/YYYY): _____

Would you like to extend the warranty? ☐ Yes ☐ No

Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan

Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 6,500 globally sourced products.

Depuis 1951 Omcan a grandi pour devenir un des "leaders" de la distribution des équipements et matériel pour l'industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd'hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l'entreprise. Nous nous efforçons d'offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 6500 produits provenant du monde entier.

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros para la industria de servicios de alimentos en América del Norte. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar relaciones nuevas y existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, trabajamos continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 6,500 productos con origen a nivel mundial.