




Refrigerated Showcase
Model RS-CN-0200
Item 31809
Instruction Manual



Revised - 02/07/2024

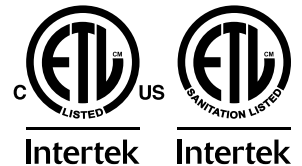

Toll Free: 1-800-465-0234
Fax: 905-607-0234
Email: service@omcan.com
www.omcan.com



Table of Contents

Model RS-CN-0200

Section	Page
Disclaimer -----	3
General Information -----	4 - 5
Safety and Warranty -----	5 - 6
Technical Specifications -----	7
Installation -----	7 - 9
Operation -----	9 - 10
Maintenance -----	10
Troubleshooting -----	10 - 11
Parts Breakdown -----	12 - 14
Electrical Schematics -----	15
Notes -----	16 - 18
Warranty Registration -----	19

Disclaimer

OMCAN IS NOT RESPONSIBLE FOR ANY DAMAGES DUE TO WATER LEAKS. WARRANTY FOR WATER LEAKS IS VOID IF THE AMBIENT ROOM TEMPERATURE EXCEEDS 75°F AND 55% RELATIVE HUMIDITY, AND THE APPLIANCE DRAIN IS NOT CONNECTED DIRECTLY TO A FLOOR DRAIN.

OMCAN N'EST PAS RESPONSABLE DES DOMMAGES DUS AUX FUITES D'EAU. LA GARANTIE POUR LES FUITES D'EAU EST ANNULÉE SI LA TEMPÉRATURE AMBIANTE DE LA PIÈCE DÉPASSE 75°F ET 55% D'HUMIDITÉ RELATIVE, ET SI LE DRAIN DE L'APPAREIL N'EST PAS RACCORDÉ DIRECTEMENT À UN DRAIN DE PLANCHER.

OMCAN NO SE HACE RESPONSABLE DE LOS DAÑOS CAUSADOS POR FUGAS DE AGUA. LA GARANTÍA POR FUGAS DE AGUA QUEDA ANULADA SI LA TEMPERATURA AMBIENTE SUPERA LOS 75°F Y EL 55% DE HUMEDAD RELATIVA, Y EL DESAGÜE DEL APARATO NO ESTÁ CONECTADO DIRECTAMENTE A UN DESAGÜE DE PISO.

General Information

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.

Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

Omcan Fabrication et distribution Compagnie Limitée et Food Machinery d'Amérique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, sain d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité appropriés. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bond de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiés ou cueilli par un tiers transporteur.



General Information

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurarse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre lea y familiarizarse con todas las instrucciones de funcionamiento y seguridad.

Omcan le gustaría darle las gracias por la compra de esta máquina. Es de la mayor importancia para salvar estas instrucciones para futuras consultas. Además, guarda la caja original y el embalaje para el envío del equipo si servicio técnico o devolución de la máquina que se requiere.

Safety and Warranty

SUITABLE FOR HIGH TRAFFIC AREAS WHERE NOISE LEVELS ARE NOT A CONCERN.

RESIDENTIAL USERS: vendor assumes no liability for parts or labor coverage for component failure or other damages resulting from installation in non-commercial or residential applications. The right is reserved to deny shipment for residential usage; if this occurs, you will be notified as soon as possible.

Safety and Warranty

1 YEAR PARTS AND LABOUR WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule an Omcan authorized service technician to repair the equipment locally.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see <https://omcan.com/disclaimer> for complete info.

WARNING:

The packaging components are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!

Technical Specifications

Model	RS-CN-0200
Rated Input Power	1340 W
Electrical Heating Element	490 W
Capacity	200 L / 7.06 cu.ft.
Electrical	110-120V / 60Hz / 1
Lamp Power	2.8 W x 3
Temperature Range	2 - 12°C / 35.6 - 53.6°F
Max Ambient Temp Rating	24°C / 75°F
Refrigerant & Injection	R290 (148g)
Blowing Gas	N/A
Type of Climate	6
Rated Current	8A
Weight	253.5 lbs. / 115 kgs.
Packaging Weight	262.4 lbs. / 119 kgs.
Dimensions	39.4" x 22" x 49.2" / 1000 x 559 x 1250mm
Shelf Size	37.2" x 9.4" / 945 x 240mm
Packaging Dimensions	42" x 25" x 52" / 1067 x 635 x 1321mm
Item Number	31809

Installation

HANDLE AND ASSEMBLING




Handle with care

Unplug wall socket before moving. Never tilt the refrigerator over 45 degrees during handling.



Storage


Always store refrigerator in a dry place.

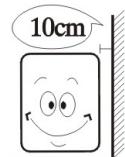

Sufficient space


To allow for proper air circulation and increased refrigeration capabilities, the refrigerator must have at least 3 inches of space between wall and unit.

Installation

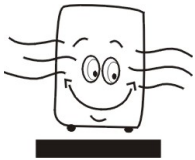

Proper ventilation

Always place the refrigerator in an area with good ventilation. For first time use, wait at least 2 hours before plugging into wall socket.

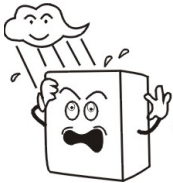


X Away from heat source

Never place the refrigerator near any type of heat source or in direct sunlight, as it reduces refrigeration capabilities.




X No heavy load

Never put heavy items on top of the refrigerator.

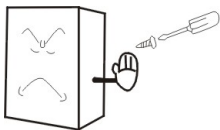

No alterations/tampering


Never tamper with, or make changes to the refrigerator. Changes and add-ons should not be installed to the inside or outside of the refrigerator.

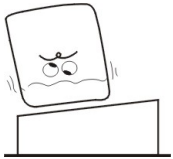

Stable location


Unpack and place the refrigerator on flat, solid ground.

PREPARATION AND POWER SUPPLY

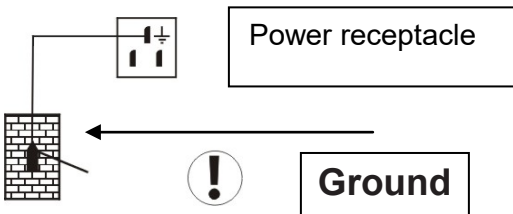

Exclusive power socket

Power supply should be 110-120V, single phase AC with exclusive single phase three pin outlet and fuse (8A). The power outlet must be in close proximity to the ground.

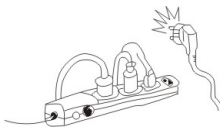

No shared power outlets

Refrigerator cable should never share the power outlet with any other appliance, as cable will overheat and may result in a fire.



X Protect cables



Extra caution should be used when handling cables, as broken or damaged cables can cause sparking and may result in a fire.







X No water flushing


Never flush the refrigerator surface. This can cause leakage, which may result in electrical damage or fire.

Installation

  **X** **Never store flammables and explosives**
No explosives or flammables should be stored in, or in proximity to, the refrigerator, such as gasoline, alcohol, and adhesives.

  **X** **No spray**
Never spray flammables such as paint or coating near the refrigerator. This may cause fire or malfunction.

  **After power outage**
After a power outage or the unplugging of the refrigerator, wait at least 5 minutes before plugging it back in.

 **X** **No medicine**
Medicine should not be stored inside of the refrigerator.


Operation

USE AND CAUTION

Before use:

- Plug refrigerator into the 110-120V exclusive socket.
- After the refrigerator is running, confirm that air suction/filtration is in order and that it is sufficiently cold. After checking to make sure the refrigerator is working properly, it may be used.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The operation manual is not suitable for the persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.

DIGITAL TEMPERATURE CONTROLLER

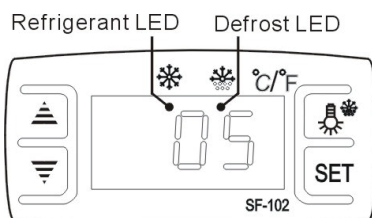





Operation

Features of Function

Small, integrated digital controller, which is applicable to the compressor of 1 HP. Main functions are: temperature display/temperature control/manual-automatic defrost by burning off/lighting control/value storing/self-testing/parameter locking.

Front Panel Operation

1. Set temperature: press "SET" button; set temperature will be displayed. Press  or  button to modify and store the displayed value. Press "SET" button to exit the adjustment and display the cold-room temperature.
2. If no button is pressed within 10 seconds, the cold-room temperature will be displayed.
3. Lighting: press  button to activate light in refrigerator; press again to turn off.
4. Manual start/stop defrost: press  button and hold for 6 seconds to either defrost or to stop defrost.
5. Refrigeration LED: during refrigeration, the LED is on. When the cold room temperature is constant, the LED is off. During delay start, the LED flashes.
6. Defrost LED: during defrosting, the LED is on. When it stops defrosting, the LED is off. During the delay of defrost, the LED flashes.

Maintenance

1. Cabinet cleaning: the product should be cleaned once a week with power supply disconnected. In cleaning, please use mild-rinsing water or non-corrosive products. Do not wash directly with water faucet.
2. De-dusting for condenser: the condenser should be cleaned every three months with power supply disconnected. To clean condenser, remove rear metal cover and get rid of any dust found on the cooling fin of the condenser using a wire brush or high-pressure air gun.
3. Leak check: observe all connectors and welding joints for oil stain, which indicates a need for patching work, which can be done by professionals.
4. Frequently observe the operation of the product. In case of any abnormal noise or smell, cut off the power supply immediately and call professionals. Do not restart the product before source of trouble is found.
5. We will not be responsible for any accidents acquired through failure to follow previous notices.

Troubleshooting


Troubles	Causes	Solutions
Unusual noise under the bottom shelf.	Fan blade broken.	Power off and fix the blade.

Troubleshooting

Non-refrigerating in spite of normal operation.	Unit off.	Power on.
	Melting process.	Stop melting.
	Refrigerant leaking.	Patch the leak and refill refrigerant.
	Unit failure.	Call for professionals.
Weak air from air curtain, and higher cabinet temperature.	Evaporator blocked by frost.	Increase melting frequency.
	Inside fan damaged.	Replace the fan.
	Too low set point of temperature controller.	Adjust the set point.
	Vent blocked by storage.	Remove the storage.
Normal air curtain, but higher cabinet temperature.	Insufficient refrigerant.	Refill the refrigerant.
	Too high set point of temperature controllers.	Adjust the set point for the temperature controller.
	The wind curtain disturbed by strong air flow.	Removing the disturbing factors.
	Ambient temperature or humidity beyond standards.	Improve the conditions.
Melting water overflown.	Heating pipe for melting water damaged.	Replace the heating pipe.
	Water-level controller failure.	Replace the water-level controller.
	Ambient temperature or humidity beyond standards.	Improve the conditions.
Normal air curtain, but periodical fluctuation of cabinet temperature.	Condenser contaminated.	Clean the condenser.
	Poor venting of the unit.	Improve the venting conditions.
	Heat protection of compressor failure.	Replace the heat protection.
	Capillary is blocked by ice.	Replace the drying filter.
	Temperature controller failure.	Replace the temperature controller.


Parts Breakdown

Model RS-CN-0200 31809

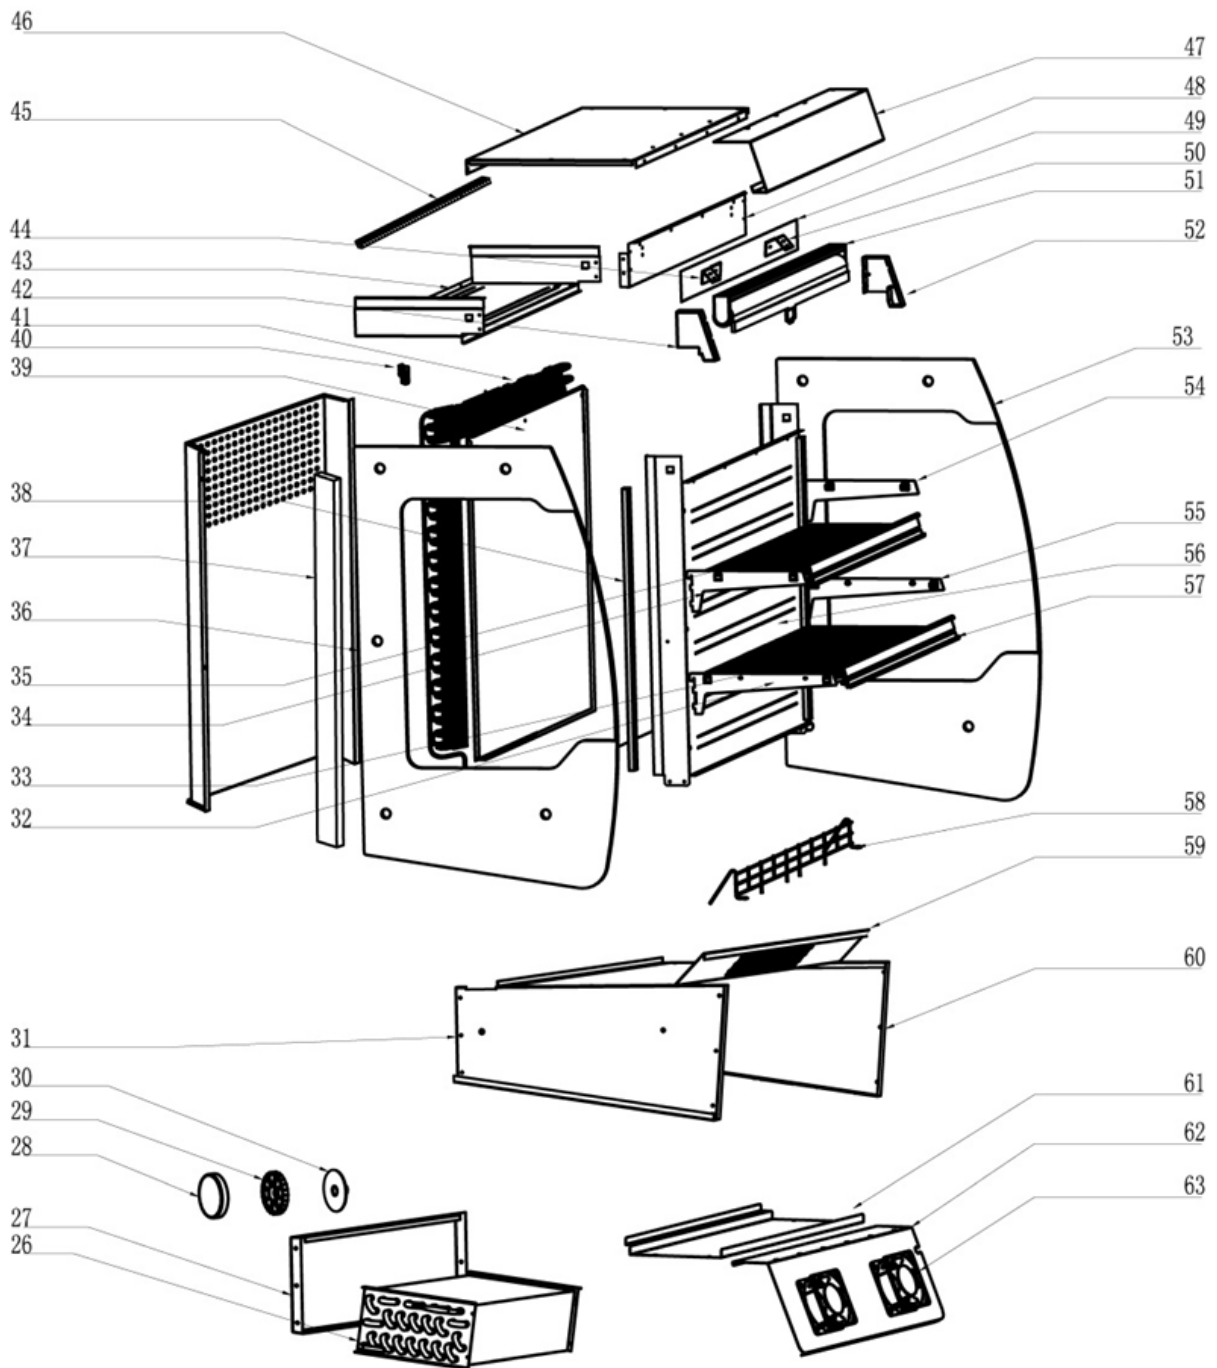

Parts Breakdown

Model RS-CN-0200 31809

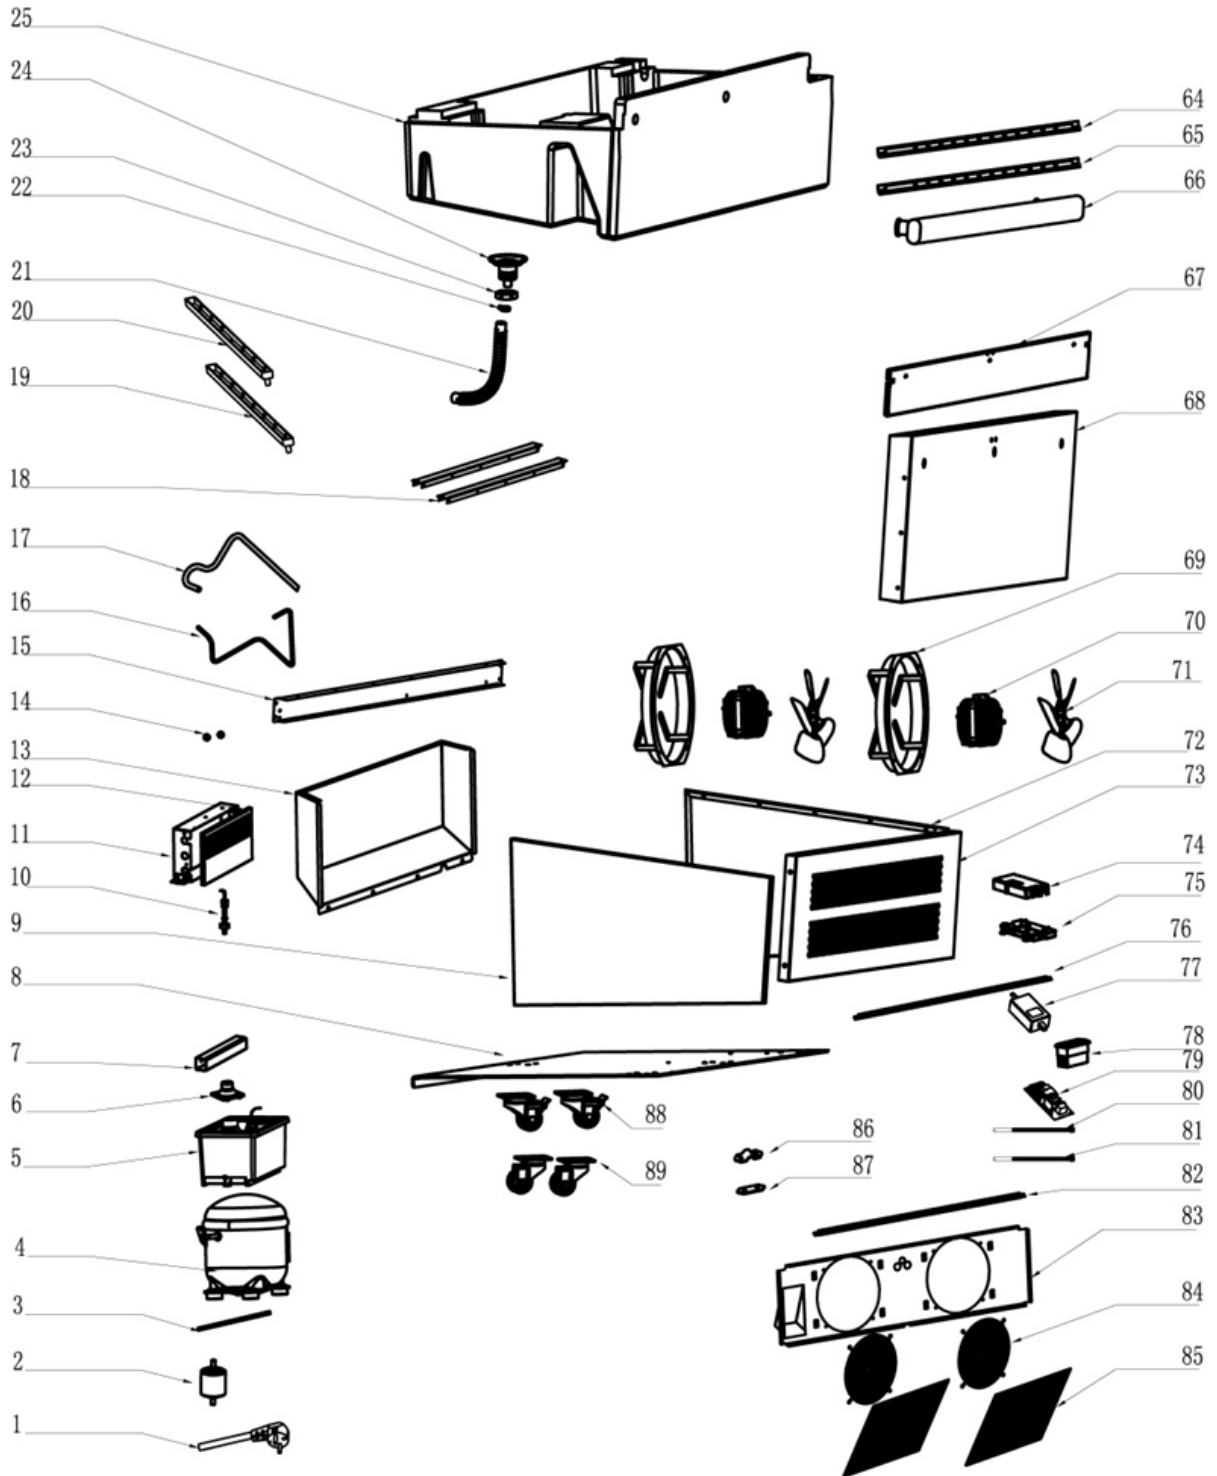



Parts Breakdown

Model RS-CN-0200 31809

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
79290	Power Cord for 31809	1	79314	Decoration Nut Gasket for 31809	30	AP539	Right Top Base Panel for 31809	60
61224	Dry Filter for 31809	2	AP527	Left Top Base Panel for 31809	31	AP540	Top Cover of Evaporator for 31809	61
AP514	Filling Pipe for 31809	3	AP395	Left Support Pillar of Shelf for 31809	32	AP541	Evaporator Bracket for 31809	62
AL305	Compressor for 31809	4	68557	Bottom Shelf for 31809	33	AP542	Evaporator Fan Motor for 31809	63
60587	Water Receiver for 31809	5	AP224	Left Shelf Bracket for 31809	34	AP505	LED Light for 31809	64, 65
79304	Pipe for Evaporated Water for 31809	6	68558	Top Shelf for 31809	35	68592	Handle for 31809	66
60590	PVC Trucking for 31809	7	68559	Left Glass for 31809	36	68594	Handle Stiffener for 31809	67
AP515	Base Board for 31809	8	AP528	Inner PE Cotton for 31809	37	68595	Front Top Base Panel for 31809	68
AP516	Left Bottom Base Panel for 31809	9	68561	Pole for Shelf for 31809	38	60932	Fan Guard for 31809	69
AP517	Water Level Detector for 31809	10	AP529	Rear Body Board for 31809	39	AL374	Evaporator Fan Motor for 31809	70
61244	Terminal Box for 31809	11	61222	Stands for Condenser for 31809	40	60933	Fan Blade for 31809	71
79359	Cover of Junction Box for 31809	12	79325	Condenser for 31809	41	AE342	Arc Right Stiffening Plate for 31809	72
AP518	Base Rear Cover for 31809	13	AP530	Left Bracket of Front Board for 31809	42	AP543	Removable Front Bottom Base Panel for 31809	73
79295	Magnet for 31809	14	AP531	Inside Top Board for 31809	43	60594	Cover of Circuit Board Box for 31809	74
AP519	Beam of Base for 31809	15	AP532	Night Curtain Left Bracket for 31809	44	61167	Circuit Board Box for 31809	75
AP520	Connecting Pipe 1 for 31809	16	68569	Perforated Plate for 31809	45	AP544	Water Pipe Support for 31809	76
AP521	Connection Pipe for 31809	17	AP533	Top Cover for 31809	46	60595	LED Transformer for 31809	77
AP522	Support Bar for 31809	18	68571	Front Board of Top Cover for 31809	47	67648	Temperature Display for 31809	78
68545	Water Chute of Left Glass for 31809	19	AP534	Front Board of Curtain for 31809	48	AF546	Main Circuit Board for 31809	79
68546	Water Chute of Right Glass for 31809	20	68573	Insulating Foam for 31809	49	60666	Temperature Probe for 31809	80
AP523	Water Pipe for 31809	21	AP535	Curtain for 31809	51	AD481	Overheating Probe for 31809	81
AP524	Pipe Clip for 31809	22	AP536	Left Bracket of Front Board for 31809	52	AP545	Condenser Motor Support Reinforced Plate for 31809	82
71518	Nut for 31809	23	68577	Right Glass for 31809	53	AE330	Brace Connecting Pin for 31809	83
71519	Pipe Joint for 31809	24	AO880	Right Support Pillar of Shelf for 31809	54	AD519	Flat Net Cover for 31809	84
AP525	Evaporator Holder for 31809	25	AP226	Right Shelf Bracket for 31809	55	AP546	Filter Screen for 31809	85
AP526	Evaporator for 31809	26	AP537	Ventilated Board for 31809	56	66095	Wire Clip Cover for 31809	86
68555	Decorative Cover of Screw Nut for 31809	27	68581	Label Board for 31809	57	61246	Wire Clip Holder for 31809	87
79312	Nut Decoration for 31809	28	AP538	Wire Protector for 31809	58	AI054	Caster for 31809	88
79313	Nut Gasket for 31809	29	68582	Top Cover of Base for 31809	59	AL357	Castor for 31809	89

Electrical Schematics

Model RS-CN-0200 31809

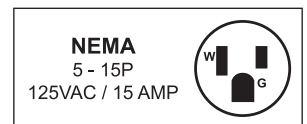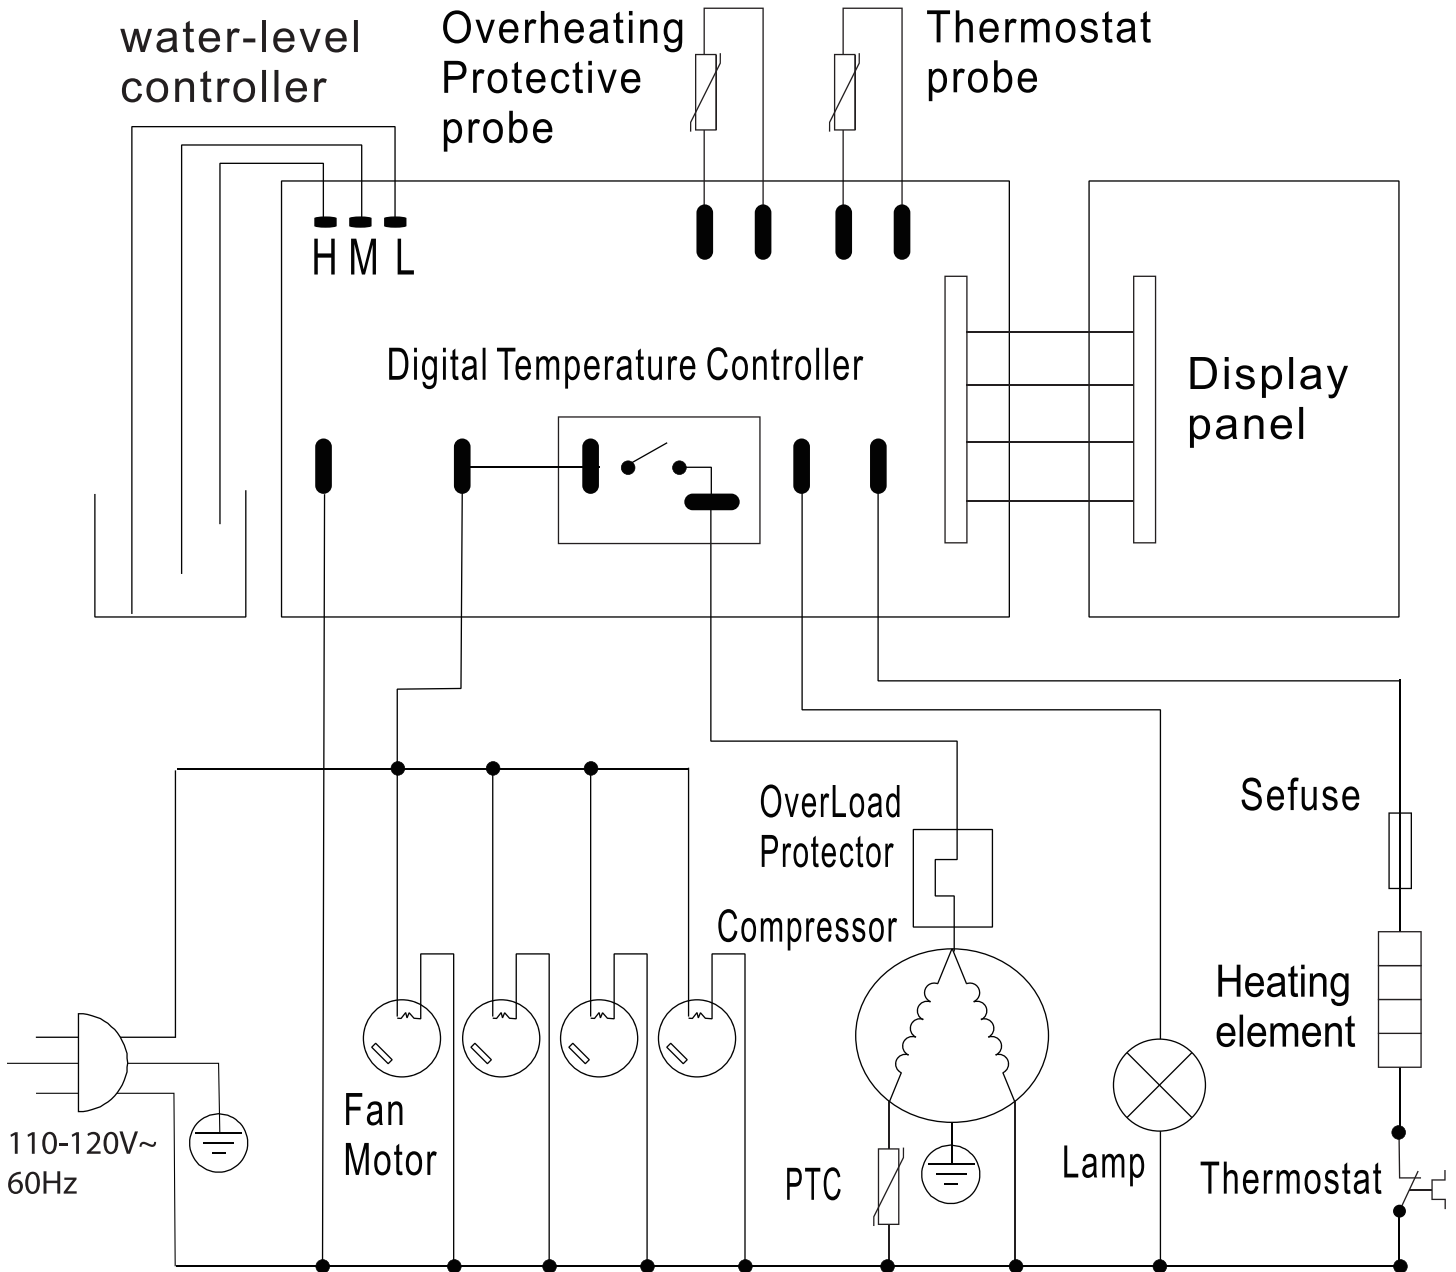



Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

<https://omcan.com/warranty-registration/>

For mailing in Canada

Pour postale au Canada

Por correo en Canadá

OMCAN

PRODUCT WARRANTY REGISTRATION

3115 Pepper Mill Court,
Mississauga, Ontario
Canada, L5L 4X5

For mailing in the US

Pour diffusion aux États-Unis

Por correo en los EE.UU.

OMCAN

PRODUCT WARRANTY REGISTRATION

4450 Witmer Industrial Estates, Unit 4,
Niagara Falls, New York
USA, 14305

or email to: service@omcan.com



Purchaser's Information

Name: _____

Address: _____

City: _____ Province or State: _____ Postal or Zip: _____

Country: _____

Dealer from which Purchased: _____

Dealer City: _____ Dealer Province or State: _____

Invoice: _____

Model Name: _____ Model Number: _____

Machine Description: _____

Date of Purchase (MM/DD/YYYY): _____

Would you like to extend the warranty? Yes No

Company Name: _____

Telephone: _____

Email Address: _____

Type of Company:

Restaurant Bakery Deli

Butcher Supermarket Caterer

Institution (*specify*): _____

Other (*specify*): _____

Serial Number: _____

Date of Installation (MM/DD/YYYY): _____

Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 6,500 globally sourced products.

Depuis 1951 Omcan a grandi pour devenir un des “leaders” de la distribution des équipements et matériel pour l’industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd’hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l’entreprise. Nous nous efforçons d’offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 6500 produits provenant du monde entier.

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 6,500 productos con origen a nivel mundial.

